

HP ProLiant ML530 Generation 2 Server Maintenance and Service Guide



July 2003 (Fourth Edition)
Part Number 281405-004

© 2003, 2003 Hewlett-Packard Development Company, L.P.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

Intel®, Pentium®, and Itanium™ are trademarks or registered trademarks of Intel Corporation in the U.S. and other countries and are used under license.

Hewlett-Packard Company shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided “as is” without warranty of any kind and is subject to change without notice. The warranties for HP products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.

HP ProLiant ML530 Generation 2 Server Maintenance and Service Guide

July 2003 (Fourth Edition)
Part Number 281405-004

Contents

About This Guide

Audience Assumptions	vii
Technician Notes	vii
Where to Go for Additional Help	ix
Integrated Management Log	ix
Telephone Numbers	ix

Chapter 1

Illustrated Parts Catalog

Chassis Components Exploded View	1-2
Chassis Components Spare Parts List	1-3
System Components Exploded View	1-4
System Components Spare Parts List	1-5
System Tray Components Exploded View	1-6
System Tray Components Spare Parts List	1-7

Chapter 2

Removal and Replacement Procedures

Safety Considerations	2-1
Electrostatic Discharge	2-1
Symbols on Equipment	2-2
Accessing Server Components	2-4
Extending the Server from the Rack	2-5
Opening the Hot-Plug Door	2-6
Removing the Front Bezel Door (Tower Model Only)	2-7
Removing the Rack Bezel (Rack Model Only)	2-8
Removing the Access Panel	2-9
Opening the System Tray	2-10
Hot-Plug Procedures	2-10
Hot-Plug Power Supplies	2-11
Hot-Plug CPU and I/O Fans	2-12
Hot-Plug Drive Fans	2-14
Hot-Plug SCSI Hard Drives	2-15
PCI and PCI-X Hot Plug Expansion Boards	2-17
Preparing the Server for Non-Hot-Plug Procedures	2-22
Powering Down the Server	2-22
Extending the Server from the Rack	2-23
Removing the Server from the Rack	2-24

Non-Hot-Plug Procedures	2-26
System Battery	2-27
Processor Air Baffle	2-29
Processor Power Module	2-30
Processors	2-32
Memory	2-34
Expansion Boards	2-45
Hot-Plug Expansion Board Basket	2-46
PCI Backplane	2-47
System Tray	2-50
Power Backplane	2-52
Fan Basket	2-53
Fan Basket Adapter with Cable	2-54
Drive Air Baffle	2-56
CD-ROM Drive	2-57
Diskette Drive	2-58
Removable Media Devices	2-59
Internal Two-Bay Hot-Plug SCSI Drive Cage Fans (Optional)	2-60
Drive Cage Backplane	2-61
Drive Fan Cable and Cable Bracket	2-63
Front Panel LED Assembly	2-64
Miscellaneous Mechanical Parts	2-66
Locking Casters	2-66
Power Supply Blank	2-67
Hard Drive Blank	2-68
Removable Media Blank	2-69
Cable Routing Diagrams	2-70
System Board Power Cables	2-70
Drive Fan Power Cables	2-70
Diskette and CD-ROM Drive Cables	2-71
SCSI Backplane Power Cables	2-71
SCSI Cables	2-72
Re-entering the Server Serial Number	2-74

Chapter 3

Diagnostic Tools

Chapter 4

Connectors, LEDs, and Switches

Connectors	4-1
System Board	4-2
Memory Board	4-3
Rear Panel	4-4
System LEDs	4-5
Front Panel LEDs	4-6
System Board LEDs	4-7
Memory Board LEDs and Icons	4-8
PCI-X Hot Plug LEDs	4-11
Expansion Slot Speed LEDs	4-13

Hot-Plug Power Supply LEDs	4-14
Hot-Plug Fan LEDs	4-15
Embedded NIC Connector LEDs.....	4-16
Rear UID LED and Button	4-17
Hot-Plug Hard Drive LEDs	4-18
System LEDs and Internal Health LED Status Combinations.....	4-20
System Board Switches	4-21
System Maintenance Switch	4-21
Non-Maskable Interrupt Switch.....	4-23
System Configuration Settings	4-23

Chapter 5

Troubleshooting

When the Server Does Not Start	5-2
Diagnostic Steps	5-4
Problems After Initial Boot	5-9
ROMPaq Disaster Recovery.....	5-11
Other Information Resources	5-12

Chapter 6

Specifications

Index

About This Guide

This maintenance and service guide is a troubleshooting guide that can be used for reference when servicing HP ProLiant ML530 Generation 2 servers.



WARNING: To reduce the risk of personal injury from electric shock and hazardous energy levels, only authorized service technicians should attempt to repair this equipment. Improper repairs can create conditions that are hazardous.

Audience Assumptions

This guide is for service technicians. HP assumes you are qualified in the servicing of computer equipment and trained in recognizing hazard in products with hazardous energy levels and are familiar with weight and stability precautions for rack installations.

Technician Notes



WARNING: Only authorized technicians trained by HP should attempt to repair this equipment. All troubleshooting and repair procedures are detailed to allow only subassembly/module-level repair. Because of the complexity of the individual boards and subassemblies, no one should attempt to make repairs at the component level or to make modifications to any printed wiring board. Improper repairs can create a safety hazard.



WARNING: To reduce the risk of personal injury from electric shock and hazardous energy levels, do not exceed the level of repairs specified in these procedures. Because of the complexity of the individual boards and subassemblies, do not attempt to make repairs at the component level or to make modifications to any printed wiring board. Improper repairs can create conditions that are hazardous.



WARNING: To reduce the risk of electric shock or damage to the equipment:

- Disconnect power from the system by unplugging all power cords from the power supplies.
 - Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
 - Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
-



CAUTION: To properly ventilate the system, you must provide at least 7.6 cm (3.0 in.) of clearance at the front and back of the server.



CAUTION: The computer is designed to be electrically grounded (earthed). To ensure proper operation, plug the AC power cord into a properly grounded AC outlet only.

NOTE: Any indications of component replacement or printed wiring board modifications may void any warranty.

Where to Go for Additional Help

In addition to this guide, the following information sources are available:

- User documentation
- *Service Quick Reference Guide*
- Service training guides
- Service advisories and bulletins
- QuickFind information services
- Insight Manager software

Integrated Management Log

The server includes an integrated, nonvolatile management log that contains fault and management information. The contents of the Integrated Management Log (IML) can be viewed with Insight Manager.

Telephone Numbers

For the name of your nearest HP authorized reseller:

- In the United States, call 1-800-345-1518.
- In Canada, call 1-800-263-5868.

For HP technical support:

- In the United States and Canada, call 1-800-652-6672.
- Outside the United States and Canada, refer to www.hp.com.

Illustrated Parts Catalog

This chapter provides the illustrated parts breakdown and spare parts lists for the HP ProLiant ML530 Generation 2 server. Refer to Table 1-1, Table 1-2, and Table 1-3 for the names of referenced spare parts.

Chassis Components Exploded View

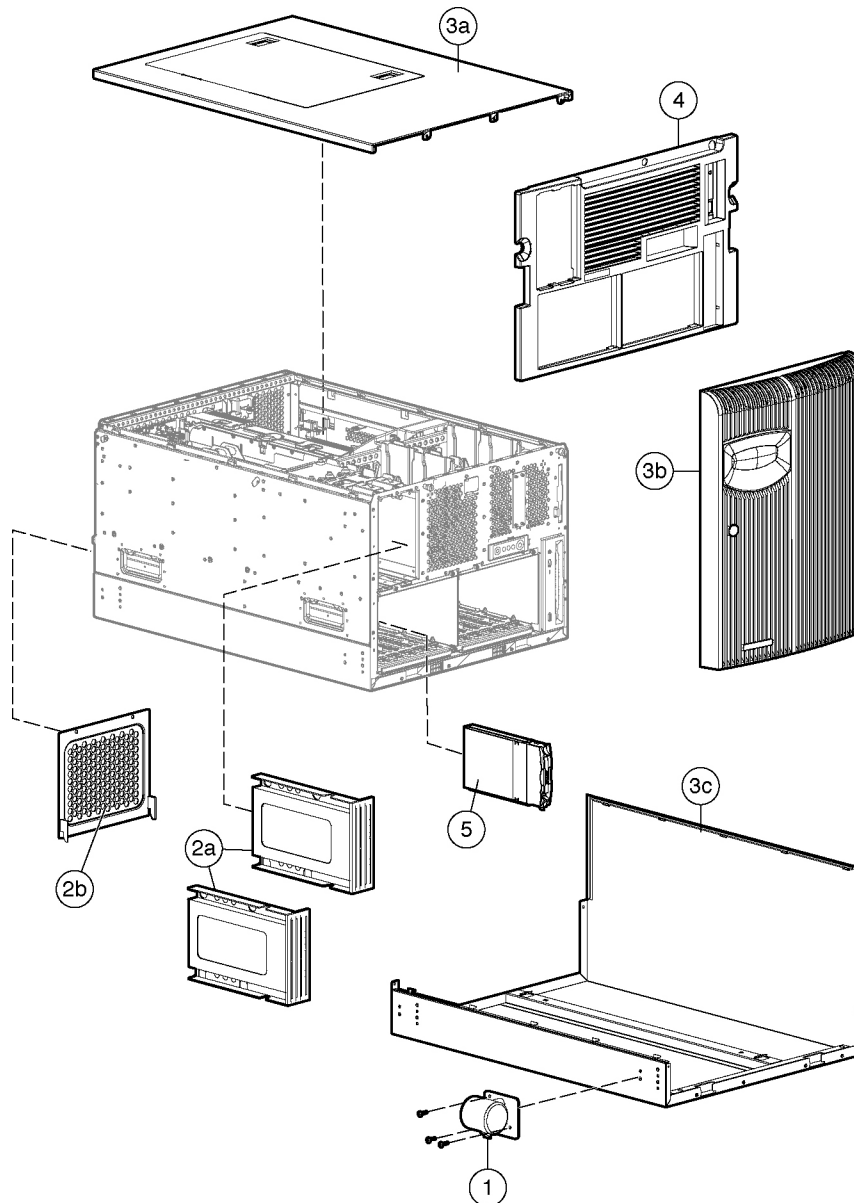


Figure 1-1: Exploded view of the server chassis components

Chassis Components Spare Parts List

Table 1-1: Chassis Components Spare Parts List

Item	Description	Spare Part Number
1	Locking casters	296227-001
2	Blanks kit	253071-001
	a) Removable media bay blank	
	b) Power supply blank	
3	Tower cover kit	249145-001
	a) Access panel	
	b) Front bezel door	
	c) Tower cover	
	d) Hood labels*	
4	Rack bezel kit	249150-001
	Rack bezel	
	Server extension handles*	
5	Hard drive blank	122759-001
*Not shown		

System Components Exploded View

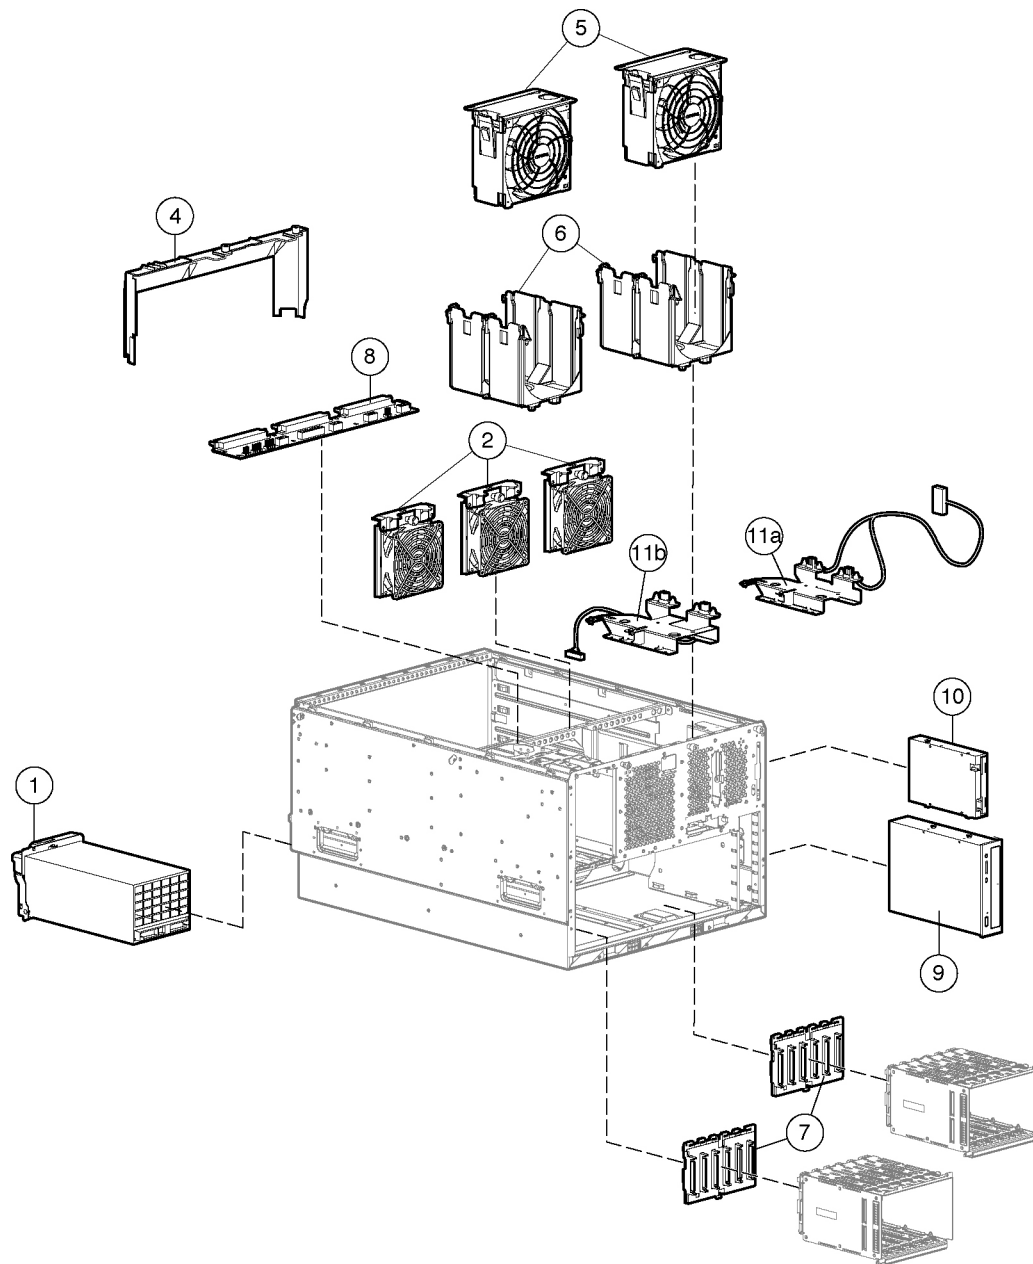


Figure 1-2: Exploded view of the server system components

System Components Spare Parts List

Table 1-2: System Components Spare Parts List

Item	Description	Spare Part Number
1	Power supply, hot-plug, 600 W	231782-001
2	Redundant drive fans, hot-plug, 92 mm	161657-001
3	Drive fan power cable bracket*	249147-001
4	Drive air baffle	178195-001
5	CPU and I/O fans, hot-plug 5 inch	122225-001
6	Fan basket	161658-001
Backplanes		
7	SCSI backplane	263035-001
8	Power backplane	233962-001
Mass Storage Devices		
9	CD-ROM drive	233408-001
10	Diskette drive	233409-001
11	Fan bracket kit	159321-001
	a) CPU fan basket adapter	158462-002
	b) I/O fan basket adapter	158462-001
*Not shown		

System Tray Components Exploded View

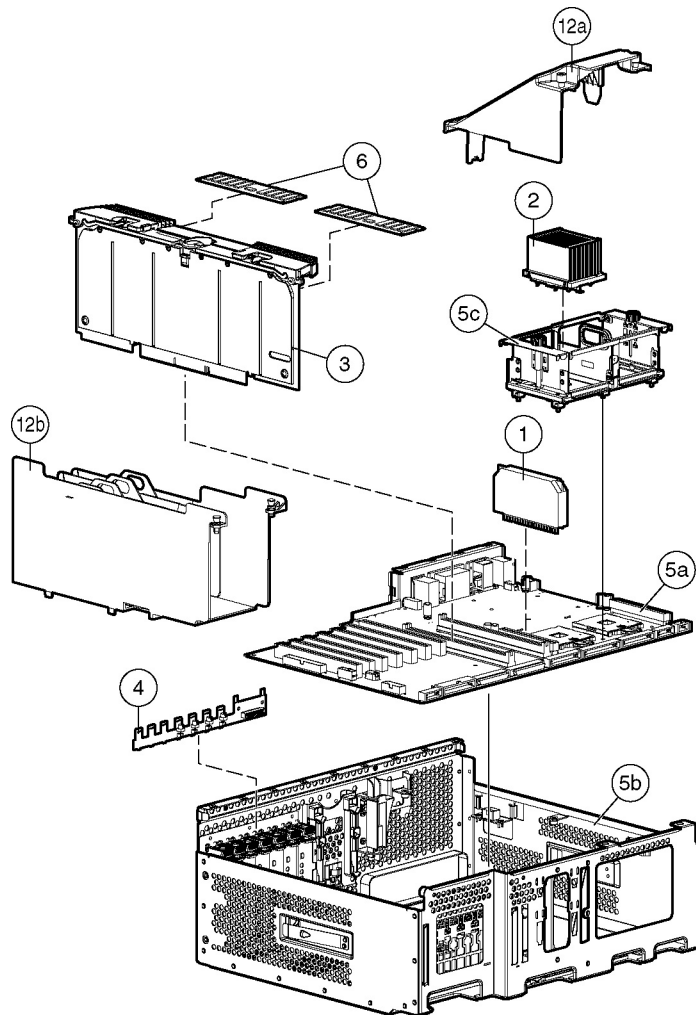


Figure 1-3: Exploded view of the server system tray components

System Tray Components Spare Parts List

Table 1-3: System Tray Components Spare Parts List

Item	Description	Spare Part Number
System Components		
1	Processor power module (PPM)	231783-001
2	Processor with Heatsink	
	Intel® Xeon 2.4-GHz processor/heatsink assembly	249144-001
	Intel Xeon 2.8-GHz processor/heatsink assembly*	307547-001
Boards		
3	Memory board	233960-001
4	PCI backplane	233961-001
5	System board kit	233959-001
	a) System board	
	b) System tray	
	c) Processor retaining bracket	
Memory (DIMMs)		
6	256-MB PC1600, DDR, ECC, SDRAM DIMM	249674-001
7	512-MB PC1600, DDR, ECC, SDRAM DIMM*	249675-001
8	1-GB PC1600, DDR, ECC, SDRAM DIMM*	249676-001
9	2-GB PC1600, DDR, ECC, SDRAM DIMM*	265791-001
10	Latch kit*	249746-001
	a) Expansion slot latch and base, blue	
	b) Expansion slot latch and base, carbon	
	c) PCI retaining clip, blue	
	d) PCI retaining clip, carbon	
	e) Memory board guide	
	f) Front bezel retainer	
11	Power Cable Kit*	159319-001
	a) Drive fan cable	158465-001
	b) CD-ROM/diskette drive cable	158469-001
	c) SCSI drive cable	158470-001
	d) LVD cable	158471-001
*Not shown		

continued

Table 1-3: System Tray Components Spare Parts List *continued*

Item	Description	Spare Part Number
12	PCI-X Hot-plug basket and processor baffle	307383-001
	a) Processor air baffle	
	b) Hot-plug expansion board basket	
13	Signal Cable Kit*	180305-001
	a) CD-ROM data cable	158473-002
	b) 34-Pin data cable	158472-002
	c) Diskette drive data cables	158474-001
	d) SCSI data cable, 2 drop	157855-001
14	ML530 Cable Kit*	249146-001
	a) SCSI data cable, blue	166298-024
	b) SCSI data cable, yellow	166298-025
	c) Internal-to-external SCSI cable, 12 inch	232112-001
	d) PCI to system board data cable	232111-001
	e) Power backplane cable	232109-001
	f) Front panel LED assembly with cable	225034-002
	g) Backplane to system board cable	232110-001
	Miscellaneous	
15	3-V lithium replacement battery*	175115-001
16	Enhanced keyboard, US*	244000-001
17	Two-button mouse*	113907-001
18	Torx T-15 tool*	199630-001
19	Rack-mounting hardware kit*	277921-001
20	Third-party rack-mounting hardware kit*	277922-001
21	Country kit, rack and tower*	249148-001
22	Return kit, rack (shipping box)*	174795-001
23	Return kit, tower (shipping box)*	265792-001
24	Maintenance and service guide*	265793-001
	Options	
25	18.2-GB hot-plug Wide-Ultra3 SCSI hard drive with tray (10,000 rpm, 1 inch)*	152190-001
26	36.4-GB hot-plug Wide-Ultra3 hard drive (15,000 rpm, 1 inch)*	233350-001
27	18.2-GB hot-plug Wide-Ultra3 hard drive (15,000 rpm, 1 inch)*	189395-001
28	36.4-GB hot-plug Wide-Ultra3 hard drive (10,000 rpm, 1 inch)*	177986-001
29	72.8-GB hot-plug Wide-Ultra3 hard drive (10,000 rpm, 1 inch)*	233349-001
30	DVD drive*	217801-001

*Not shown

continued

Table 1-3: System Tray Components Spare Parts List *continued*

Item	Description	Spare Part Number
31	Backplane, internal two-bay hot-plug SCSI drive cage*	253761-001
32	Fan kit, internal two-bay hot-plug SCSI drive cage*	253762-001
*Not shown		

Removal and Replacement Procedures

This chapter provides subassembly/module-level removal and replacement procedures for ProLiant ML530 Generation 2 servers. After completing all necessary removal and replacement procedures, run the Diagnostics program to be sure that all components operate properly.

You need the following items for some procedures:

- Torx T-15 tool
- Torx T-10 tool
- Diagnostics Utility from the HP SmartStart for Servers CD

Safety Considerations

Before performing service procedures, review the following safety information.

Electrostatic Discharge

A discharge of static electricity can damage static-sensitive devices or microcircuitry. Proper packaging and grounding techniques are necessary precautions to prevent damage. To prevent electrostatic damage:

- Transport products in static-safe containers such as conductive tubes, bags, or boxes.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Cover workstations with approved static-dissipating material. Use a wrist strap connected to the work surface and properly grounded (earthed) tools and equipment.
- Keep work area free of nonconductive materials such as ordinary plastic assembly aids and foam packing.
- Be sure that you are properly grounded (earthed) when touching a static-sensitive component or assembly.
- Avoid touching pins, leads, or circuitry.
- Use nonconductive field service tools.

Symbols on Equipment

These symbols may be located on equipment in areas where hazardous conditions may exist.



66 kg
146 lb

Any product or assembly marked with these symbols indicates that the component exceeds the recommended weight for one individual to handle safely.

WARNING: To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.



Any surface or area of the equipment marked with these symbols indicates the presence of a hot surface or a hot component.

WARNING: To reduce the risk of injury from a hot component, allow the surface to cool before touching it.



Any surface or area of the equipment marked with these symbols indicates the presence of electrical shock hazards. The enclosed area contains no operator serviceable parts.

WARNING: To reduce the risk of injury from electrical shock hazards, do not open this enclosure.



Any RJ-45 receptacle marked with these symbols indicates a network interface connection.

WARNING: To reduce the risk of electrical shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.

Rack Warnings and Cautions



WARNING: To reduce the risk of personal injury or damage to the equipment, adequately stabilize the rack before extending a component outside the rack. Extend only one component at a time. A rack may become unstable if more than one component is extended.



WARNING: To reduce the risk of personal injury or damage to the equipment:

- Extend the leveling jacks to the floor.
- Rest the full weight of the rack on the leveling jacks.
- Attach the stabilizers to the rack if it is a single rack installation.
- Couple the racks together in multiple rack installations.



WARNING: When installing the server in a telco rack, adequately secure the rack frame to the building structure at the top and bottom.



WARNING: To reduce the risk of personal injury or damage to the equipment, use two or more people to safely unload the rack from the pallet. An empty 42U rack weighs 115 kg (253 lb), is over 2.1 m (7 ft) tall, and may become unstable when moved on its casters. Handle the rack from both sides as it rolls down the ramp from the pallet. Do not stand in front of the rack.



CAUTION: Always begin by mounting the heaviest item on the bottom of the rack. Continue to populate the rack from the bottom to the top.

Server Warnings and Cautions



WARNING: Do not exceed the level of repair specified in the procedures in the product documentation. All troubleshooting and repair procedures are detailed to allow only subassembly or module-level repair. Because of the complexity of the individual boards and subassemblies, do not attempt to make repairs at the component level or to make modifications to any printed wiring board. Improper repairs can create a safety hazard.



WARNING: To reduce the risk of personal injury from hot surfaces, allow the hot-plug drives and the internal system components to cool before touching.



WARNING: To reduce the risk of electrical shock or damage to the equipment:

- Do not disable the AC power cord grounding plug. The grounding plug is an important safety feature.
- Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
- Unplug the power cord from each power supply to disconnect power to the equipment.



WARNING: Before lifting the server remove all hot-plug power supplies and hard drives to reduce weight.



WARNING: The installation of internal options and routine maintenance and service of this product should be performed by individuals who are knowledgeable about the procedures, precautions, and hazards associated with equipment containing hazardous energy levels.



WARNING: Do not use conductive tools that could bridge live parts. Remove all watches, rings, or loose jewelry when working in hot-plug areas of an energized server.



WARNING: Do not replace non-hot-plug components while power is applied to the product. First, shut down the product and disconnect all AC power cords.



WARNING: Be sure that the AC power supply branch circuit that provides power to the rack is not overloaded. Maintaining a low electric current draw reduces the risk of personal injury, fire, or damage to the equipment. The total rack load should not exceed 80 percent of the branch circuit rating. Consult the electrical authority having jurisdiction over your facility for wiring and installation requirements.



CAUTION: Protect the server from power fluctuations and temporary interruptions with a regulating uninterruptible power supply (UPS). This device protects the hardware from damage caused by power surges and voltage spikes and keeps the system in operation during a power failure.



CAUTION: Do not operate the server for extended periods without the access panel. Operating the server without the access panel results in improper airflow and improper cooling that can lead to thermal damage.



CAUTION: Reinstall each hard drive into the specific slot from which it was removed. Mixing the hard drives adversely affects your system drive configuration.

Accessing Server Components

In order to access components in your ProLiant ML530 Generation 2 server, you may be required to perform any or all of the following procedures:

- Extending the server from the rack
- Opening the hot-plug door
- Removing the front bezel door (tower model only)
- Removing the rack bezel (rack model only)
- Removing the access panel
- Opening the system tray

All of these procedures can be performed without powering down the server or causing system shutdown.

Extending the Server from the Rack

To extend the server from the rack:

1. Loosen the front panel thumbscrews that secure the server to the front of the rack (1).



WARNING: To reduce the risk of personal injury, be careful when pressing the server rail-release latches and sliding the component into or out of the rack. The sliding rails could pinch your fingertips.

2. Extend the server until the server rail-release latches engage (2).

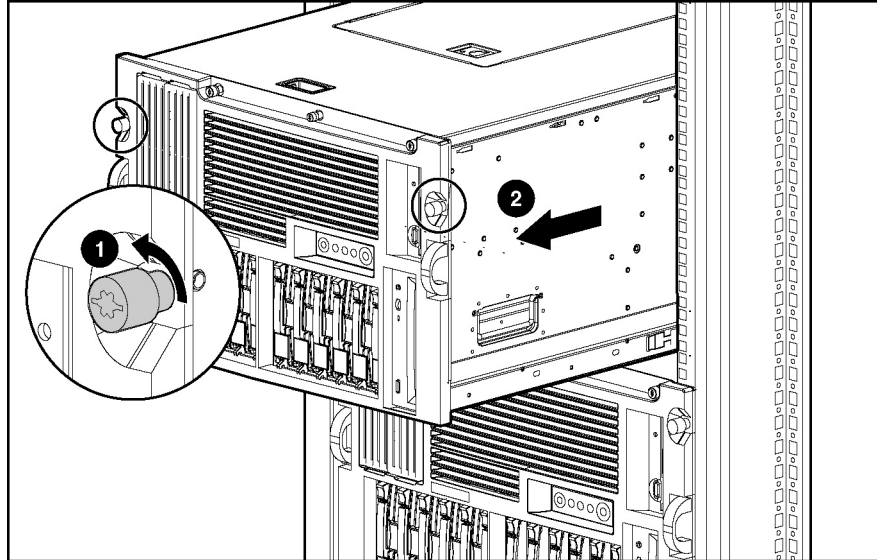


Figure 2-1: Extending the server from the rack

To slide the server back into the rack after performing the maintenance procedure:

1. Press the server rail-release latches.
2. Slide the server fully into the rack.
3. Secure the server by tightening the thumbscrews.

Opening the Hot-Plug Door

To open the hot-plug door:

1. Extend the server from the rack. Refer to the “Extending the Server from the Rack” section in this chapter.
2. Unlock both locks on the hot plug door (1).

IMPORTANT: The key to the hot-plug door ships attached to the front bezel door on tower model servers, and attached to the system tray handle on rack model servers.

3. Slide the hot-plug door latches open (2).
4. Open the hot-plug door (3).

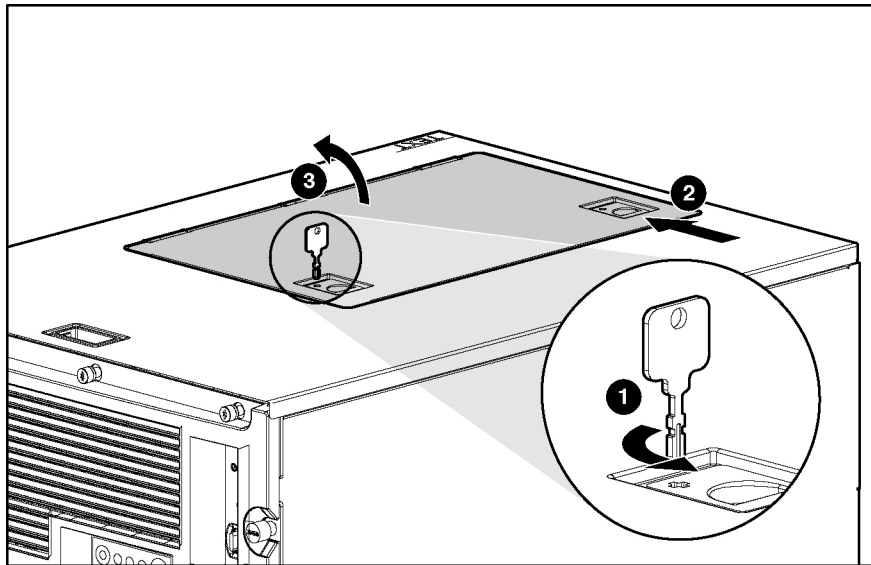


Figure 2-2: Opening the hot-plug door

Reverse steps 1 through 4 to close the hot-plug door.

Removing the Front Bezel Door (Tower Model Only)



WARNING: To reduce the risk of personal injury from hot surfaces, allow the internal system components to cool before handling the components.

To remove the front bezel door:

1. Unlock the front bezel door.

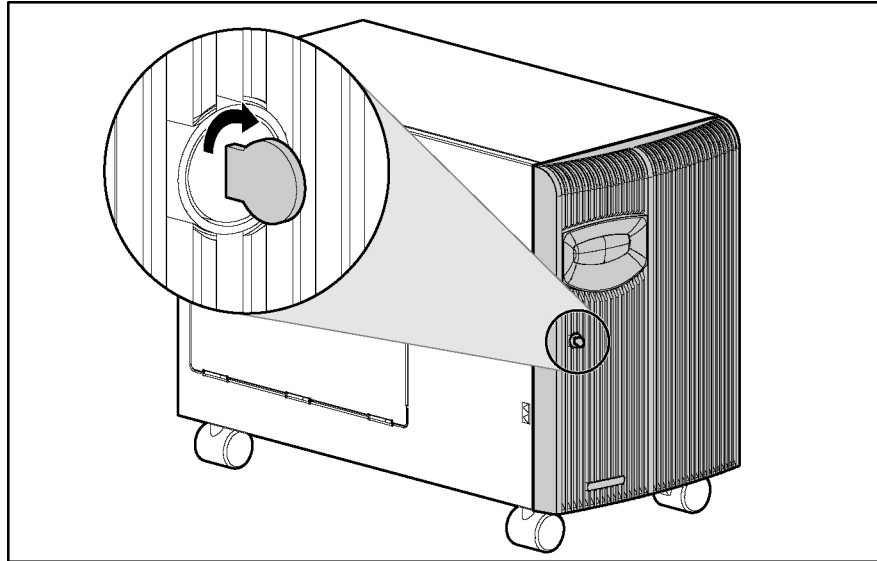


Figure 2-3: Unlocking the front bezel door

2. Swing open the front bezel door fully.
3. Lift the front bezel door.
4. Pull the door away from the chassis hinges.

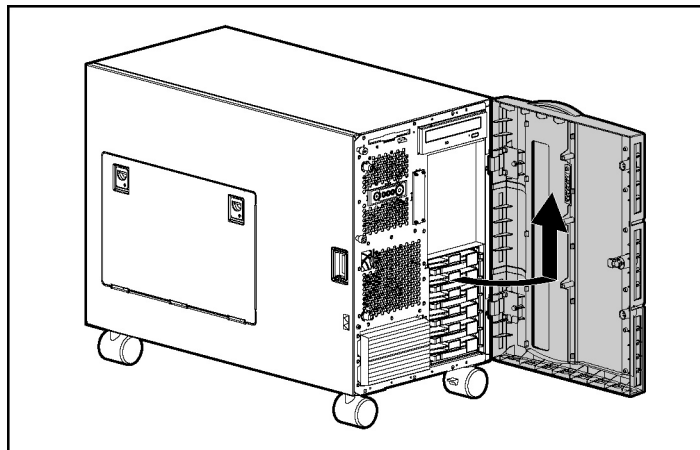


Figure 2-4: Removing the front bezel door (tower model only)

Reverse steps 1 through 4 to replace the front bezel door.

Removing the Rack Bezel (Rack Model Only)

To remove the rack bezel:

1. Remove the four Torx T-15 screws securing the rack bezel to the chassis (1).
2. Pull the rack bezel away from the chassis (2).

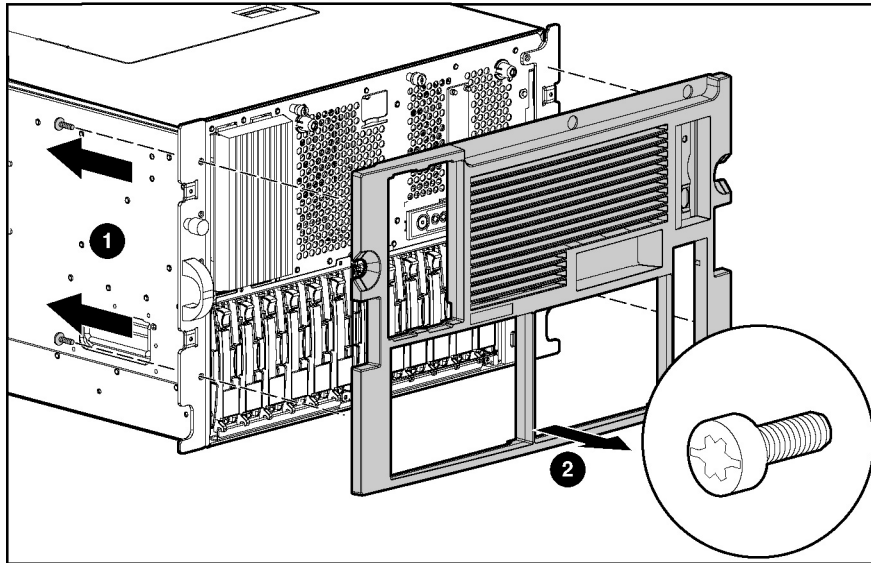


Figure 2-5: Removing the rack bezel (rack model only)

Reverse steps 1 and 2 to replace the rack bezel.

Removing the Access Panel

NOTE: For ease of service, lock the casters and lay the tower model server on its side with the access panel up.

To remove the access panel:

1. Open the front bezel door (tower model only) and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
2. Extend the server from the rack (rack model only). Refer to the “Extending the Server from the Rack” section in this chapter.
3. Loosen the thumbscrews on the front of the chassis (1).
4. Use the Torx T-15 tool that ships with the server to loosen the retaining screw located on the front of the chassis next to the two thumbscrews (2).
5. Slide the access panel toward the back of the server, and lift it away from the chassis (3).

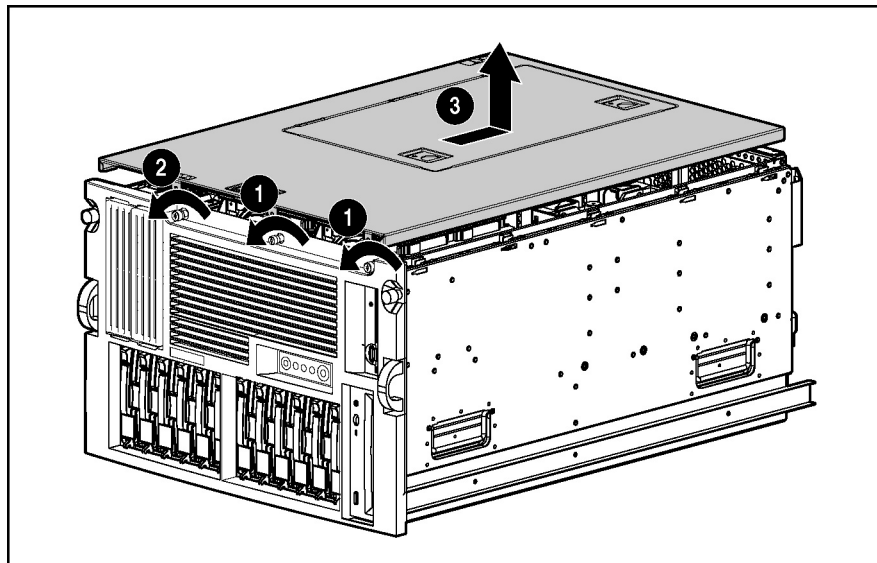


Figure 2-6: Removing the access panel

Reverse steps 1 through 5 to replace the access panel.

Opening the System Tray

To open the system tray:

1. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
2. Press the latch adjacent to the system tray release handle to release the system tray (1).
3. Grasp the system tray release handle and pull the tray from the chassis until it stops in the extended position (2).

NOTE: If the server is mounted into a rack, you can reach the system tray latches more easily by extending the server from the rack (approximately the depth of the drives) before sliding the system tray from the back of the chassis.

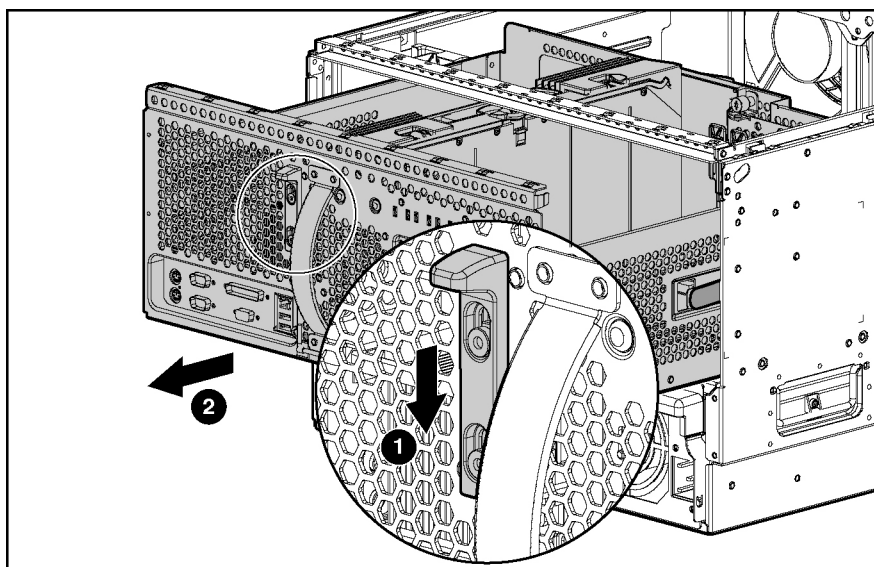


Figure 2-7: Opening the system tray

Hot-Plug Procedures

You can perform removal/replacement procedures for some server components without powering down the server. The following removal/replacement procedures are hot-plug capable:

- Hot-plug power supplies
- Hot-plug fans (CPU and I/O)
- Hot-plug fans (drive)
- Hot-plug SCSI hard drives
- PCI and PCI-X Hot Plug expansion boards (in hot-plug slots)

Hot-Plug Power Supplies



CAUTION: Do not hot-remove a power supply without a redundant power supply in place.



CAUTION: Hot-plug power supplies for the ProLiant ML530 Generation 2 server are keyed to be sure that only 600-W hot-plug power supplies can be installed in the server. The handles on 600-W power supplies are black to distinguish them from other power supplies.

To remove a hot-plug power supply:

1. Release the AC power cord from the tie wrap on the power supply.
2. Unplug the AC power cord from the power supply.
3. Remove the retaining screw.

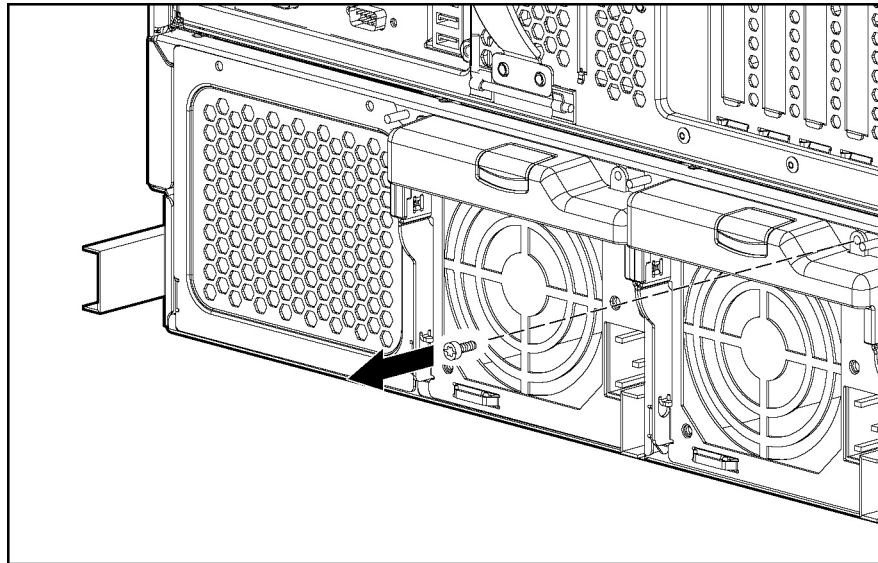


Figure 2-8: Removing the retaining screw

4. Press the latch in the middle of the power supply handle to release the handle (1).
5. Pull the handle downward until the unit releases from the server (2).
6. Slide the hot-plug power supply from the chassis (3).

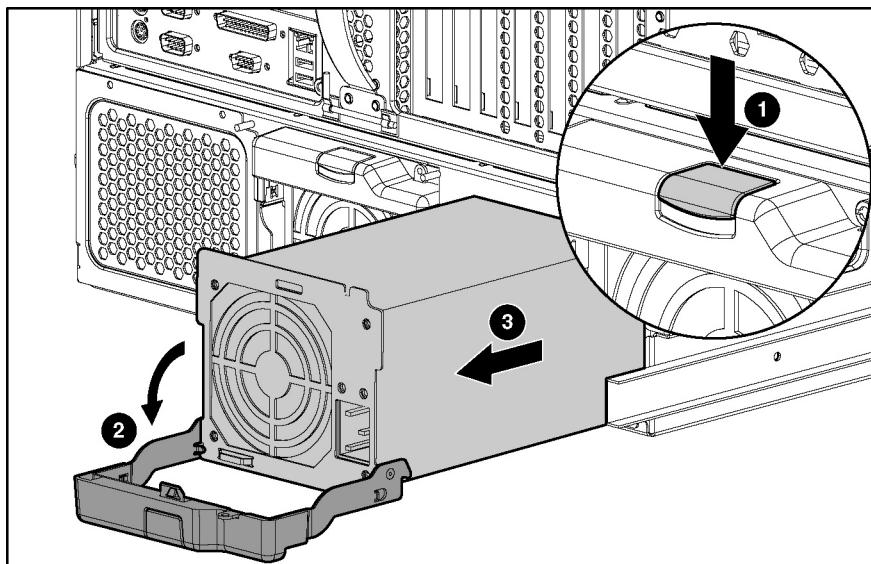


Figure 2-9: Removing a hot-plug power supply



CAUTION: A power supply or power supply blank must always be installed in each power supply bay for proper system cooling. If a power supply bay is left open, thermal damage may occur.

Reverse steps 1 through 6 to replace a hot-plug power supply.

For information on power supply diagnosis, refer to the “Hot-Plug Power Supply LEDs” section in Chapter 4, “Connectors, LEDs, and Switches.”

Hot-Plug CPU and I/O Fans

The HP ProLiant ML530 Generation 2 server hot-plug fans are housed in two fan baskets. Each basket holds a primary and a redundant hot-plug fan. The I/O fans cool the system board components, and the CPU fans cool the processors.



CAUTION: Never remove both hot-plug fans from either fan basket while the server is powered up. Overheating and damage to hardware could result. If the appropriate HP software drivers are installed, the operating system software initiates a power shutdown in case of overheating.

To remove a hot-plug CPU or I/O fan:

1. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
2. Extend the server from the rack (rack model only). Refer to the “Extending the Server from the Rack” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Press and hold the locking latch (1).
5. Lift the hot-plug CPU or I/O fan out of the fan basket (2).

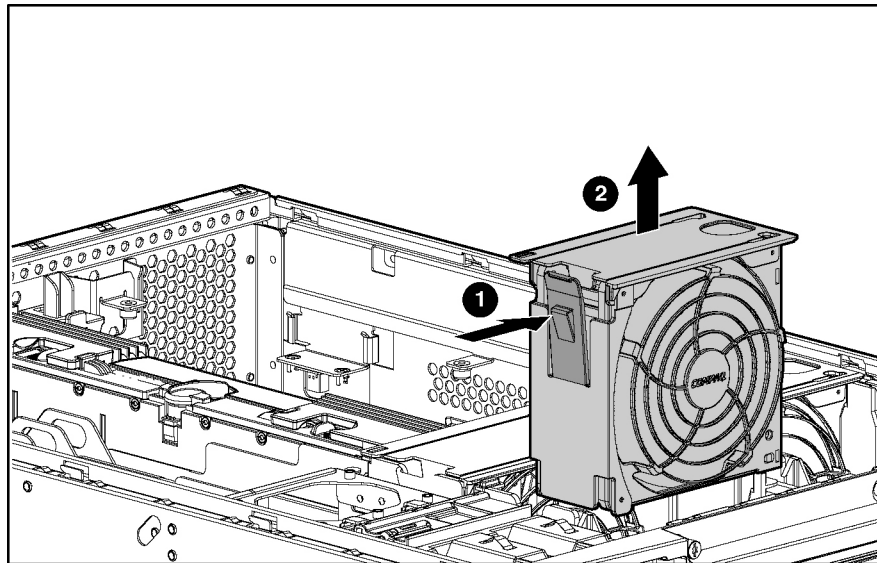


Figure 2-10: Removing a hot-plug CPU or I/O fan

Reverse steps 1 through 5 to replace a hot-plug CPU fan or hot-plug I/O fan.

For information on hot-plug fan diagnosis, refer to the “Hot-Plug Fan LEDs” section in Chapter 4, “Connectors, LEDs, and Switches.”

Hot-Plug Drive Fans

The ProLiant ML530 Generation 2 server ships standard with three hot-plug drive fans. Two fans are required for operation, and the third fan is redundant.

To remove a hot-plug drive fan:

1. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
2. Extend the server from the rack (rack model only). Refer to the “Extending the Server from the Rack” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Open the system tray. Refer to the “Opening the System Tray” section in this chapter.
5. Loosen the thumbscrew located at the top of the fan (1).
6. Lift the hot-plug drive fan out of the chassis (2).



CAUTION: Hot-plug drive fans are located below all server cabling. Be careful not to unplug or loosen cables when accessing hot-plug drive fans.

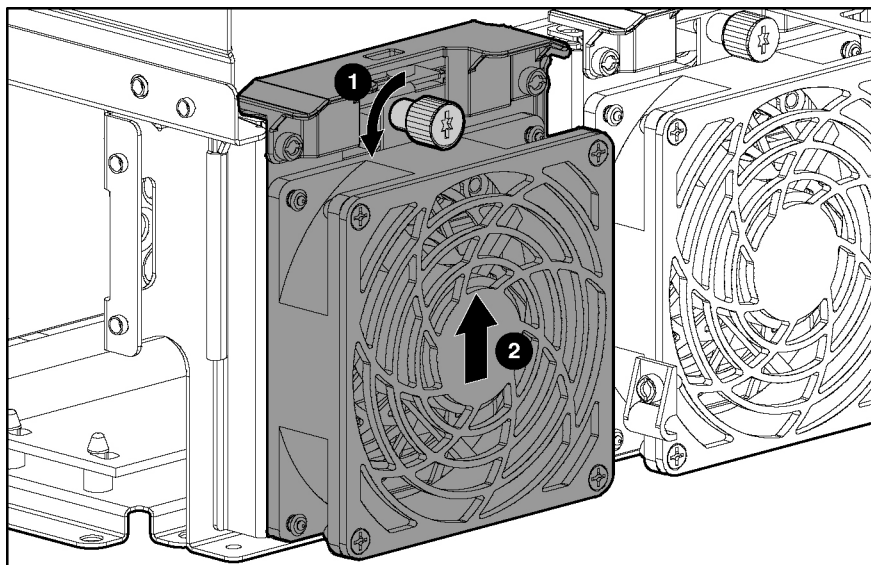


Figure 2-11: Removing a hot-plug drive fan

Reverse steps 1 through 6 to replace a hot-plug drive fan.

For information on hot-plug drive fan diagnosis, refer to the “Hot-Plug Fan LEDs” section in Chapter 4, “Connectors, LEDs, and Switches.”

Hot-Plug SCSI Hard Drives

Observe the following guidelines for hot-plug hard drive replacement.

- Do not remove a degraded hard drive if any other member of the array is offline (the online LED is off). No other hard drive in the array can be hot-plugged without data loss. The exception to this is the use of RAID 1+0 as a fault-tolerant configuration. In this case, hard drives are mirrored in pairs. More than one hard drive can fail and be replaced as long as the hard drive or hard drives they are mirroring are online.
- Do not remove a degraded hard drive if any member of an array is missing (previously and not yet replaced).
- Do not remove a degraded hard drive if any member of an array is being rebuilt, unless the hard drive being rebuilt has been configured as an online spare. The online LED for the hard drive flashes green or amber, indicating that a replaced hard drive is being rebuilt from the data stored on the other drives.

NOTE: An online spare hard drive does not activate and start rebuilding after a predictive failure alert because the degraded hard drive is still online. The online spare activates only after a hard drive in the array has failed.

- Do not replace multiple degraded hard drives at the same time, since the fault tolerance can be compromised. When a hard drive is replaced, the controller uses data from the other hard drives in the array to reconstruct data on the replacement hard drive. If more than one hard drive is removed, a complete data set is not available to reconstruct data on the replacement hard drive or drives, and permanent data loss can occur.



CAUTION: Do not turn off any external unit when the server containing the Smart Array Controller is powered up. Also, do not power up the server before powering up the hard drive enclosure. If these ordering rules are not followed, the Smart Array Controller may mark the hard drives in this enclosure as “failed,” resulting in permanent data loss.

To remove a hot-plug hard drive:

1. Open the front bezel door (tower model only). Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.



CAUTION: Remove or replace a hard drive only when the drive failure LED is amber. Data loss can occur if a hard drive is removed when the drive online LED is green. Refer to the “Hot-Plug Hard Drive LEDs” section in Chapter 4 for more information.



CAUTION: Remove or replace only one hard drive at a time. The controller relies on other hard drives to reconstruct data on the replaced hard drive. Hard drive reconstruction is active when the drive online LED is flashing green.

2. Push the sliding release button (1).
3. Swing out the ejector lever (2).
4. Pull the hard drive out from the drive cage (3).



CAUTION: Always populate drive bays with either a hard drive or a blank. Proper airflow can only be maintained when the bays are populated. Unpopulated drive bays can lead to improper cooling and thermal damage.

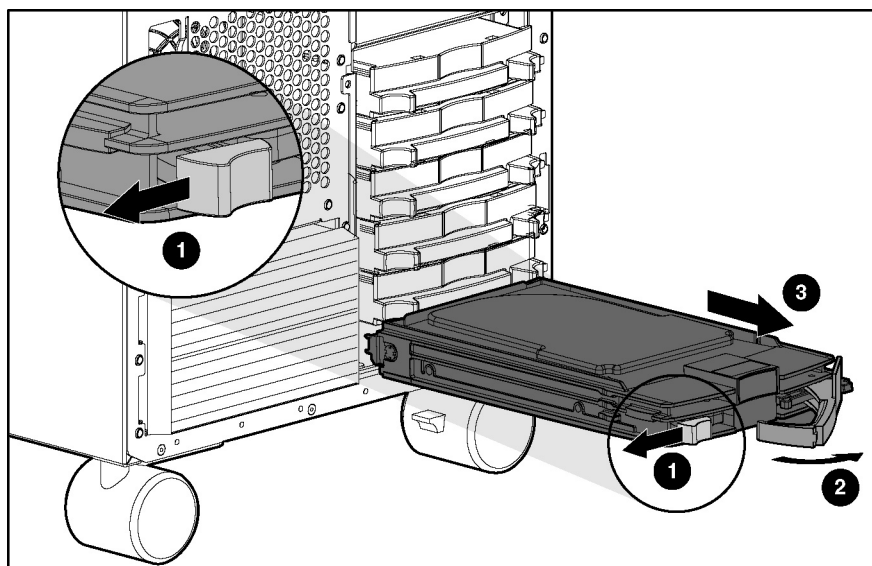


Figure 2-12: Removing a hot-plug hard drive

Reverse steps 1 through 4 to replace a hard drive.

PCI and PCI-X Hot Plug Expansion Boards



CAUTION: Do not attempt a PCI Hot Plug procedure if your operating system does not provide PCI Hot Plug support or if you do not have the appropriate device drivers installed. Failure to take these precautions causes system shutdown and risks data integrity.



CAUTION: To avoid critical errors, do not open the expansion slot latch if the green power LED is on or blinking. Use the PCI Hot Plug button or the software application to turn off power to the slot.

Use either the PCI Hot Plug button on the server or your operating system's PCI Hot Plug Utility to control the PCI Hot Plug slots.

- The PCI-X Hot Plug button and the PCI Hot Plug Utility enable you to power up or power down a PCI-X Hot Plug expansion slot. The PCI-X Hot Plug button enables direct access at each hot-plug expansion slot.
- PCI Hot Plug software support for each operating system is available online. For more information, refer to the "PCI Hot Plug Important Facts" section in the online *PCI Hot Plug Administrator's Guide* on the Documentation CD.

The ProLiant ML530 Generation 2 server includes seven PCI-X expansion slots. Use the following figure and table to identify each slot.

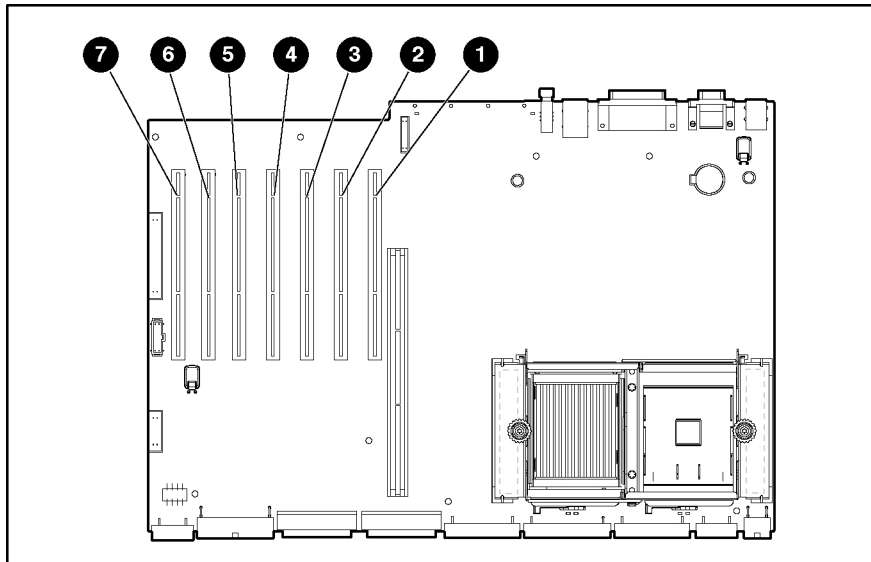


Figure 2-13: PCI-X expansion slots

Table 2-1: PCI-X Expansion Slots and Buses

Item	Slot	Bus
1	Slot 1 (hot-plug)	Shared bus
2	Slot 2 (hot-plug)	
3	Slot 3 (hot-plug)	Shared bus
4	Slot 4 (hot-plug)	
5	Slot 5	Shared bus
6	Slot 6	
7	Slot 7*	PCI-X bus

*Slot 7 is recommended for the Remote Insight Lights-Out Edition.

PCI-X Hot Plug expansion slots are accessible through the hot-plug door.

To remove an expansion board from a PCI-X Hot Plug slot:

1. Extend the server from the rack (rack model only). Refer to the “Extending the Server from the Rack” section in this chapter.
2. Open the hot-plug door. Refer to the “Opening the Hot-Plug Door” section in this chapter.

3. Press the port-colored PCI-X Hot Plug button to power down the slot (1). The power LED flashes until shutdown is complete. Refer to the “PCI-X Hot Plug LEDs” section in Chapter 4, “Connectors, LEDs, and Switches,” to determine the current PCI Hot Plug slot status.



CAUTION: To prevent data loss, do **not** open an expansion slot latch when the power LED for the slot is on.

4. When the power LED for the slot is off, remove cables to the selected expansion board.
5. Push the tab on the expansion slot latch (2).
6. Swing the latch back to unlock the expansion board (3).

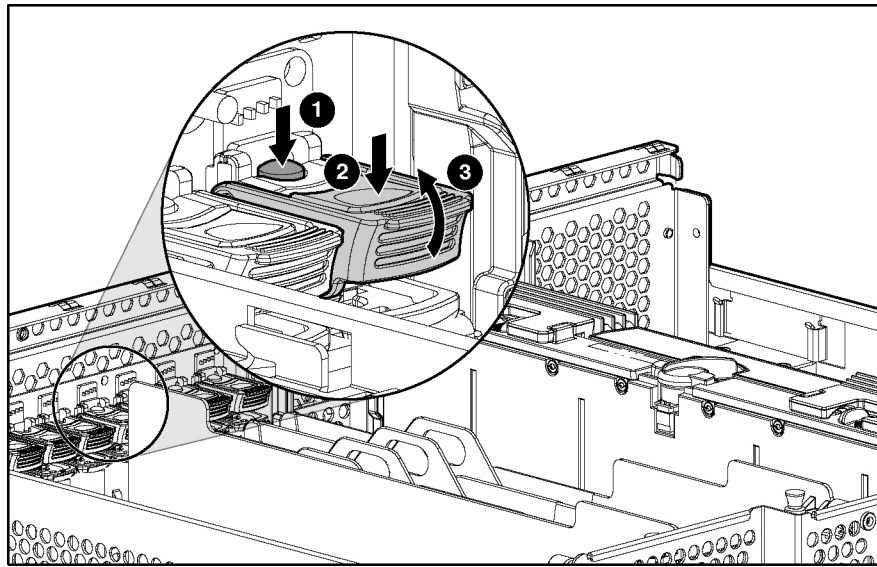


Figure 2-14: Pushing the PCI-X Hot Plug button and releasing the expansion slot latch

7. Release the PCI-X retaining clip (1).
8. Lift the expansion board release handle to lift the board from the slot (2).
9. Remove the board from the slot (3).

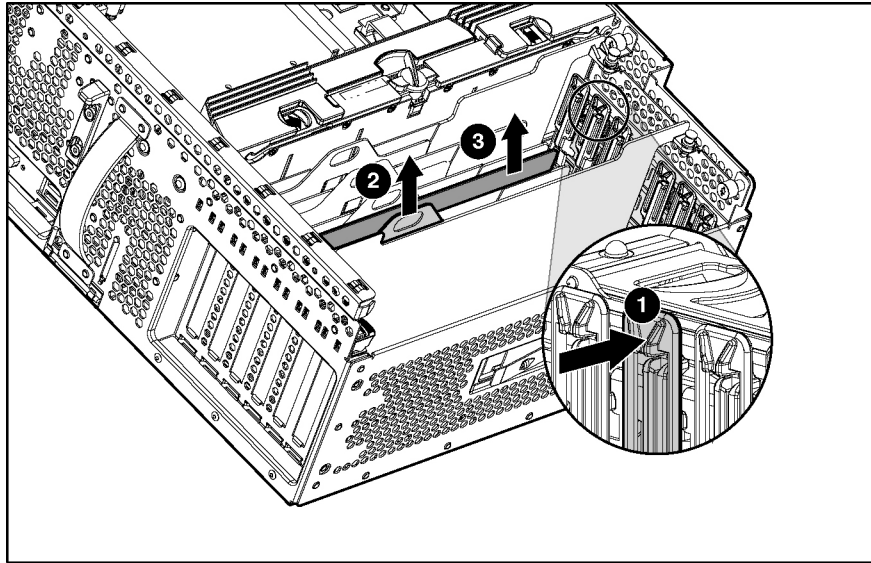


Figure 2-15: Removing a PCI Hot Plug expansion board

Before replacing the expansion board, review the following information:

- Balancing is the paired arrangement of expansion boards for optimal performance based on the bus architecture of the expansion slots. Properly balancing the expansion boards across buses can improve performance.
- To balance expansion boards, populate slots across different buses before populating two slots on the same bus.

The following table provides a guideline for slot population order.

NOTE: The slot population order that follows is a recommendation only; any PCI or PCI-X expansion board may reside in any slot.

Table 2-2: Recommended PCI-X Expansion Slot Population Order

Slot Number	Population Order	
1	1	Shared PCI-X bus
2	5	
3	2	Shared PCI-X bus
4	6	
5	3	Shared PCI-X bus
6	7	
7*	4	PCI-X bus
*Slot 7 is recommended for the HP Remote Insight Lights-Out Edition due to internal cabling requirements.		

The operating system detects the PCI devices in the slots in this order:

1-2-3-4-5-6-7

For more information about PCI bus architecture and numbering, refer to the white paper, *PCI Bus Numbering in a Windows NT Environment*, on the HP website:

www.hp.com/servers/proliant/manage

Reverse steps 1 through 9 to replace the expansion board.

Preparing the Server for Non-Hot-Plug Procedures

Before replacing non-hot-plug devices, you must perform the following procedures:

- Powering down the server
- Extending the server from the rack
- Removing the server from the rack

Powering Down the Server



WARNING: It is necessary to be knowledgeable of electrostatic discharge information before preparing the server. For electrostatic discharge information, refer to the “Electrostatic Discharge Information” section in this chapter.

To power down the server:

1. Remove the front bezel door (tower model only). Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
2. Press the Power On/Standby button.

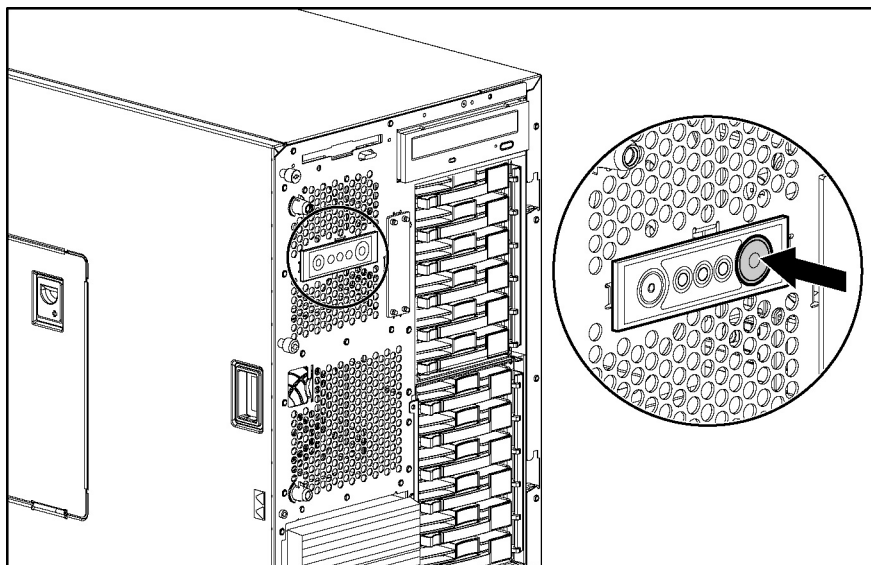


Figure 2-16: Pressing the Power On/Standby button

3. Be sure that the front panel power LED indicator is amber and that the fans are off.
4. Disconnect all AC power cords from the server.
5. Disconnect all external peripheral devices from the server.

Extending the Server from the Rack

To extend the server from the rack:

1. Loosen the front panel thumbscrews that secure the server to the front of the rack (1).
2. Extend the server until the server rail-release latches engage (2).

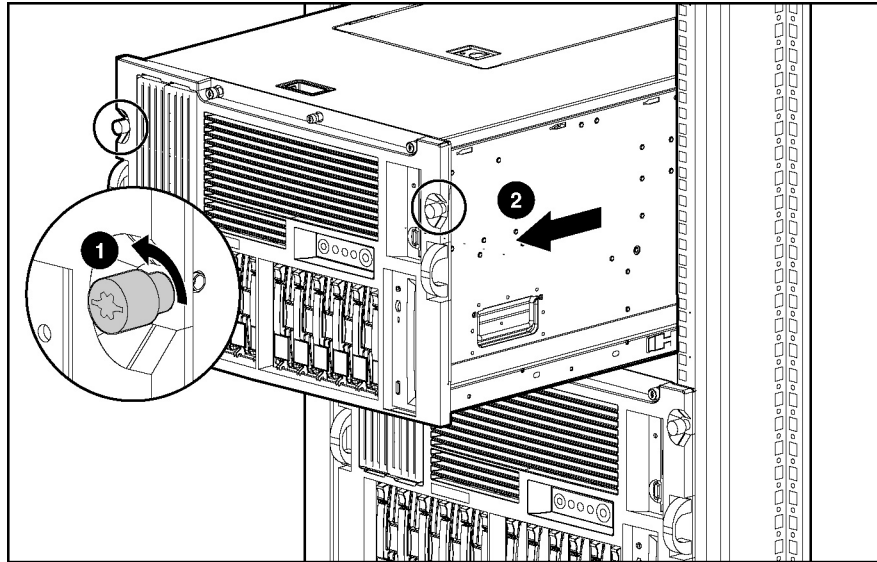


Figure 2-17: Extending the server from the rack

Removing the Server from the Rack



WARNING: To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.



WARNING: Before lifting the server remove all hot-plug power supplies to reduce weight.



WARNING: The server is very heavy, up to 66 kg (146 lb). To reduce the risk of personal injury or damage to the equipment:

- Remove all hot-plug power supplies to reduce the weight of the product before lifting it.
 - Observe local occupational health and safety requirements and guidelines for manual material handling.
 - Use more than one person to lift and stabilize the product.
-

To remove the server from the rack:

1. Power down the server. Refer to the “Powering Down the Server” section in this chapter.
2. Loosen the thumbscrew that holds the cable management arm bracket to the back of the server (1).
3. Slide the cable management arm bracket up and remove it from the server (2).

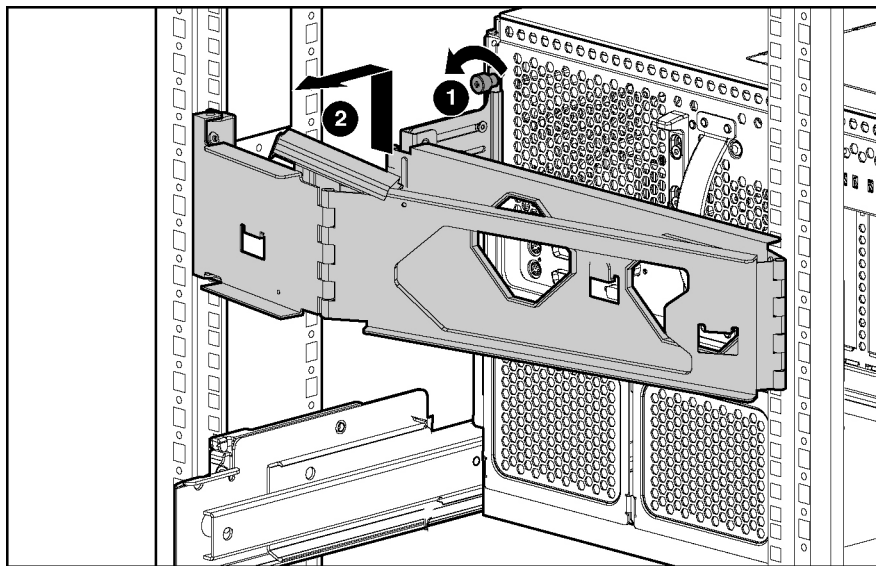


Figure 2-18: Removing the cable management arm from the server

4. Extend the server from the rack. Refer to the “Extending the Server from the Rack” section in this chapter.

5. Press the release latches.

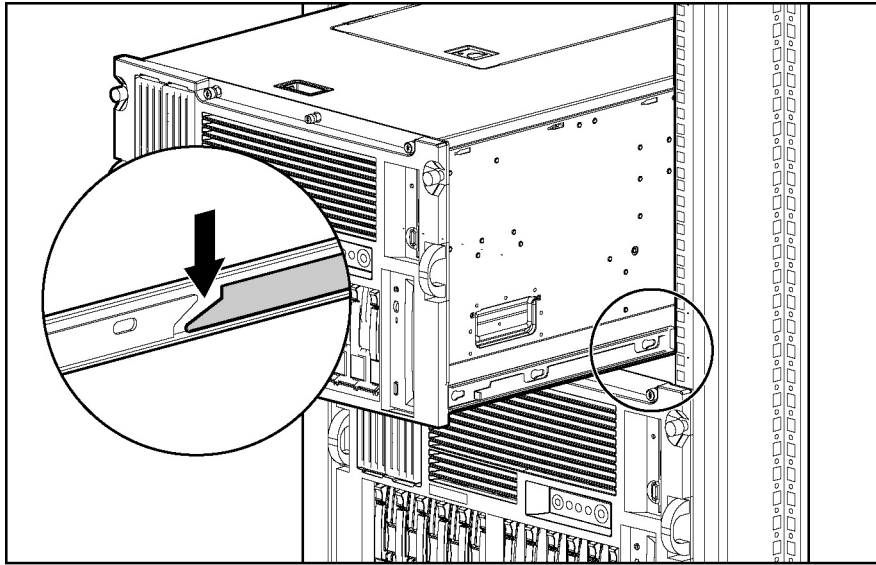


Figure 2-19: Pressing the release latches

6. Pull the server out of the front of the rack.

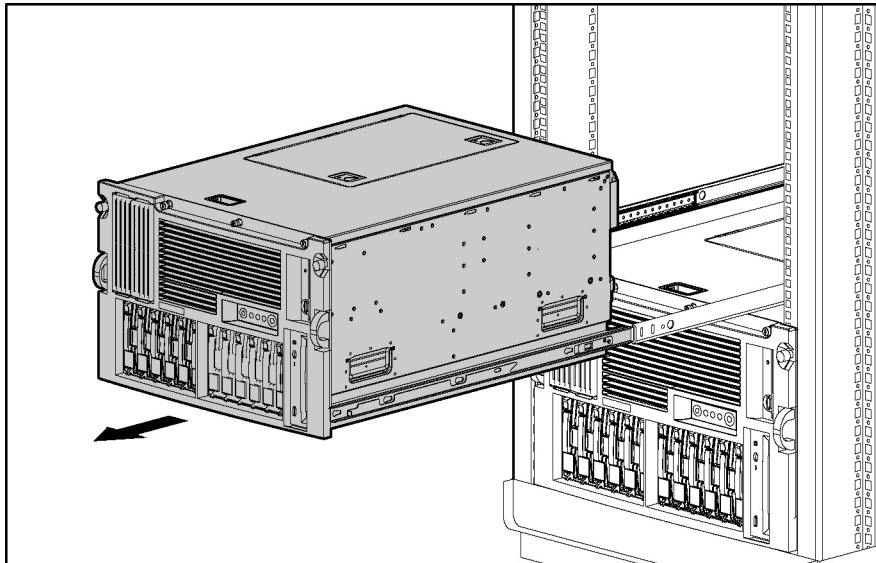


Figure 2-20: Removing the server from the rack

7. Place the server on a nonconductive, level surface.

Non-Hot-Plug Procedures

In order to remove or replace any non-hot-plug component, you must first power down the server. The following procedures are non-hot-plug procedures:

- System battery
- Processor air baffle
- Processor power modules
- Processors
- Memory
- Expansion boards (in non-hot-plug slots)
- Hot-plug expansion board basket
- PCI backplane
- System tray
- Power backplane
- Fan basket
- Fan basket adapter with cable
- Drive air baffle
- CD-ROM drive
- Diskette drive
- Removable media devices
- Internal two-bay hot-plug SCSI drive cage fans
- Drive cage backplane
- Drive fan cable and cable bracket
- Front panel LED and cable assembly

System Battery



CAUTION: Loss of BIOS settings occurs when the system battery is removed. BIOS settings must be reconfigured whenever the battery is replaced. Power up the server and run RBSU.



WARNING: This server contains an internal lithium manganese dioxide or vanadium pentoxide battery. There is risk of fire and burns if the battery pack is not handled properly. To reduce the risk of personal injury:

- Do not attempt to recharge the battery.
- Do not expose to temperatures higher than 60°C.
- Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- Replace only with the HP spare designated for this server.



CAUTION: Do not dispose of batteries, battery packs, and accumulators with the general household waste. To forward them to recycling or proper disposal, use the public collection system or return them to either HP or your HP authorized service provider.

To remove the battery (CR 2032):

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.

4. Locate the battery on the system board.

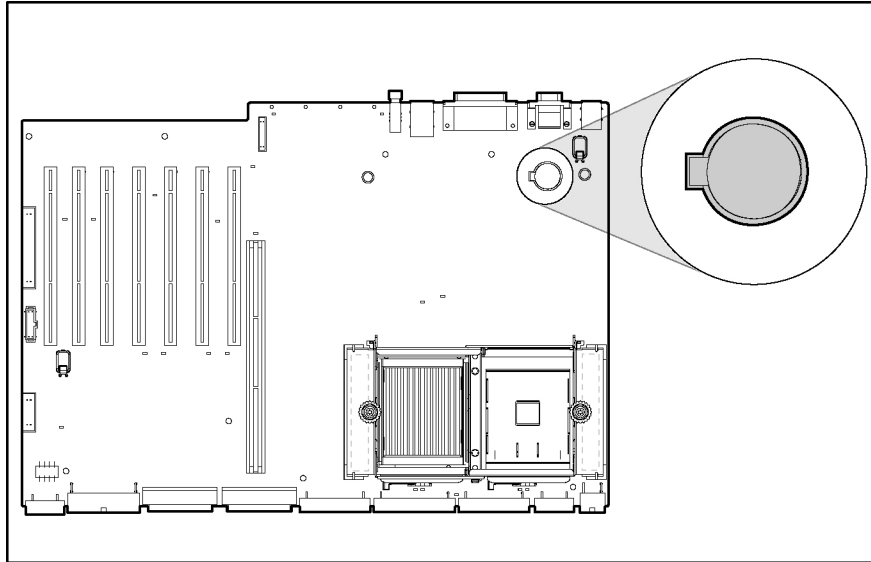


Figure 2-21: Battery location on system board

5. Remove the battery (CR 2032) from the system board.

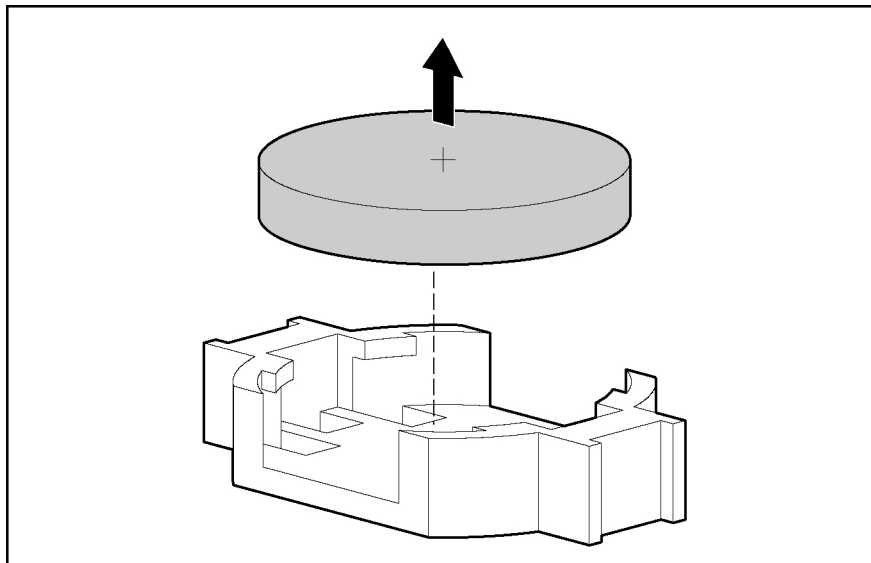


Figure 2-22: Removing the battery from the system board

Reverse steps 1 through 5 to replace the battery.

Processor Air Baffle

To remove the processor air baffle:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Loosen the two thumbscrews on the processor air baffle (1).
5. Lift the processor air baffle from the chassis (2).

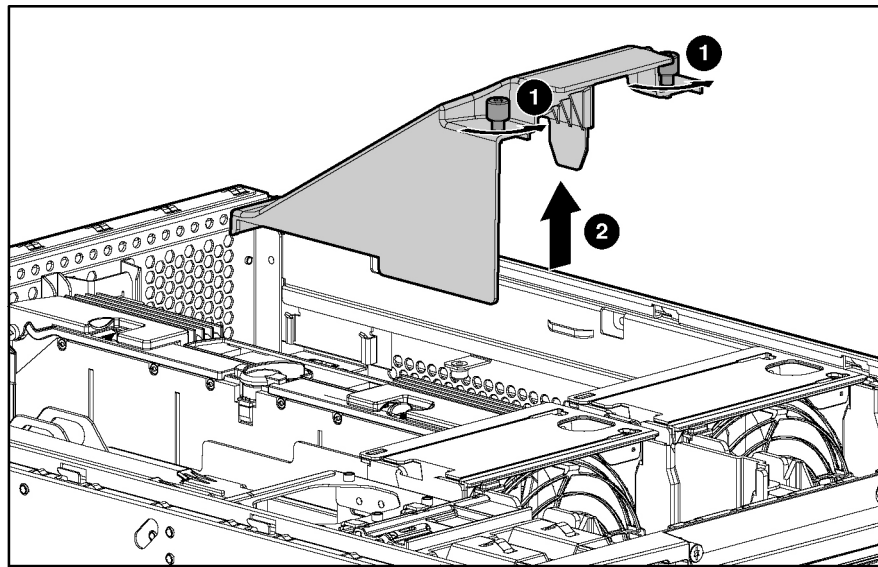


Figure 2-23: Removing the processor air baffle

Reverse steps 1 through 5 to replace the processor air baffle.

Processor Power Module

To remove the processor power module:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove the processor air baffle. Refer to the “Processor Air Baffle” section in this chapter.
5. Loosen the thumbscrew on the processor retaining bracket (1).
6. Lift the retaining bracket upward (2).

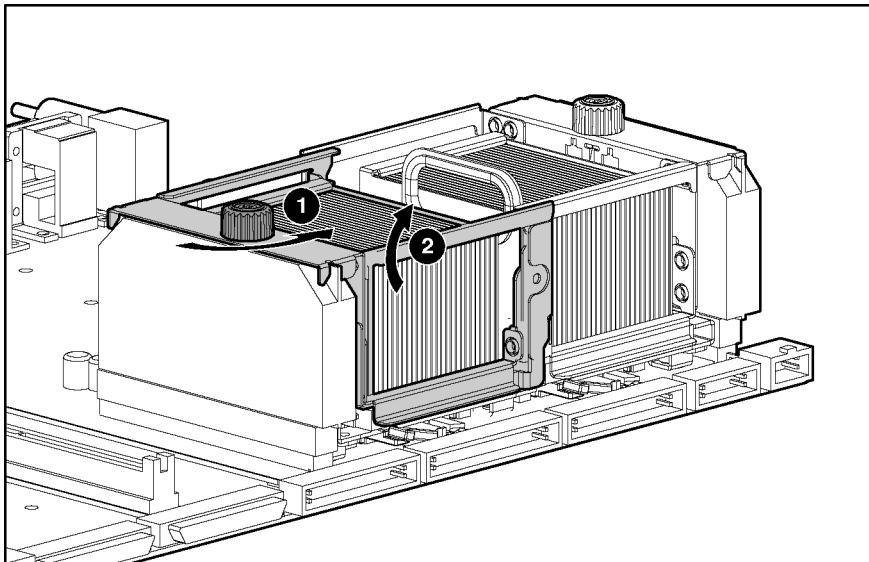


Figure 2-24: Lifting the processor retaining bracket

7. Lift the PPM straight up from its slot.

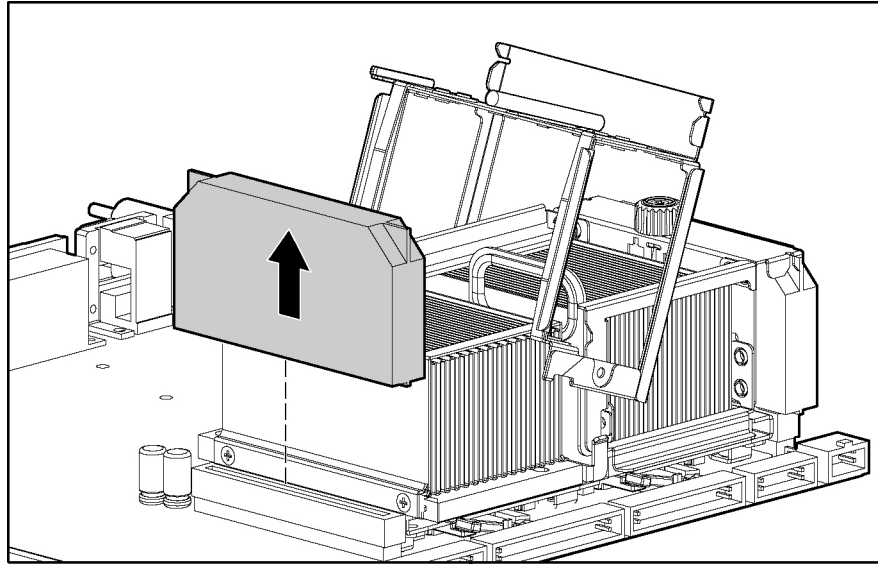


Figure 2-25: Removing a PPM

Reverse steps 1 through 7 to replace a PPM.

IMPORTANT: When installing a PPM, be sure the key slot in the PPM is aligned with the key in the slot.

Processors

To remove a processor:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove the processor air baffle. Refer to the “Processor Air Baffle” section in this chapter.
5. Loosen the thumbscrew on the processor retaining bracket (1).
6. Lift the retaining bracket upward (2).
7. Remove the PPM. Refer to the “Processor Power Module” section in this chapter.
8. Move the processor locking lever to the unlocked position (3).

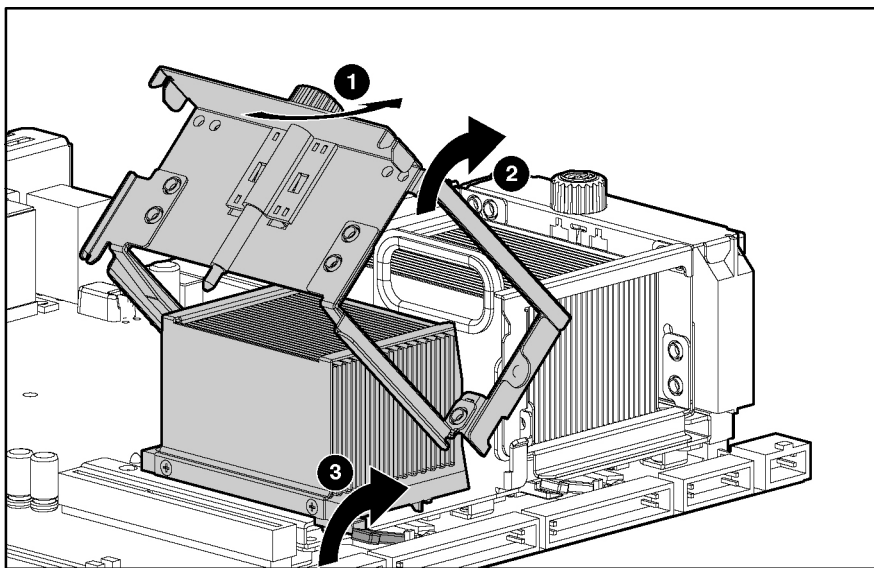


Figure 2-26: Lifting the processor retaining bracket and the processor locking lever

9. Lift the processor/heatsink assembly straight up from its socket.

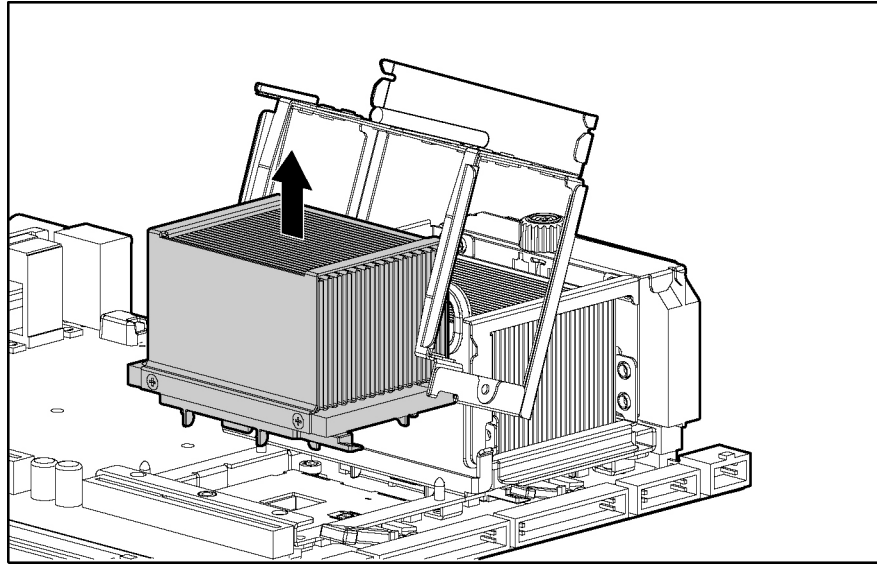


Figure 2-27: Removing the processor/heatsink assembly

Reverse steps 1 through 9 to replace a processor.



CAUTION: Failure to fully open the processor locking lever will prevent the processor from seating properly during installation and can potentially lead to hardware damage.



CAUTION: To prevent possible server malfunction, be sure to completely close the processor locking lever.



CAUTION: Do not force the processor into the processor socket. The processor pins are fragile, and the processor socket is keyed to ensure proper installation.

NOTE: When inserting a processor into a socket, determine the correct processor orientation by observing the keyed configuration of both the processor socket and the processor pins.

Memory

This section provides the following information about the memory components and procedures in the ProLiant ML530 Generation 2 server:

- Parts of the memory board
- Memory board LEDs
- DIMM installation requirements
- Removing the memory board
- Removing a DIMM
- Installing a DIMM
- Installing the memory board
- Configuring the memory

Parts of the Memory Board

The following figure and table identify the parts of the memory board.

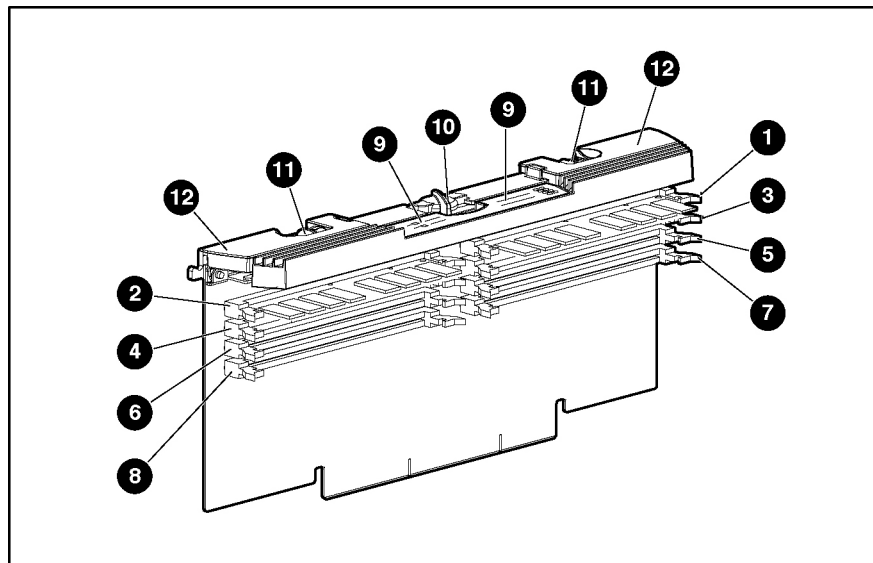


Figure 2-28: Parts of the memory board

Table 2-3: Parts of the Memory Board

Item	Description
1	DIMM slot 1, bank A (populated)
2	DIMM slot 2, bank A (populated)
3	DIMM slot 3, bank B
4	DIMM slot 4, bank B
5	DIMM slot 5, bank C
6	DIMM slot 6, bank C
7	DIMM slot 7, bank D*
8	DIMM slot 8, bank D*
9	LEDs
10	Locking switch
11	Release latches
12	Ejector levers

*When the server is configured for online spare memory, bank D on memory board 1 is the online spare bank.

Memory Board LEDs and Icons

Use the following figure and tables to identify LEDs and icons on the memory board.

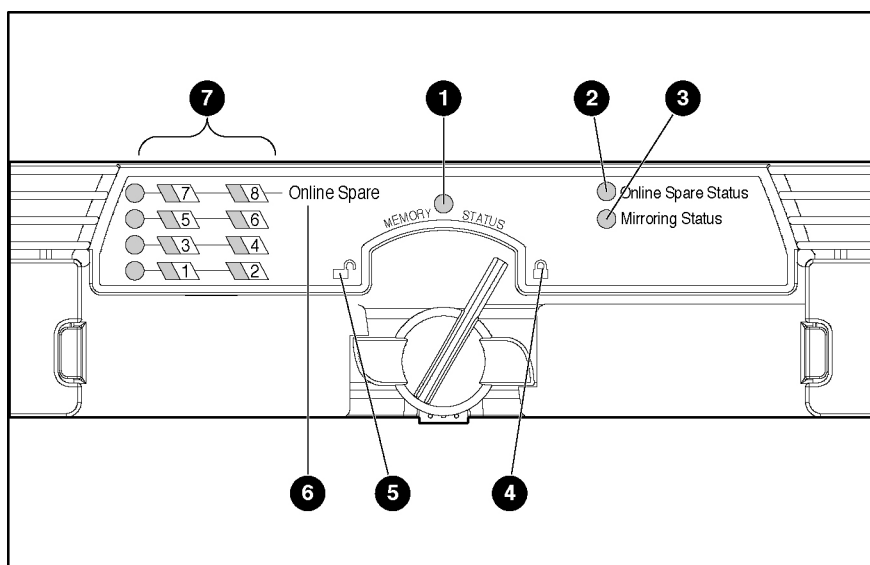


Figure 2-29: Memory board LEDs and icons

Table 2-4: Advanced ECC (Standard) Memory LEDs

Item	Description	Indicator	Status
1	Memory status	Off	Memory board is offline.
		Green	Memory board is online.
		Flashing green	Memory board is busy.
		Amber	Memory error has occurred on this memory board.
7	DIMM 1-8 status	Off	DIMM is not installed.
		Green	DIMM is installed.
		Amber	Memory error has occurred on this DIMM.
		Flashing amber	Configuration error has occurred.
1-3, 6, 7	All LEDs	Flashing amber	CAUTION—Memory board is in use; relock it immediately.

Table 2-5: Online Spare Memory LEDs

Item	Description	Indicator	Status
1	Memory status	Off	Memory board is offline.
		Green	Memory board is online.
		Flashing green	Memory board is busy.
		Amber	Memory error has occurred on this memory board.
2	Online spare status	Off	Memory board is not configured for online spare memory.
		Green	Online spare memory is functioning properly.
		Amber	Memory error has occurred and system has failed over to the online spare bank.
6	"Online Spare" text	Off	Bank is not configured as an online spare bank.
		Green	Bank is configured as an online spare bank.
		Flashing green	Failure has occurred and online spare bank is active.
7	DIMM 1-8 status	Off	DIMM is not installed.
		Green	DIMM is installed.
		Amber	Memory error has occurred on this DIMM.
		Flashing amber	Configuration error has occurred.
1-3, 6, 7	All LEDs	Flashing amber	CAUTION—Memory board is in use; relock it immediately.

Table 2-6: Single-Board Mirrored Memory LEDs

Item	Description	Indicator	Status
1	Memory status	Off	Memory board is offline.
		Green	Memory board is online.
		Flashing green	Memory board is busy.
		Amber	Memory error has occurred on this memory board.
3	Mirroring status	Off	Memory board is not configured for mirrored memory.
		Green	Single-board mirrored memory is functioning properly.
		Amber	Memory error has occurred and system has failed over to the mirrored bank(s).
7	DIMM 1-8 status	Off	DIMM is not installed.
		Green	DIMM is installed.
		Amber	Memory error has occurred on this DIMM.
		Flashing amber	Configuration error has occurred.
1-3, 6, 7	All LEDs	Flashing amber	CAUTION—Memory board is in use; relock it immediately.

Table 2-7: Memory Board Icons

Item	Description	Status
4	Lock	Memory board is locked and cannot be removed.
5	Unlock	Memory board is unlocked; do not remove unless the server is off.
Note: The icon at which the memory board switch is pointed indicates whether the memory board is locked or unlocked.		

DIMM Installation Requirements

Observe the following DIMM configuration requirements when installing DIMMs:

- Use only industry-standard PC1600 registered DDR SDRAM DIMMs in 256-MB, 512-MB, 1-GB, and 2-GB capacities.
- Install DIMMs in pairs, one bank at a time.
- Be sure that both DIMMs in a bank are the same capacity.
- Be sure that bank A is populated.

IMPORTANT: HP recommends that you use only HP DIMMs. Third-party DIMMs may have additional installation requirements. For information about third-party DIMM installation requirements, refer to the Advanced Memory Protection white paper on the HP website:

www.hp.com/servers/proliant/manage

IMPORTANT: You must power down the server before installing additional DIMMs.

IMPORTANT: Follow all DIMM configuration requirements carefully. If the DIMMs are not configured properly, you receive an error message during POST.

The ProLiant ML530 Generation 2 servers support two types of optional Advanced Memory Protection:

- Online spare memory
- Single-board mirrored memory

Each type includes Advanced ECC protection.

Additional Requirements for Online Spare Memory Technology

In addition to the DIMM configuration requirements for advanced ECC memory, observe the following DIMM configuration requirements when installing DIMMs for online spare memory:

- Bank D is the online spare bank and must be populated when the server is configured for online spare memory.
- DIMMs installed in the online spare bank must be of equal or greater capacity than each of those in the remaining banks.

Additional Requirements for Single-Board Mirrored Memory Technology

In addition to the DIMM configuration requirements for advanced ECC memory, observe the following DIMM configuration requirements when installing DIMMs for single-board mirrored memory:

- Bank C mirrors bank A, and bank D mirrors bank B. Banks A and C must always be populated.
- DIMMs in the mirrored banks must be configured identically to the banks they are mirroring. Corresponding banks (for instance, bank A and bank C) must be populated with DIMMs of the same capacity.

Removing the Memory Board



CAUTION: Electrostatic discharge can damage electronic components. Make sure you are properly grounded before beginning any installation procedure.

To remove a memory board:

1. Power down the server. Refer to the “Powering Down the Server” section in this chapter.
2. Open the hot-plug door. Refer to the “Opening the Hot-Plug Door” section in this chapter.
3. Disengage the locking switch (1).



CAUTION: Do not attempt to unlock the memory board in an operational server. This will generate an audible alarm and cause the memory board LEDs to flash amber. Proceeding to remove the memory board after the audible and visible alarms causes system failure.

4. Press the release latches inward firmly (2), disengaging the board from the server. Do not squeeze the latches.
5. Lift the ejector levers up (3).
6. Pull the memory board up out of the server (4).

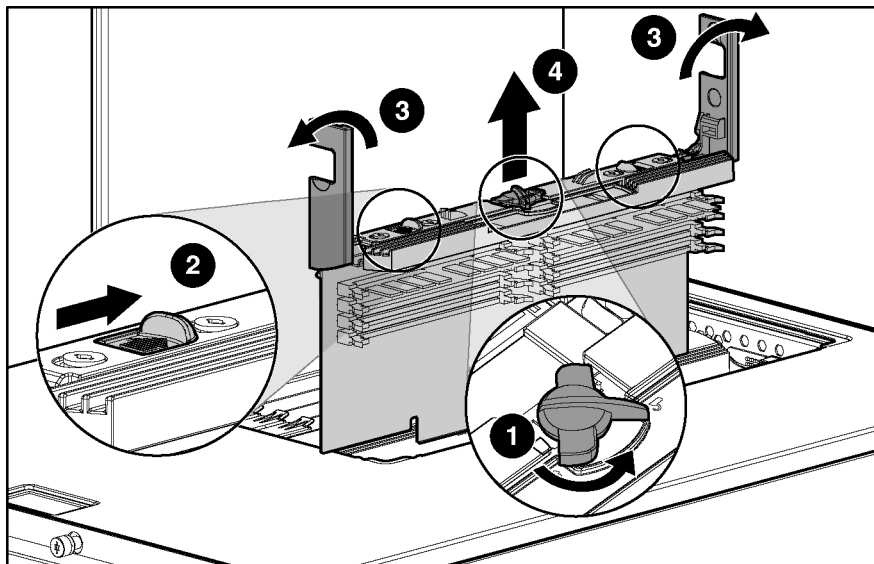


Figure 2-30: Removing the memory board

Removing a DIMM

To remove a DIMM:

1. Remove the memory board. Refer to the “Removing the Memory Board” section in this chapter.
2. Place the memory board on a level surface.
3. Open the DIMM slot latches (1) to eject the DIMM from the DIMM slot (2).

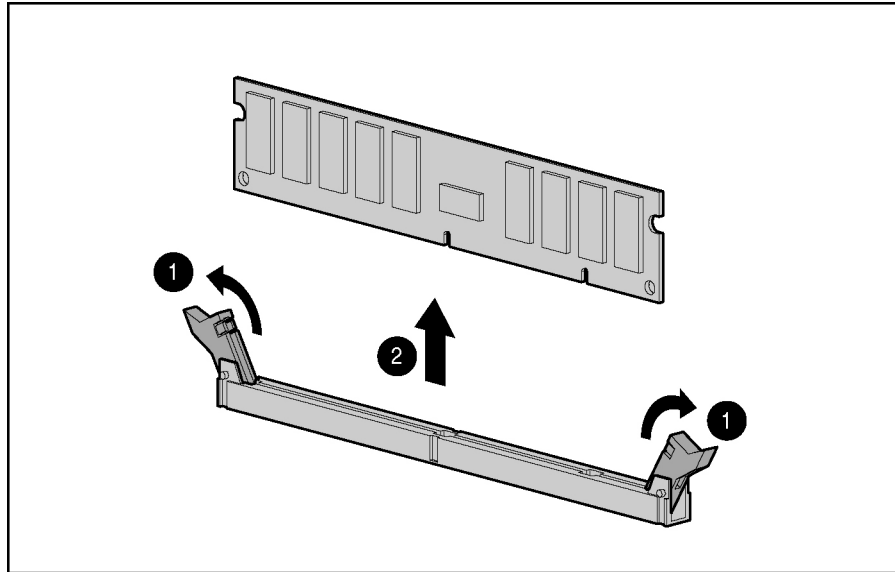


Figure 2-31: Removing a DIMM

Installing a DIMM

To install a DIMM:

1. Remove the memory board. Refer to the “Removing the Memory Board” section in this chapter.
2. Observe all DIMM installation requirements for the desired memory mode. Refer to the “DIMM Installation Requirements” section for each mode in this chapter.

IMPORTANT: Follow all DIMM configuration requirements carefully. If the DIMMs are not configured properly, you receive an error message during POST and the DIMM LEDs blink amber.

3. Align the keyed portion of the bottom edge of the DIMM with the tab in the DIMM slot.

IMPORTANT: The bottom edge of the DIMM is designed so that it fits into the DIMM slot only one way.

4. Press the DIMM firmly into the slot (1).
5. Push the latches into place (2).

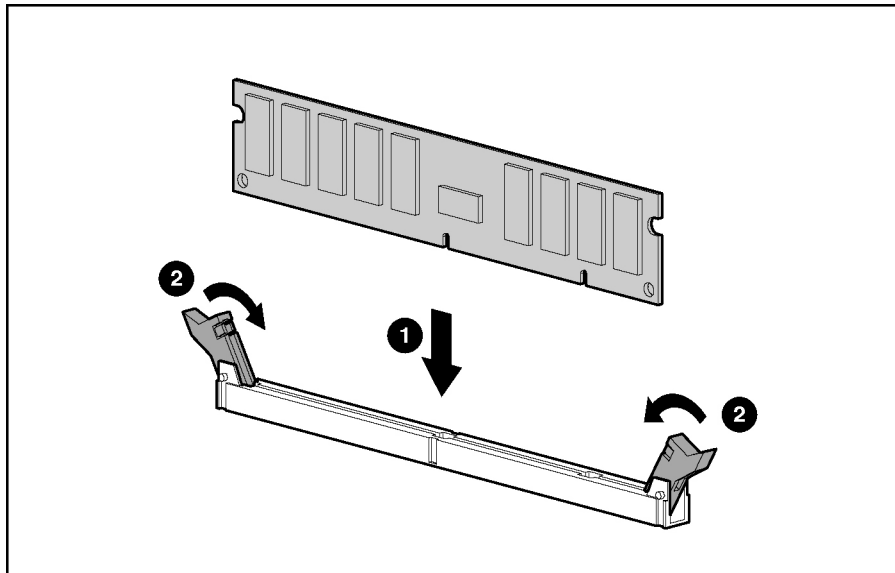


Figure 2-32: Installing and latching a DIMM

Installing the Memory Board

To install the memory board:

1. Align the memory board with the memory slot and memory board guide clips.
2. Slide the memory board into the server (1), and close the ejector levers to seat the memory board firmly (2).
3. Engage the locking switch (3).

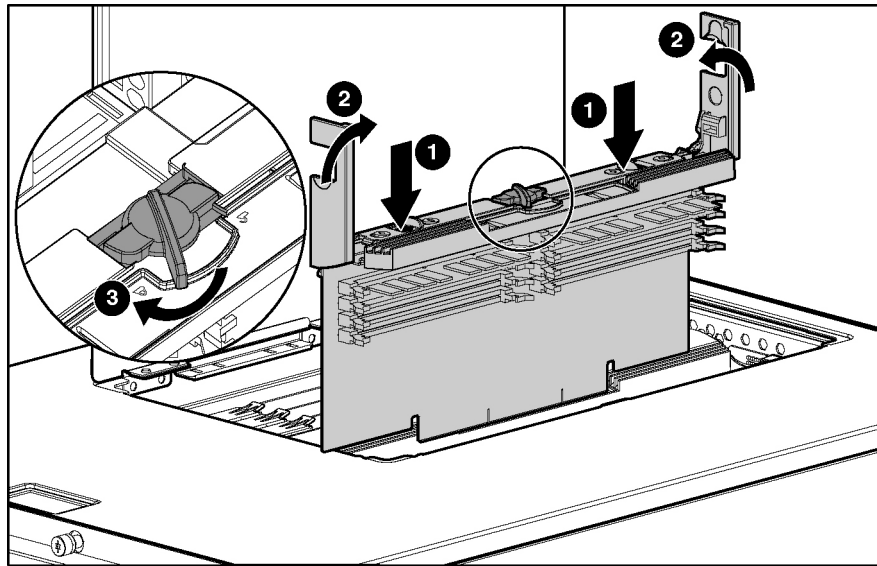


Figure 2-33: Installing the memory board

4. Power up the server.
5. Configure the memory. Refer to the “Configuring the Memory” section in this chapter.
6. Reference the LEDs on the memory board to be sure that the memory is functioning properly. The following table describes the LEDs for each memory configuration when the DIMMs and memory board are installed and functioning properly. For more information on LEDs, refer to Chapter 4, “Connectors, LEDs, and Switches.”

Table 2-8: Memory LED States on a Properly Functioning Memory Board

LED	Memory Configuration		
	Advanced ECC Memory	Online Spare Memory	Single-Board Mirrored Memory
Memory Status	Green	Green	Green
DIMM 1-8, if populated	Green	Green	Green
“Online Spare” text*	Off	Green	Off
Online spare status	Off	Green	Off
Mirroring status	Off	Off	Green

*When the server is configured for online spare memory, Bank D is the online spare bank.

7. Close the hot-plug door.
8. Close the front bezel door (tower model only).

Configuring the Memory

Configuring the server's memory system requires configuring both hardware and software. To configure the memory:

1. Remove the memory board. Refer to the "Removing the Memory Board" section in this chapter.
2. Install the required DIMMs based on your desired memory configuration. Be sure to follow all DIMM installation requirements. Refer to the "DIMM Installation Requirement" sections in this chapter for each mode.
3. Install the memory board. Refer to the "Installing the Memory Board" section in this chapter.
4. Test the DIMMs:
 - a. Power on the server.
 - b. Press the **F9** key to enter RBSU.
 - c. Select **Advanced Options**.
 - d. Change **POST Speed Up** to **Disable**.
 - e. Press any key to return to the RBSU main menu.
 - f. Select **System Options**.
 - g. Select **Advanced Memory Protection**.
 - h. Select the desired memory mode.
 - i. Press the **Esc** key twice to go back to the main RBSU menu.
 - j. Press the **F10** key to exit RBSU. The server reboots and tests all memory in the system.
 - k. Once the memory has been tested, re-enable POST Speed Up for faster system boot, if desired.

IMPORTANT: To reconfigure the memory mode after initial setup, you must reboot the system and enter RBSU.

Expansion Boards

To remove a non-hot-plug expansion board:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.

IMPORTANT: The system tray must be completely in or completely out of the chassis to remove a full-size expansion board.

4. Disconnect the cables to the expansion board.
5. Press the PCI-X retaining clip, releasing one side of the board.

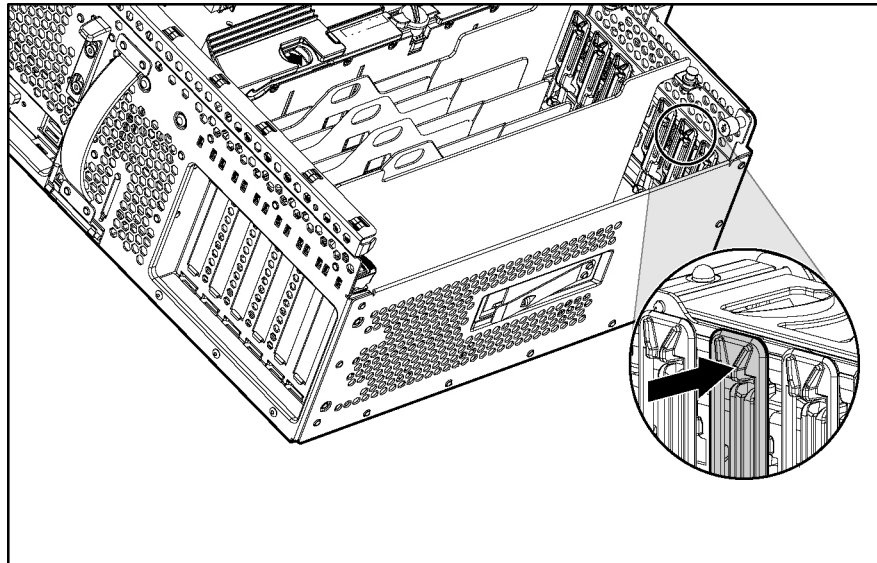


Figure 2-34: Pressing the PCI-X retaining clip

6. Push the tab on the slot release lever (1).
7. Swing the lever back to unlock the expansion board (2).
8. Lift the expansion board from the slot (3).

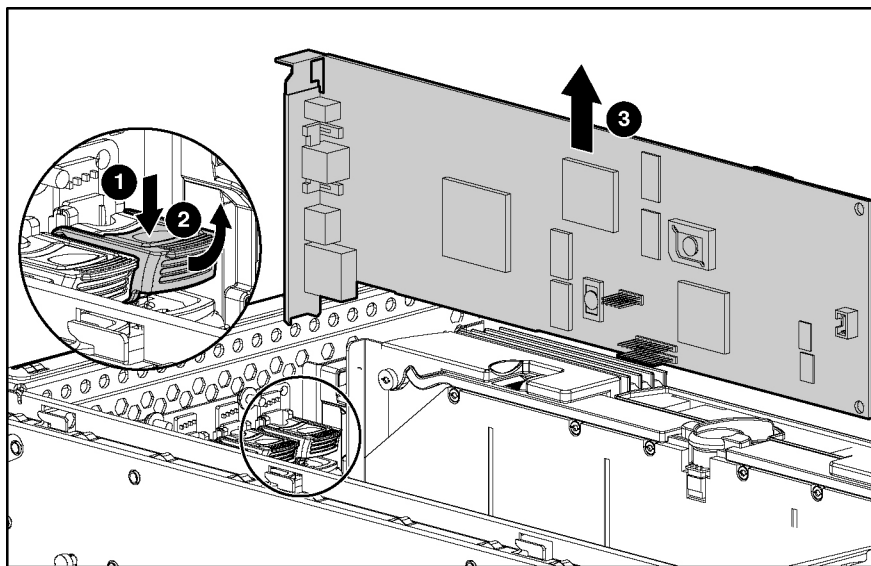


Figure 2-35: Removing an expansion board from a non-hot-plug expansion slot

Reverse steps 1 through 8 to replace an expansion board.

Hot-Plug Expansion Board Basket

To remove the hot-plug expansion board basket:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove cables to all PCI Hot Plug expansion boards.
5. Remove all PCI Hot Plug expansion boards from the basket. Refer to the “PCI and PCI-X Hot Plug Expansion Boards” section in this chapter.

IMPORTANT: If no expansion board is installed in PCI slot 1, remove the expansion slot cover.

6. Remove the Torx T-15 screw holding the basket in place (1). The screw is located between slots 3 and 4 in the rear.
7. Pull up the two retaining pins securing the hot-plug expansion board basket to the system tray (2).
8. Press the plastic sleeve outward until the retaining tab is clear of the rear panel (3).
9. Lift the hot-plug expansion board basket from the system tray (4).

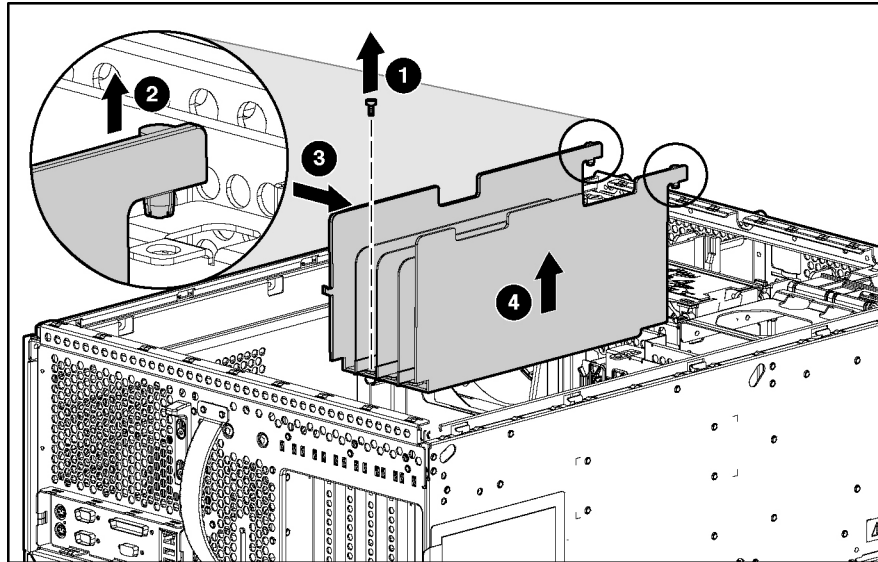


Figure 2-36: Removing the hot-plug expansion board basket

Reverse steps 1 through 9 to replace the hot-plug expansion board basket.

PCI Backplane

To remove the PCI backplane:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove the memory board. Refer to the “Removing the Memory Board” section in this chapter.

5. Disconnect the cable from the PCI backplane.

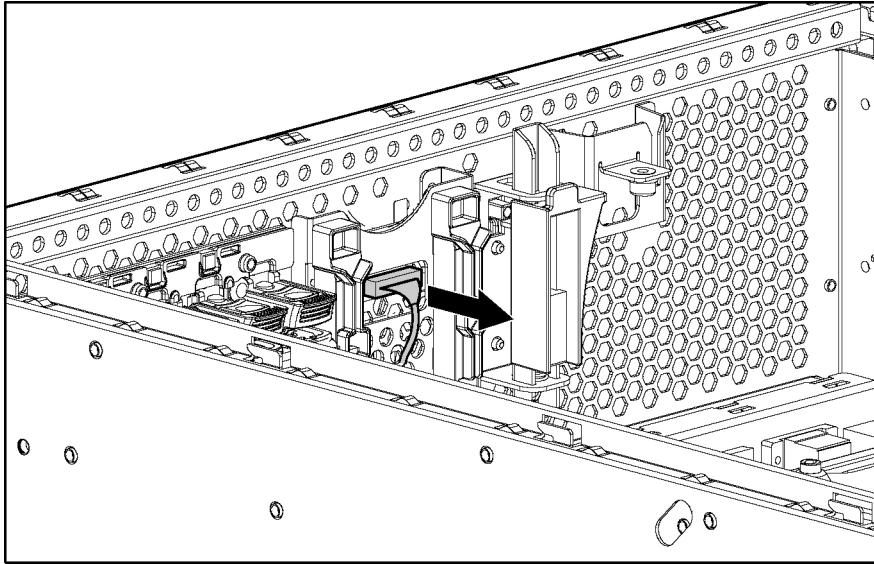


Figure 2-37: Disconnecting the cable from the PCI backplane (PCI basket removed for clarity)

6. Open an expansion slot latch and remove the expansion board or expansion slot cover. Refer to the “PCI and PCI-X Hot Plug Expansion Boards” section in this chapter.
7. Remove the expansion slot latch:
 - a. Press upward on the bottom of the latch from the outside of the chassis (1).
 - b. Pull the latch away from the inner wall of the chassis (2).

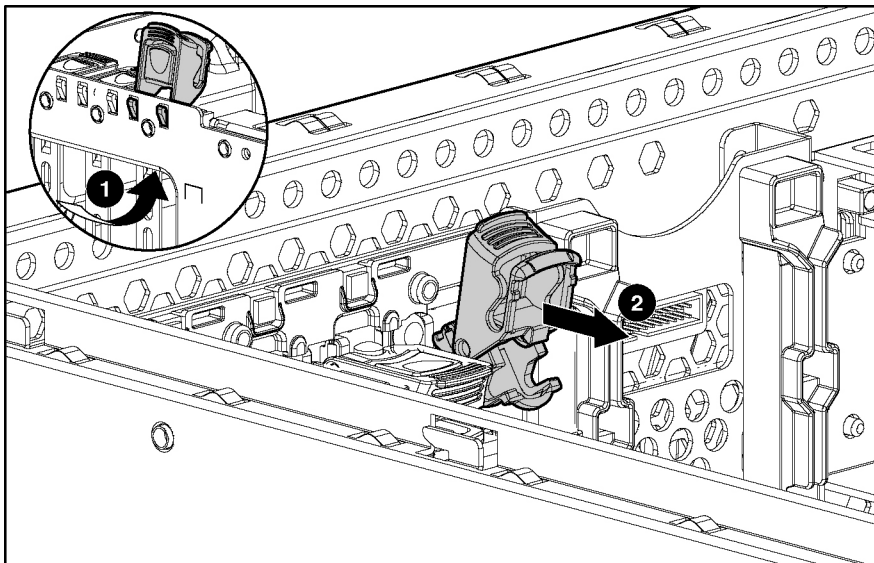


Figure 2-38: Removing an expansion slot latch

8. Repeat steps 6 and 7 for each remaining expansion slot.
9. Remove both plastic rivets from the PCI backplane:
 - a. From inside the chassis, use a pointed object to push the center pin out through the front of the rivet.
 - b. Pull the pin completely from the rivet and set aside.
 - c. Remove the rivet.

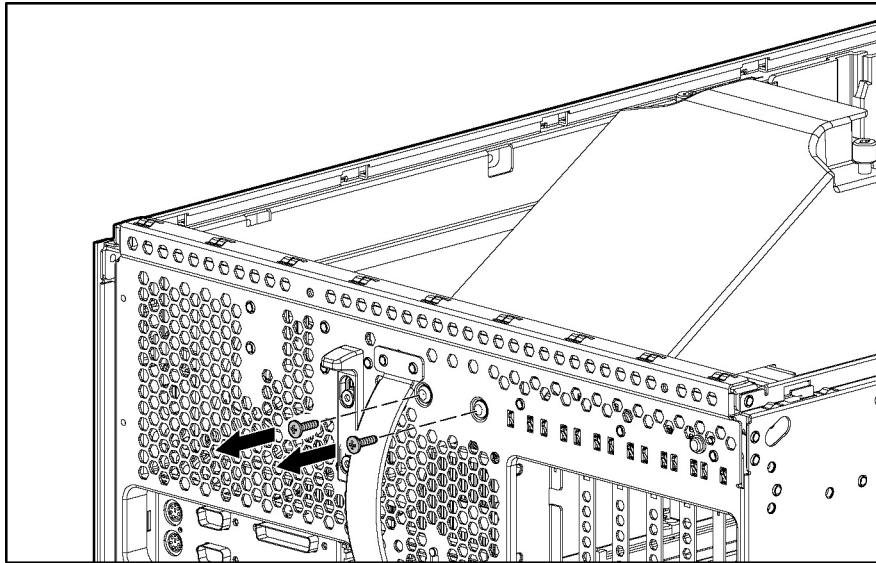


Figure 2-39: Removing the PCI backplane rivets

IMPORTANT: Do not discard the rivets or pins.

10. Open the system tray. Refer to the “Opening the System Tray” section in this chapter.

11. Lift the PCI backplane up and out of the server.

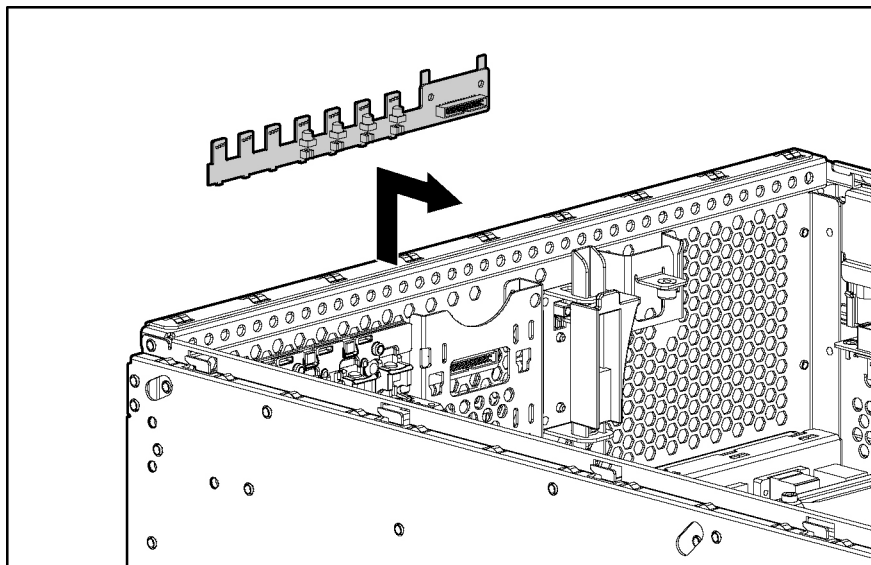


Figure 2-40: Removing the PCI backplane

Reverse steps 1 through 11 to replace the PCI backplane.

System Tray



WARNING: To reduce the risk of personal injury or damage to the equipment, do not use the system tray handle to lift or move the HP ProLiant ML530 Generation 2 server.

To remove the system tray:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.

IMPORTANT: When removing internal components from the system tray, be sure to note the exact locations of each component. All components must occupy the same locations in the new tray as they did on the failed one. Failure to configure the new board exactly like the failed one results in data loss.

4. Remove the memory boards. Refer to the “Removing the Memory Board” section in this chapter.
5. Remove the processor air baffle. Refer to the “Processor Air Baffle” section in this chapter.

6. Remove the PPMs. Refer to the “Processor Power Module” section in this chapter.
7. Remove the processors. Refer to the “Processors” section in this chapter.
8. Remove cables to all PCI expansion boards.
9. Remove any expansion boards from the PCI slots. Refer to the “Expansion Board” section in this chapter.
10. Remove the hot-plug expansion board basket. Refer to the “Hot-Plug Expansion Board Basket” section in this chapter.
11. Remove the PCI backplane. Refer to the “PCI Backplane” section in this chapter.
12. Press the latch adjacent to the system tray release handle to release the system tray (1).
13. Grasp the system tray release handle and pull the tray from the chassis until it stops in the extended position (2).
14. Disconnect all internal cables connected to the system tray. For cable routing information, refer to the “Cable Routing Diagrams” section in this chapter.



CAUTION: Do not pull the system tray completely out from the server unless all cables have been disconnected.

15. Push and hold the latches on either side of the system tray (3).
16. Slide the system tray out from the chassis (4).

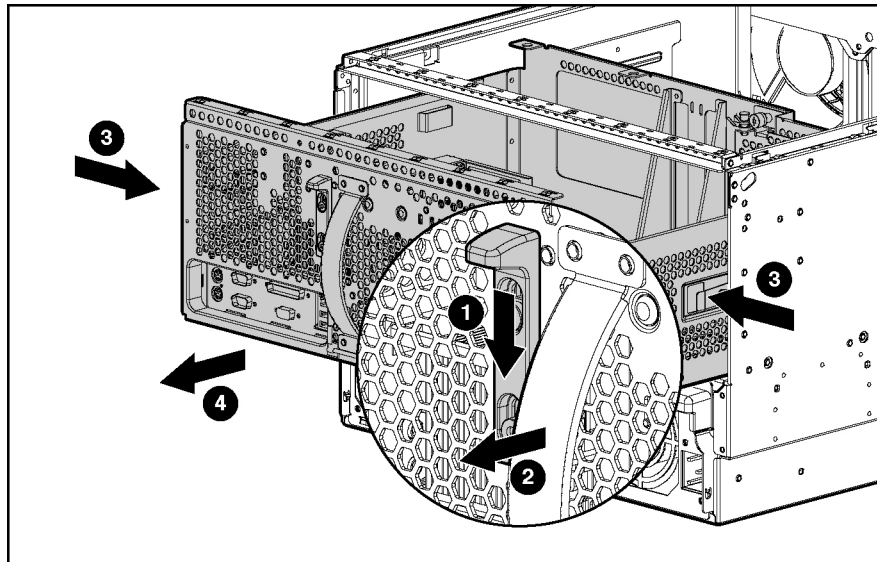


Figure 2-41: Removing the system tray

17. Place the system tray on a level nonconductive surface.
18. Be sure that the system switch settings on the system tray you are installing match those on the system tray you are removing. Refer to “System Board Switches” in Chapter 4, “Connectors, LEDs, and Switches.”

19. Transfer the PCI backplane, expansion boards, processors, PPMs, processor air baffle, and memory boards into the new system tray. Refer to the appropriate sections in this chapter regarding the removal of these components.

IMPORTANT: Be sure that all components occupy the same locations in the new tray as they did on the failed one. Failure to configure the new board exactly like the failed one results in data loss.

Reverse steps 1 through 19 to replace the system tray.

IMPORTANT: The server serial number must be re-entered through RBSU after replacing the system tray. Refer to the “Re-entering the Server Serial Number” section.

IMPORTANT: After replacing the system tray, power up the system, then run RBSU.

Power Backplane

To remove the power backplane:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove all power supplies. Refer to the “Hot-Plug Power Supply” section in this chapter.
4. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
5. Open the system tray. Refer to the “Opening the System Tray” section in this chapter.
6. Disconnect all cables from the power backplane. Refer to the “Cable Routing Diagrams” section in this chapter.
7. Loosen the two Torx T-15 thumbscrews (1).

8. Slide the power backplane toward the rear of the server and lift from the chassis (2).

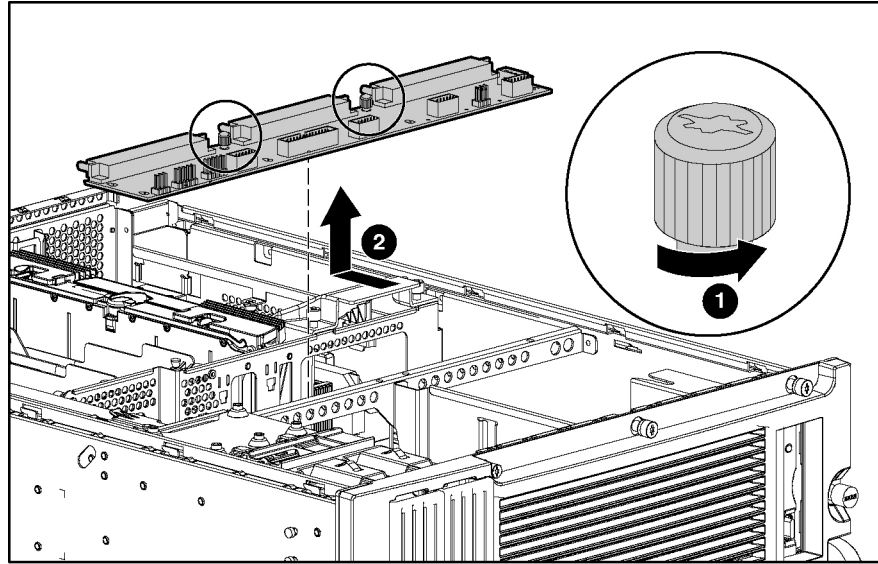


Figure 2-42: Removing the power backplane



CAUTION: To avoid damaging the cables when sliding the system tray, be sure that all of the power cables are connected securely in the power backplane cavity.

Reverse steps 1 through 8 to replace the power backplane.

Fan Basket

The fan baskets house the hot-plug fans that cool the processors and boards.



WARNING: To reduce the risk of personal injury or damage to the equipment, only individuals who are qualified to service computer equipment and trained to deal with products capable of producing hazardous energy levels should perform the installation of options other than hot-plug power devices.



CAUTION: To maintain proper cooling, at least one fan in each fan basket must be operational.



CAUTION: Never remove both hot-plug fans from either fan basket while the server is powered up. Overheating and damage to hardware could result. If the appropriate HP software drivers are installed, the operating system software initiates a power shutdown in case of overheating.

To remove the fan basket:

1. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
2. Extend the server from the rack (rack model only). Refer to the “Extending the Server from the Rack” section in this chapter.

3. Remove the hot-plug fans. Refer to the “Hot-Plug Fans (CPU and I/O)” section in this chapter.
4. Loosen the thumbscrew that secures the fan basket to the chassis (1).
5. Remove the fan basket from the chassis (2).

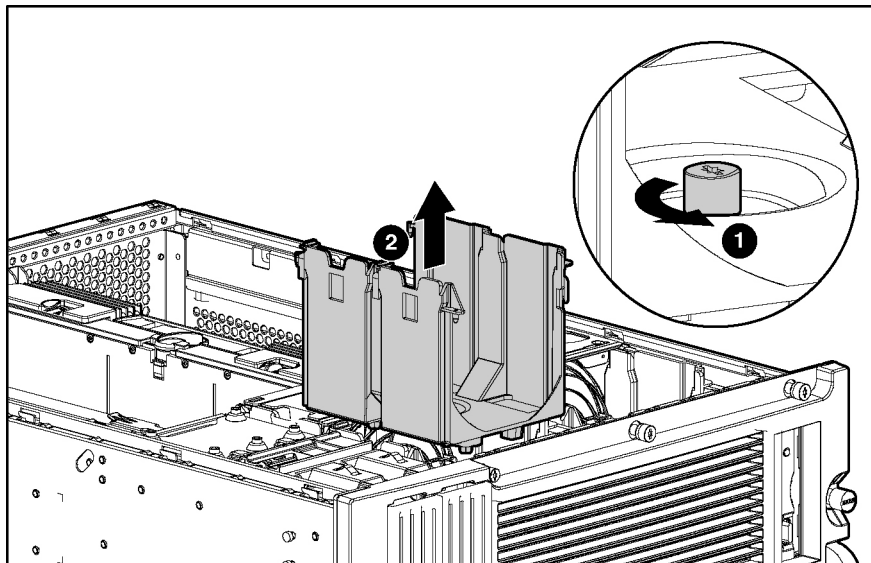


Figure 2-43: Removing the fan basket

Reverse steps 1 through 5 to replace the fan basket.

Fan Basket Adapter with Cable

To remove the fan basket adapter with cable:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove the hot-plug fans. Refer to the “Hot-Plug Fans (CPU and I/O)” section in this chapter.
5. Remove the fan basket. Refer to the “Fan Basket” section in this chapter.
6. Open the system tray. Refer to the “Opening the System Tray” section in this chapter.
7. Disconnect the fan basket adapter power cable from the system board.

8. Remove the four Torx T-15 screws securing the fan basket adapter to the chassis (1).
9. Slide the adapter toward the center of the chassis and lift the adapter out of the chassis (2).

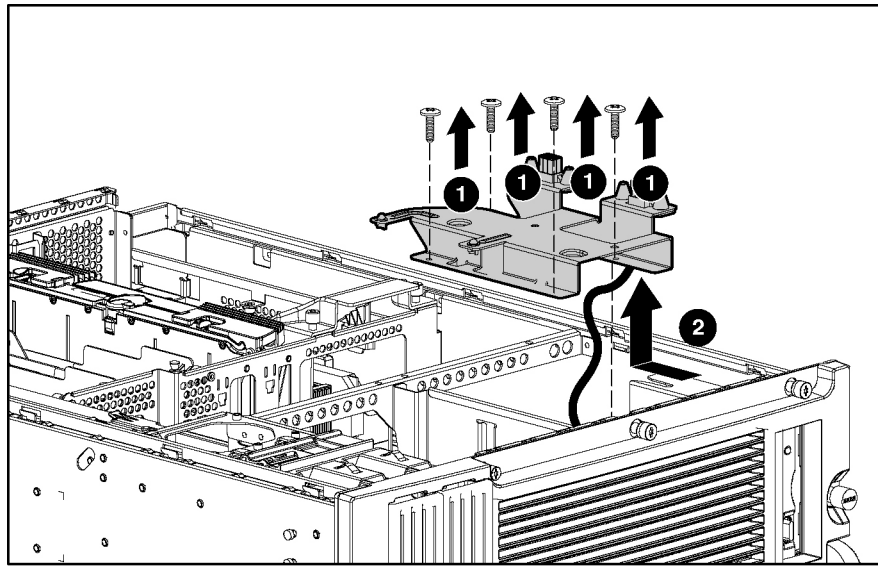


Figure 2-44: Removing the fan basket adapter with cable

Reverse steps 1 through 9 to replace the fan basket adapter with cable.

Drive Air Baffle

To remove the drive air baffle:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove the hot-plug fans. Refer to the “Hot-Plug Fans (CPU and I/O)” section in this chapter.
5. Remove both fan baskets. Refer to the “Fan Basket” section in this chapter.
6. Open the system tray. Refer to the “Opening the System Tray” section in this chapter.

NOTE: To facilitate removal of the drive air baffle, you may wish to remove the two outer hot-plug drive fans. Refer to the “Hot-Plug Fans (Drive)” section in this chapter.

7. Loosen the thumbscrews on the drive air baffle (1).
8. Slide the air baffle over the drive fans, and lift the drive air baffle away from the chassis (2).

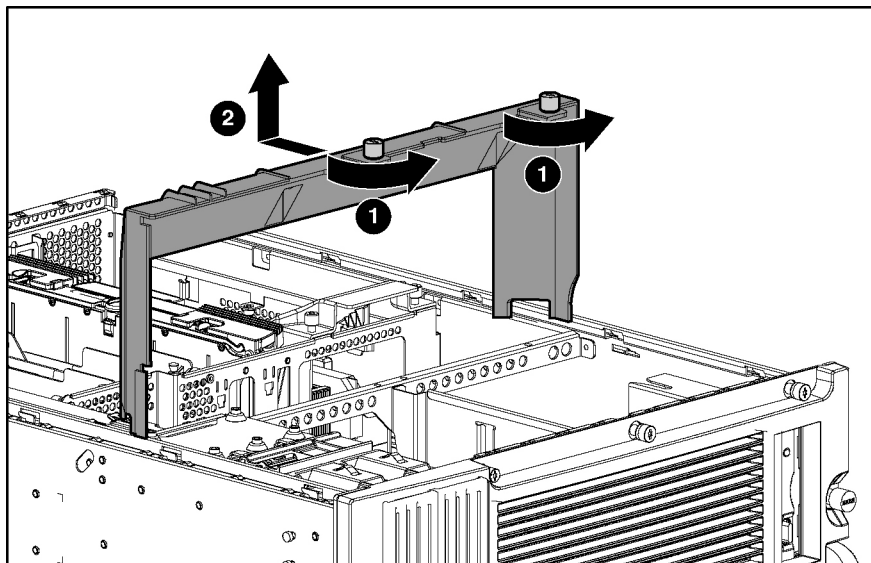


Figure 2-45: Removing the drive air baffle

Reverse steps 1 through 8 to replace the drive air baffle.

CD-ROM Drive

To remove the CD-ROM drive:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove the hot-plug CPU fan. Refer to the “Hot Plug Fans (CPU and I/O)” section in this chapter.
5. Remove the fan basket. Refer to the “Fan Basket” section in this chapter.
6. Remove the fan basket adapter with cable. Refer to the “Fan Basket Adapter with Cable” section in this chapter.
7. Open the system tray. Refer to the “Opening the System Tray” section in this chapter.
8. Disconnect the power and signal cables from the CD-ROM drive. Refer to the “Diskette and CD-ROM Drive Cables” section in this chapter.
9. Loosen the thumbscrew located near the bottom of the fan basket to release the metal locking bracket (1).
10. Slide the metal locking bracket outward (2).
11. Push the CD-ROM drive out of the front of the chassis (3).

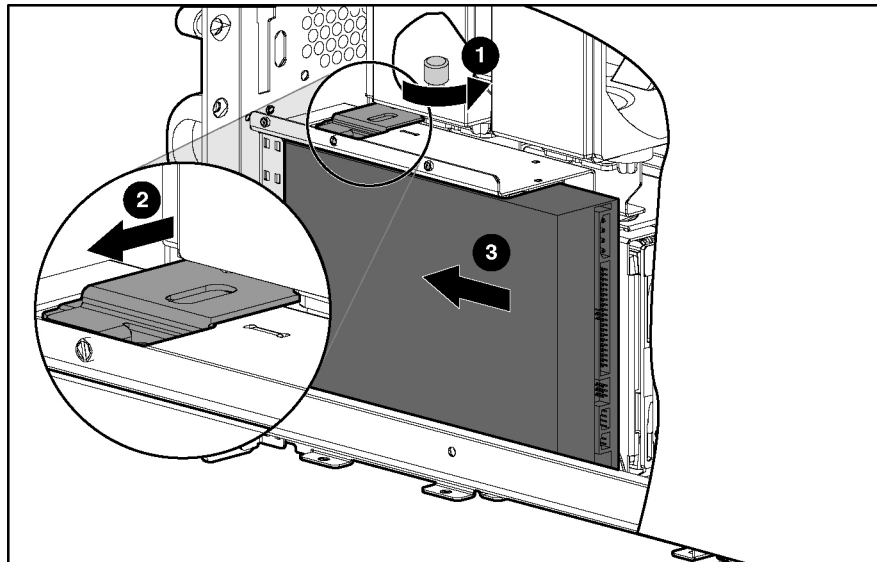


Figure 2-46: Removing the CD-ROM drive

Reverse steps 1 through 11 to replace the CD-ROM drive.

Diskette Drive

To remove the diskette drive:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove the hot-plug CPU fan. Refer to the “Hot-Plug Fans (CPU and I/O)” section in this chapter.
5. Remove the hot-plug CPU fan basket. Refer to the “Fan Basket” section in this chapter.
6. Disconnect the power and signal cables from the diskette drive. Refer to the “Diskette and CD-ROM Drive Cables” section in this chapter.
7. Loosen the thumbscrew on the side of the diskette drive (1).
8. Slide the drive back and lift it from the chassis (2).

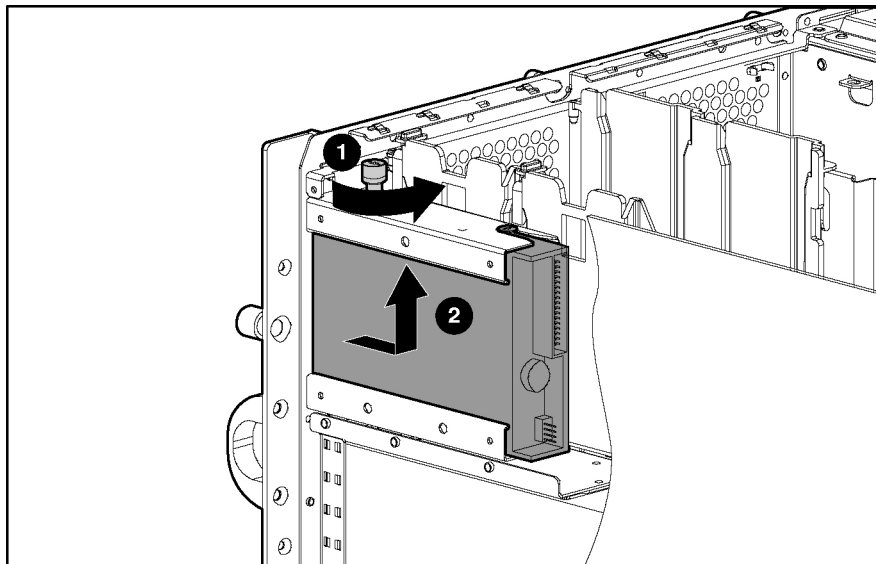


Figure 2-47: Removing the diskette drive

Reverse steps 1 through 8 to replace the diskette drive.

Removable Media Devices

The removable media area contains two bays that can house up to two media devices each. A media bay with no devices installed must be covered with a removable media blank. To remove an installed media device:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only). Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Disconnect all cabling from the removable media device.
5. Slide the blue plastic locking lever on the outside of the removable media area to release the media device (1).
6. Pull the media device from the removable media area (2).



CAUTION: Always populate removable media bays with either a hard drive or blank. Proper airflow can only be maintained when the bays are populated. Unpopulated media bays can lead to improper cooling and thermal damage.

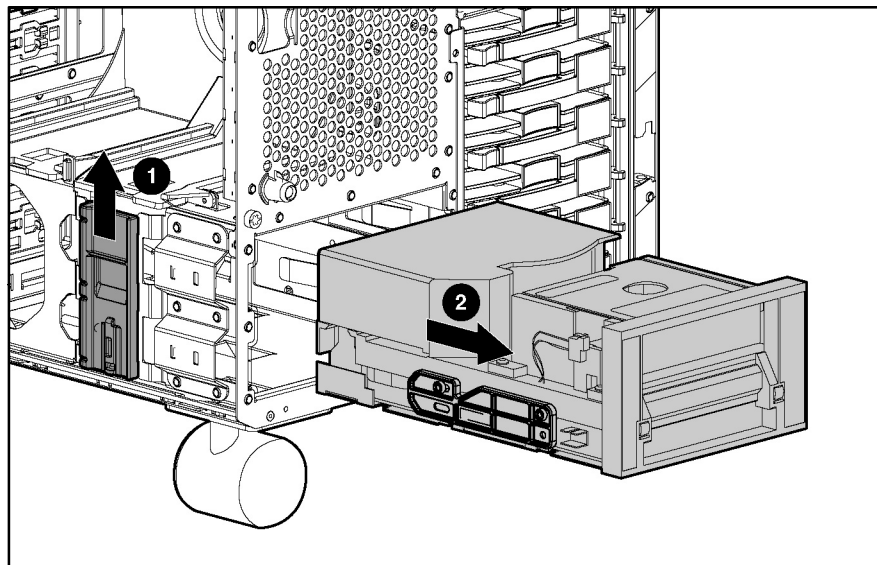


Figure 2-48: Removing a media device from the removable media area

Reverse steps 1 through 6 to replace a removable media device or to cover the opening with a removable media blank.

NOTE: Removable media bay devices may not sit flush with the server when correctly inserted.

NOTE: When replacing a removable media device with a new device, you must transfer the bay-blank rails onto the device you are installing.

Internal Two-Bay Hot-Plug SCSI Drive Cage Fans (Optional)

To remove the internal two-bay hot-plug SCSI drive cage fans:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Disconnect all cabling from the removable media device.
5. Remove the removable media device from the removable media area. Refer to the “Removable Media Devices” section in this chapter.



CAUTION: Always populate media bays with either a hard drive or blank. Proper airflow can only be maintained when the bays are populated. Unpopulated media bays can lead to improper cooling and thermal damage.

6. Lift the clip holding the fans to the back of the drive cage (1).
7. Remove the fans from the rear of the drive cage (2).

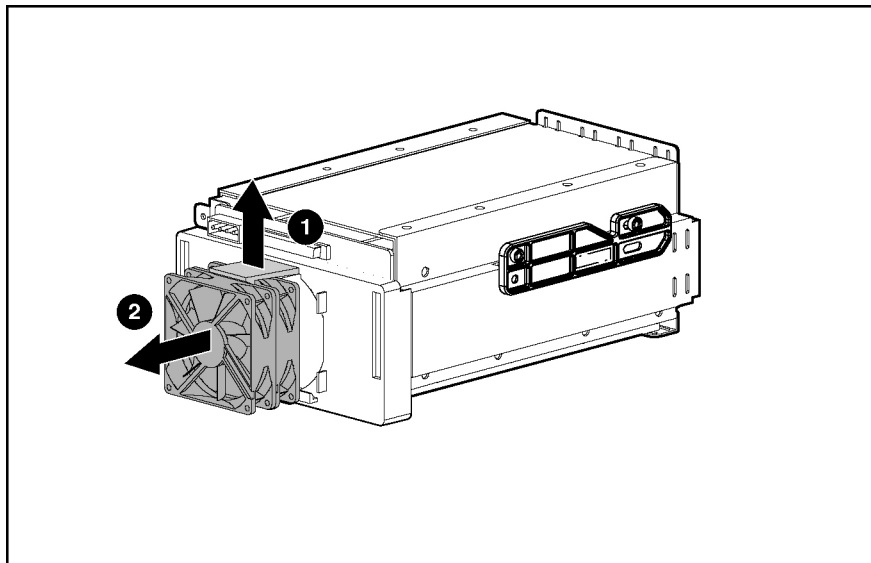


Figure 2-49: Removing fans from the rear of the internal two-bay hot-plug SCSI drive cage

8. Disconnect the fan cable from the back of the drive cage.

Reverse steps 1 through 8 to replace the internal two-bay hot-plug SCSI drive cage fans.

Drive Cage Backplane

The ProLiant ML530 Generation 2 server ships standard with two drive cages that supports up to 12 drives.



CAUTION: If the HP ProLiant ML530 Generation 2 server is set up in an array configuration and an active drive is replaced while the system is powered down, the following POST drive error message (1786) occurs when the system is powered up:

PRESS <F1> TO BOOT THE SYSTEM AND REBUILD THE REPLACED DRIVE, OR PRESS <F2> TO BOOT THE SYSTEM WITHOUT REBUILDING THE DRIVE(S) .

Pressing the **F2** key causes permanent data loss to the logical drive. The **F2** key should be pressed only when all of the drives were replaced or when complete data loss is desired.

NOTE: When a drive configured for fault tolerance is replaced, the replacement drive automatically begins reconstruction. Drive reconstruction is active when the drive online LED is flashing green.

To remove the drive cage backplane:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only). If desired, lay the server on its side with the access panel facing upward for improved access to internal components. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove rack bezel (rack model only). Refer to the “Removing the Rack Bezel” section in this chapter.
4. Remove all drives from the drive cage to be replaced. Refer to the “SCSI Hard Drives” section in this chapter.



CAUTION: Hard drives must be re-inserted in the same locations from which they were removed. Re-inserting hard drives in different orders and locations may result in data loss.

5. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
6. Remove the hot-plug fans. Refer to the “Hot-Plug Fans (CPU and I/O)” section in this chapter.
7. Remove the fan baskets. Refer to the “Fan Basket” section in this chapter.
8. Open the system tray. Refer to the “Opening the System Tray” section in this chapter.
9. Remove the hot-plug drive fans. Refer to the “Hot-Plug Fans (Drive)” section in this chapter.
10. Remove the drive air baffle. Refer to the “Drive Air Baffle” section in this chapter.
11. Disconnect the cables attached to the drive cage. Refer to the “SCSI Cables” and “SCSI Backplane Power Cables” sections in this chapter.

12. Remove the four T-15 screws securing the drive cage to the chassis (1).
13. Pull the drive cage assembly from the front of the chassis (2).

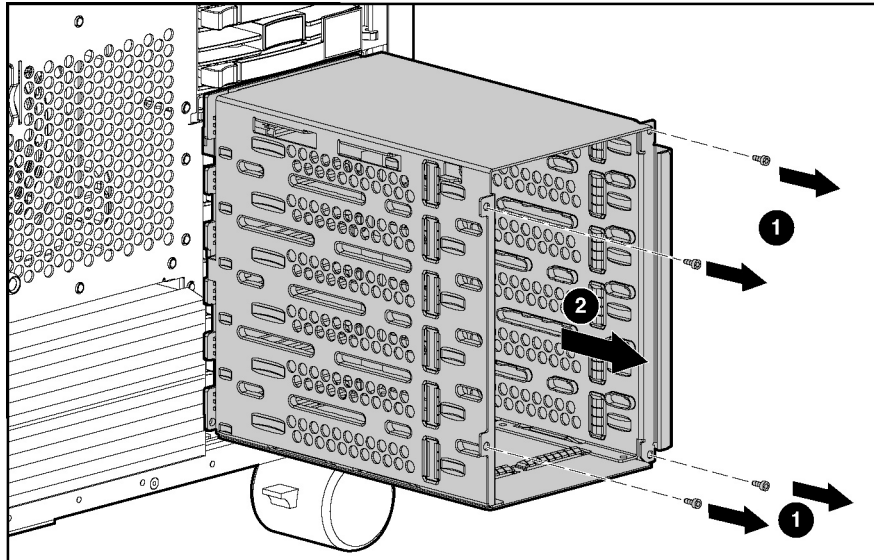


Figure 2-50: Removing the drive cage

14. Remove the three Torx T-15 screws that hold the drive cage backplane to the drive cage (1).
15. Lift the backplane upward, then outward to release it from the drive cage (2).

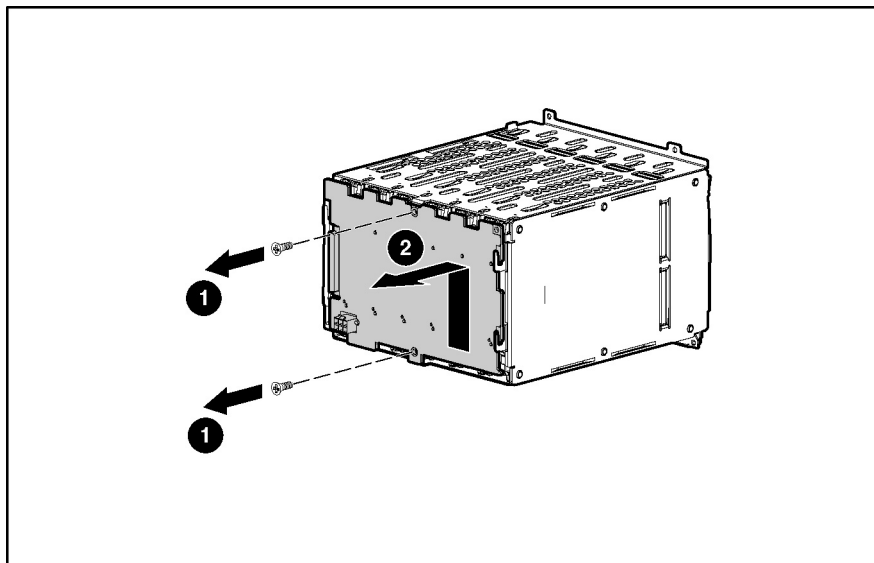


Figure 2-51: Removing the drive cage backplane

Reverse steps 1 through 15 to replace the hard drive cage or cover the opening with a drive cage blank to maintain proper cooling.

Drive Fan Cable and Cable Bracket

To remove the drive fan cable and cable bracket:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
4. Remove the hot-plug fans. Refer to the “Hot-Plug Fans (CPU and I/O)” section in this chapter.
5. Remove the fan baskets. Refer to the “Fan Basket” section in this chapter.
6. Remove the hot-plug drive fans. Refer to the “Hot-Plug Fans (Drive)” section in this chapter.
7. Remove the drive air baffle. Refer to the “Drive Air Baffle” section in this chapter.
8. Remove the drive cage. Refer to the “Drive Cage Backplane” section in this chapter.
9. Remove the Torx T-10 screw holding the drive fan cable bracket in place (1), and lift the drive fan cable bracket from the chassis.
10. Disconnect the drive fan power cable from the power backplane (2).

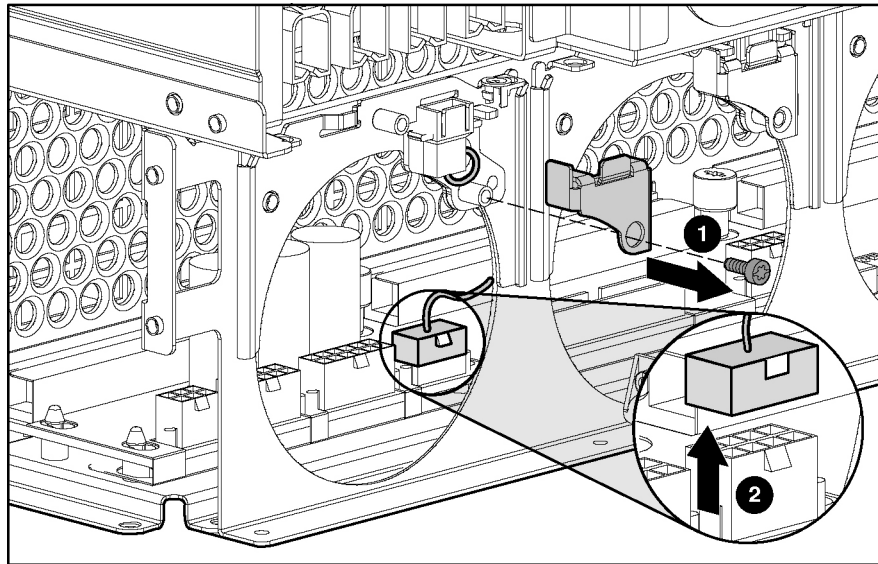


Figure 2-52: Removing the drive fan cable and cable bracket

11. Remove the drive fan cable from the unit.

Reverse steps 1 through 11 to replace the drive fan cable and cable bracket.

Front Panel LED Assembly

To remove the front panel LED assembly:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Remove the front bezel door (tower model only), and lay the server on its side with the access panel facing upward. Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
3. Remove the rack bezel (rack model only). Refer to the “Removing the Rack bezel (Rack Model Only)” section in this chapter.
4. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
5. Remove the hot-plug fans. Refer to the “Hot Plug Fans (CPU and I/O)” section in this chapter.
6. Remove the fan basket. Refer to the “Fan Basket” section in this chapter.
7. Unscrew and move aside the fan basket adapter with cable. It is not necessary to disconnect cables or remove this component completely for this procedure. Refer to the “Fan Basket Adapter with Cable” section in this chapter.
8. Disconnect the front panel LED assembly from the power backplane.

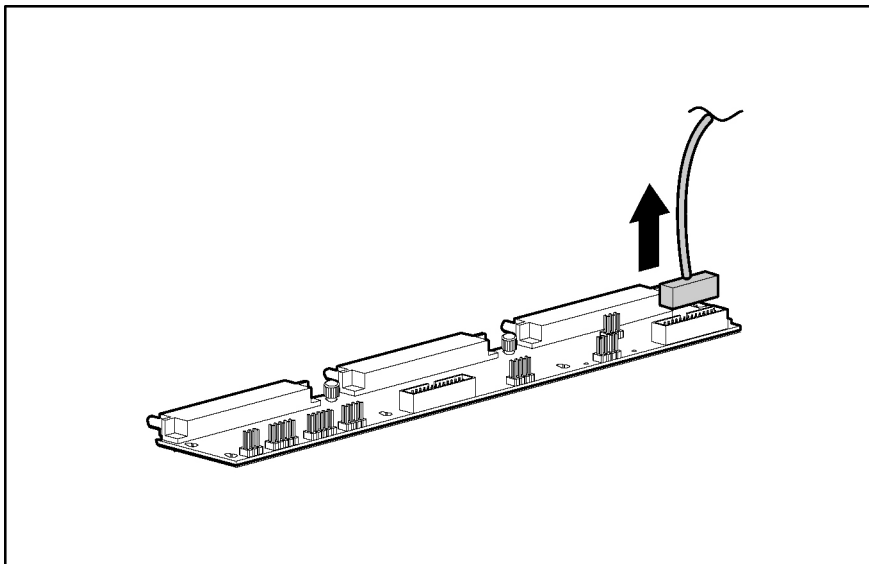


Figure 2-53: Disconnecting the front panel LED assembly power cable

9. Disconnect the cable from all cable guide clips, and pass it through the cable guide opening toward the front of the server.

10. Press the tabs inward on both sides of the front panel LED assembly (1).

NOTE: Press the tabs with your fingers. Using a screwdriver may damage the tabs.

11. With the tabs released, pull the front panel LED assembly all the way out the front of the bezel (2).

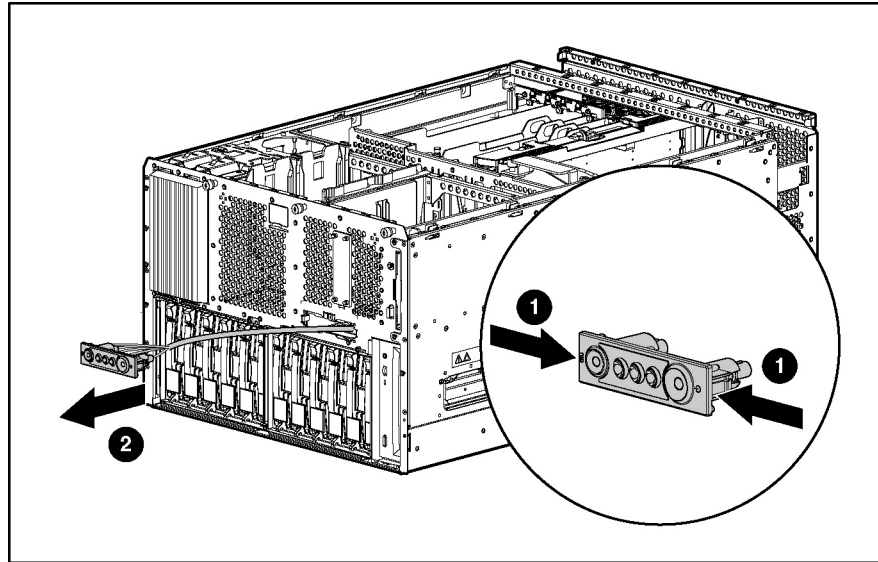


Figure 2-54: Removing the front panel LED assembly

Reverse steps 1 through 11 to replace the front panel LED and cable assembly.

Miscellaneous Mechanical Parts

Several mechanical components in the ProLiant ML530 Generation 2 server can be removed without powering down the server:

- Locking casters
- Power supply blank
- SCSI hard drive blank
- Removable media blank

Locking Casters

To remove the locking casters:

1. Prepare the server for a non-hot-plug procedure. Refer to the “Preparing the Server for Non-Hot-Plug Procedures” section in this chapter.
2. Place the server on its side and remove the three Torx T-15 screws securing each caster to the chassis (1).
3. Pull the locking casters away from the server (2).

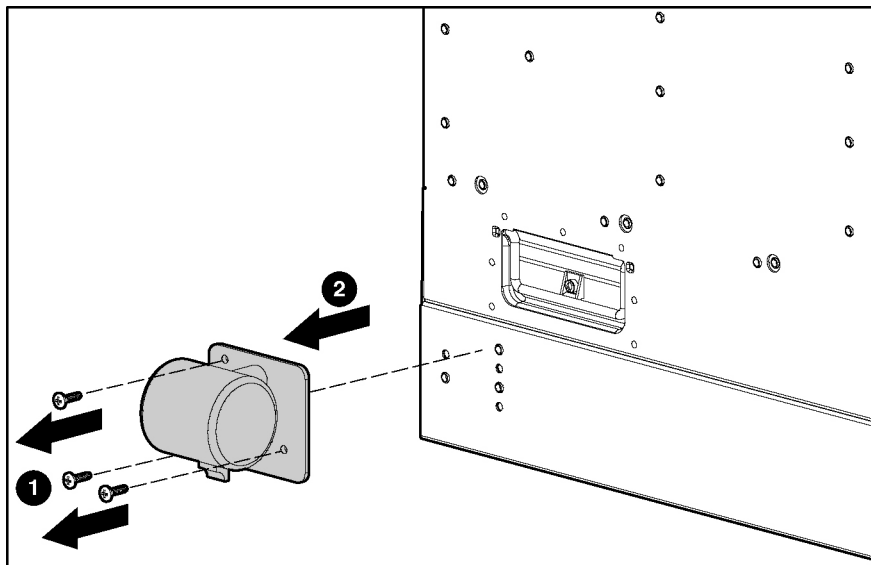


Figure 2-55: Removing the locking casters

Reverse steps 1 through 3 to replace the locking casters.

Power Supply Blank



CAUTION: Always populate power supply bays with either a hard drive or blank. Proper airflow can only be maintained when the bays are populated. Unpopulated power supply bays can lead to improper cooling and thermal damage.

NOTE: The third power supply bay is unused.

To remove a power supply blank:

1. Remove the two Torx T-15 screws securing the hot-plug power supply blank to the chassis (1).
2. Pull the power supply blank away from the chassis (2).

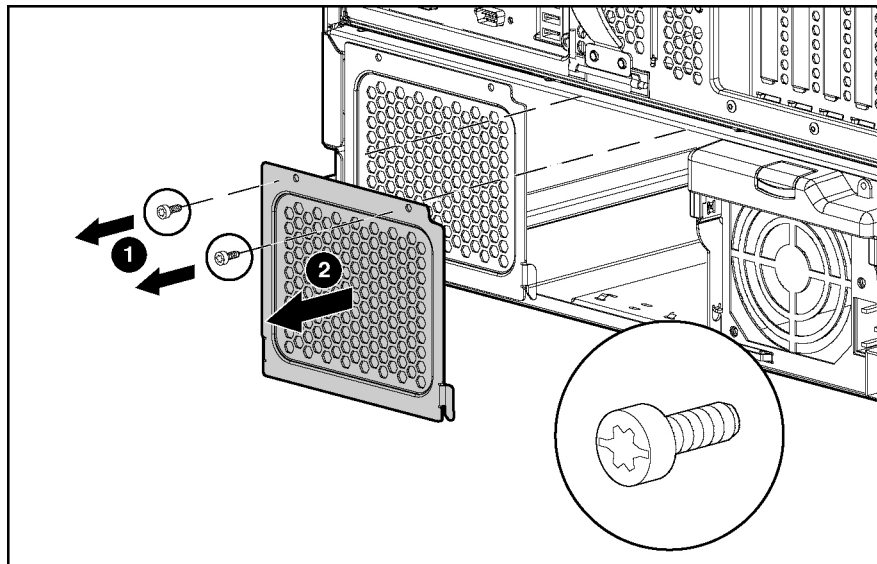


Figure 2-56: Removing the power supply blank

Reverse steps 1 and 2 to replace a power supply blank.

Hard Drive Blank

To remove a drive blank:

1. Open the front bezel door (tower model only). Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
2. Push the sliding release button to unlock the blank (1).
3. Pull the drive blank out from the drive cage (2).

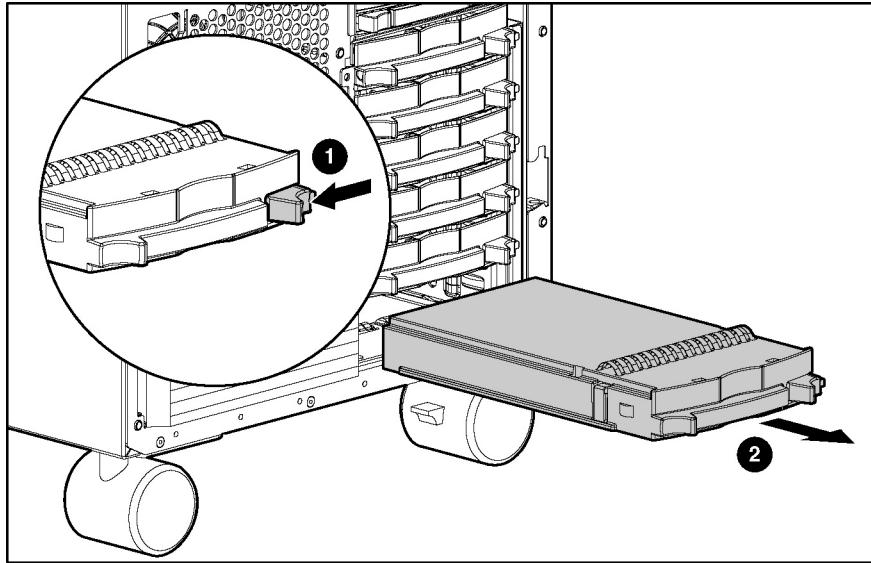


Figure 2-57: Removing a drive blank

Reverse steps 1 through 3 to replace a drive blank.

Removable Media Blank

To remove a removable media blank:

1. Remove the front bezel door (tower model only). Refer to the “Removing the Front Bezel Door (Tower Model Only)” section in this chapter.
2. Remove the access panel. Refer to the “Removing the Access Panel” section in this chapter.
3. Slide the blue locking lever on the outside of the removable media area to release the blank (1).
4. Pull the removable media blank from the removable media area (2).

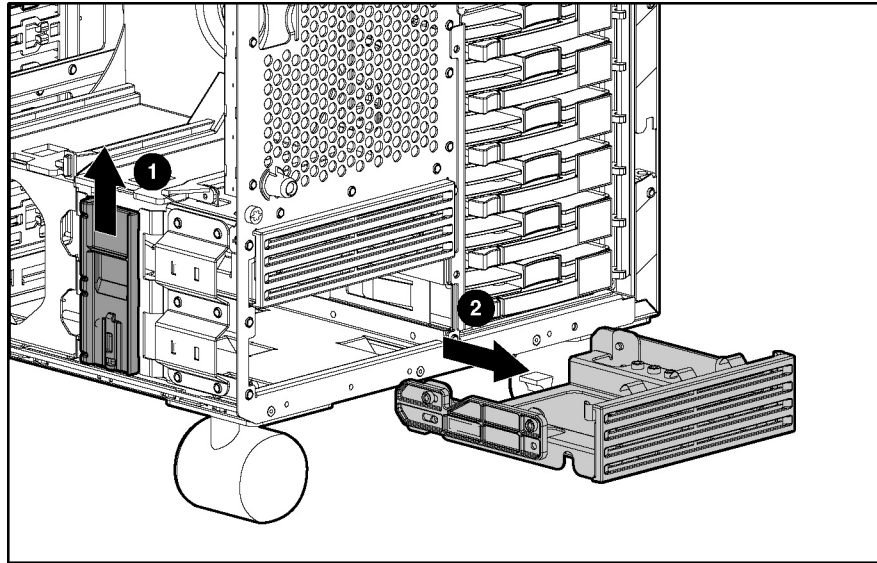


Figure 2-58: Removing a removable media blank from the removable media area

Reverse steps 1 through 4 to install a removable media blank.

Cable Routing Diagrams



CAUTION: When routing cables, always be sure that the cables are not in a position in which they can be pinched or crimped.

System Board Power Cables

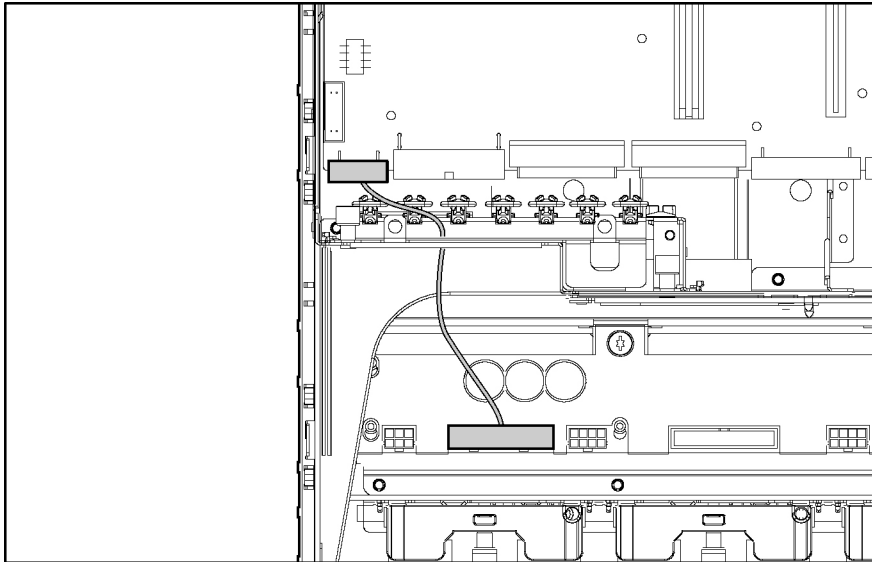


Figure 2-59: System board power cable routing

Drive Fan Power Cables

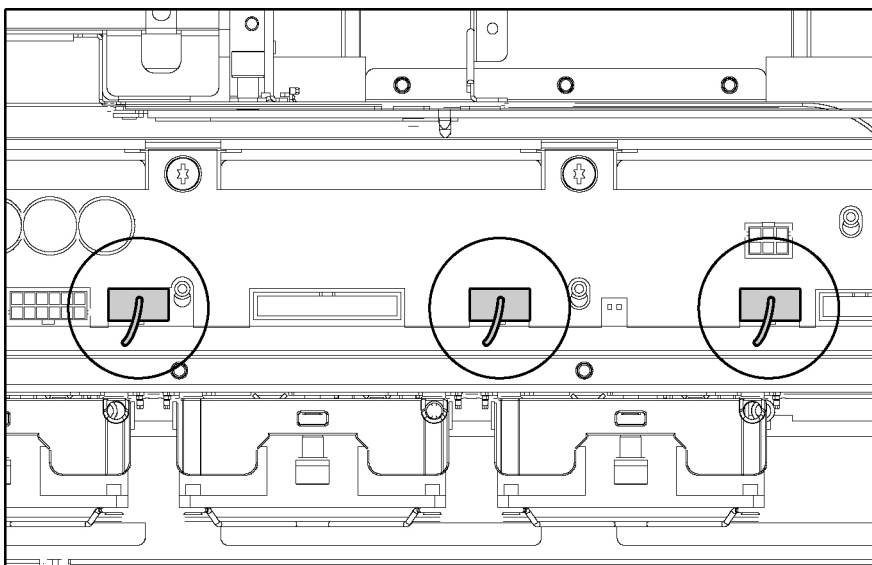


Figure 2-60: Drive fan power cable routing

Diskette and CD-ROM Drive Cables

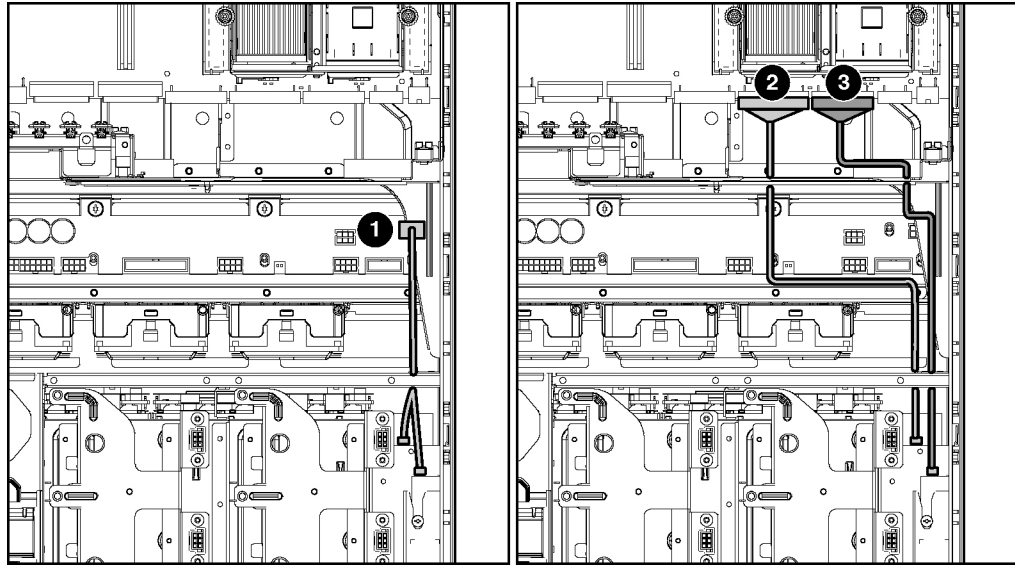


Figure 2-61: Diskette and CD-ROM drive cable routing

Table 2-9: Diskette and CD-ROM Drive Cable Routing

Item	Description
1	Power cable for both diskette and CD-ROM drives
2	Data cable for CD-ROM drive
3	Data cable for diskette drive

SCSI Backplane Power Cables

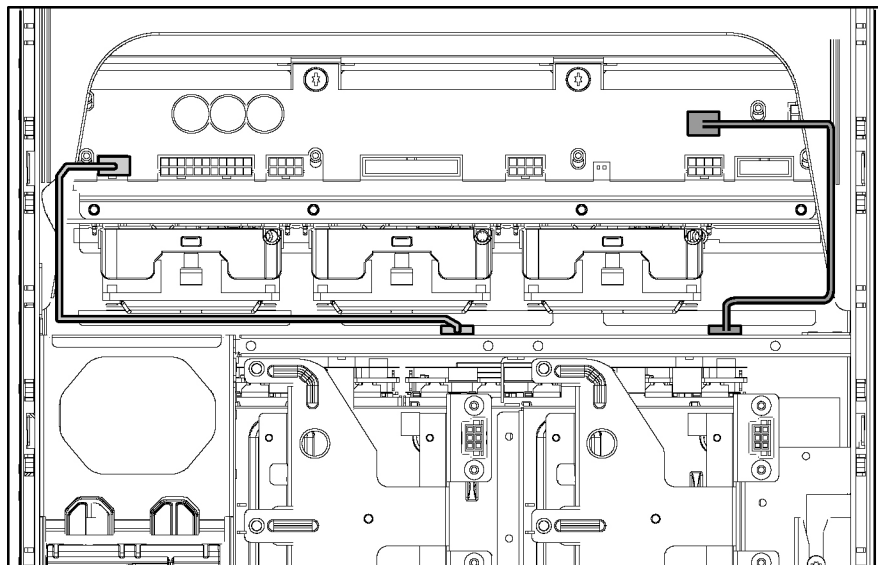


Figure 2-62: SCSI backplane power cable routing

SCSI Cables

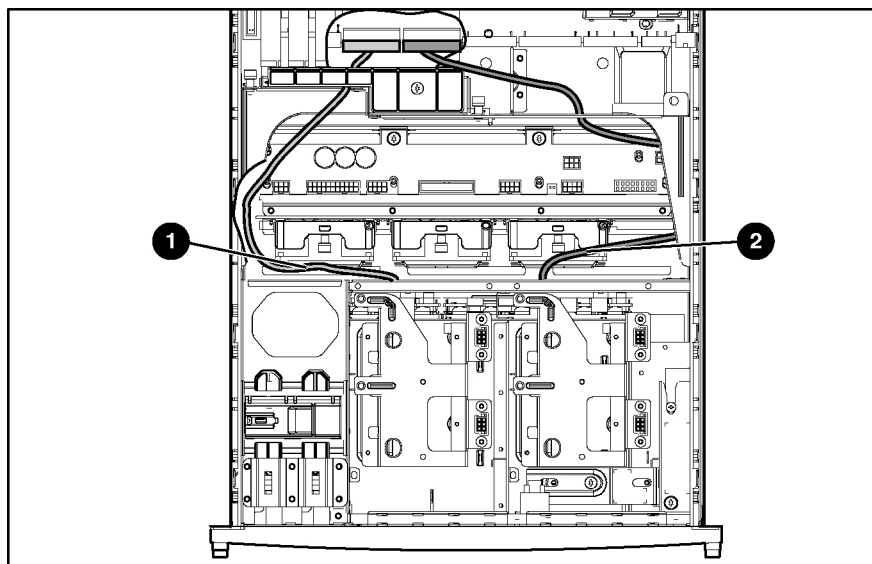


Figure 2-63: SCSI cable routing

Table 2-10: SCSI Cable Routing

Item	Description
1	SCSI A (blue)
2	SCSI B (yellow)

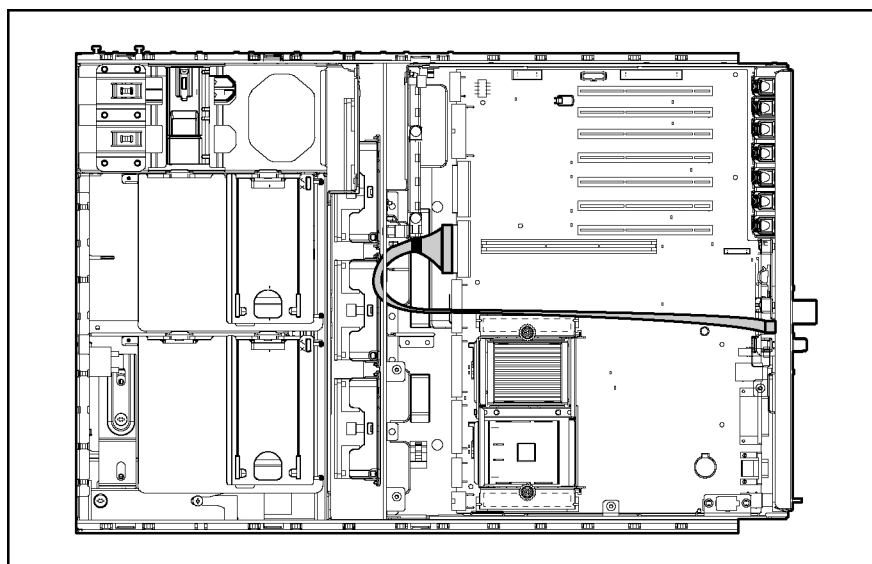


Figure 2-64: Internal-to-external SCSI cable routing

NOTE: The internal-to-external SCSI cable does not ship installed. To connect the internal-to-external cable to the system board, you must disconnect one of your drive cages from the system board. To retain use of the drive cage, you can connect the drive cage to an optional array controller.

The following table lists the cables required for each optional hardware component.

Table 2-11: Required Cables

Component	Required Cables	Cable ships with:
Drive cage A	Power	Server
	Signal	Server
Drive cage B	Power	Server
	Signal	Server
SCSI devices in the removable media bay	Power	Server
	Signal	Server
IDE devices in the removable media bay	Power	Server
	Signal	Option kit
DVD drive in the CD-ROM bay	Power	Server
	Signal	Option kit
Remote Insight lights-Out Edition	Power	Option kit
	Signal	Option kit
Front panel LED assembly	Power	Server
External storage devices	Signal	Option kit or option cable kits
External SCSI	Signal	Server

Re-entering the Server Serial Number

After replacing the system board or clearing the NVRAM, the server serial number must be re-entered.

1. During the server startup sequence, press the **F9** key to access RBSU.
2. Select the **System Options** menu.
3. Select **Serial Number**. The following warning is displayed:

WARNING! WARNING! WARNING! The serial number is loaded into the system during the manufacturing process and should NOT be modified. This option should ONLY be used by qualified service personnel. This value should always match the serial number sticker located on the chassis.

Press the **Enter** key to clear the warning.

4. Enter the serial number and press the **Enter** key.
5. Press the **Escape** key to close the menu.
6. Press the **Escape** key to exit RBSU.
7. Press the **F10** key to confirm exiting RBSU. The server will automatically reboot.

Diagnostic Tools

This chapter is an overview of software and firmware diagnostic tools that are available for configuring, monitoring, and managing ProLiant ML530 Generation 2 servers.

Use the following tools to diagnose problems, test hardware, and monitor and manage ProLiant ML530 Generation 2 server operations.

Table 3-1: Diagnostic Tools

Tool	Description	How to run the tool
Array Diagnostics Utility (ADU)	ADU is designed to run on all HP systems that support HP array controllers. ADU collects information about the array controllers in the system and generates a list of detected problems.	For a list of HP servers that support ADU, visit the HP website: www.hp.com/servers/proliant/manage For a complete list of ADU error messages, refer to the <i>Servers Troubleshooting Guide</i> .
Automatic Server Recovery-2 (ASR-2)	ASR-2 automatically restarts the server after a catastrophic operating system failure. With ASR-2, you have multiple recovery options: <ul style="list-style-type: none"> Available Recovery provides software error recovery and environmental recovery. Unattended Recovery logs the error information to the IML, resets the server, and tries to restart the operating system. 	Run RBSU and set ASR-2 to enable this tool.
HP Diagnostics	HP Diagnostics tests and verifies operation of HP hardware. If HP Diagnostics finds a hardware failure, it isolates the replaceable part, if possible.	Access HP Diagnostics when POST detects a system configuration error. For a complete list of POST error messages, refer to the <i>Servers Troubleshooting Guide</i> . HP Diagnostics can be run from the SmartStart CD or downloaded from the HP website: www.hp.com/servers/proliant/manage
Insight Manager 7	Insight Manager 7 is a client/server application used to remotely manage HP hardware in a network environment. Insight Manager 7 reports hardware fault conditions (both failure and prefailure) and collects data for reporting and graphing.	For more information on viewing and printing the event list, refer to the HP Management CD, the <i>HP Insight Manager User Guide</i> , or the <i>HP ProLiant ML530 Generation 2 Server Setup and Installation Guide</i> .

continued

Table 3-1: Diagnostic Tools *continued*

Tool	Description	How to run the tool
SmartStart for Servers	HP SmartStart software is the intelligent way to set up your HP server. The HP SmartStart for Servers CD includes the ROMPaq Utility, driver updates, and assistance installing operating systems.	Use the information provided in the ProLiant Essentials Foundation Pack.
HP Survey Utility	<p>HP Survey Utility gathers critical hardware and software information on servers running Microsoft® Windows NT®, Novell NetWare, SCO OpenServer, or SCO Unixware operating systems.</p> <p>If a significant change occurs between data-gathering intervals, the Survey Utility marks the previous information and overwrites the survey text files to reflect the latest changes in the configuration.</p>	Install the HP Survey Utility from the SmartStart CD, the HP Integration Maintenance Utility, or the HP Management CD.
Integrated Management Log (IML)	<p>The IML is a log of system events such as system failures or nonfatal error conditions. View events in the IML from within:</p> <ul style="list-style-type: none"> • Insight Manager 7 • Survey Utility • Operating-system-specific IML utilities 	The IML requires HP operating system management drivers. Refer to the SmartStart CD for instructions on installing the appropriate drivers.
ROM-Based Setup Utility (RBSU)	<p>RBSU configures the hardware installed in or connected to the server. Specifically, it can:</p> <ul style="list-style-type: none"> • Store configuration information in nonvolatile memory • Manage memory installation, processor upgrades, network interface cards and mass storage devices • Assist in installing an operating system • Configure ports and IRQs, if required 	Run RBSU by pressing the F9 key during POST.

continued

Table 3-1: Diagnostic Tools *continued*

Tool	Description	How to run the tool
ROMPaq Utility	The ROMPaq Utility checks the system and provides a choice of available ROM revisions and controller firmware.	Run this utility from the SmartStart CD included with the server.
SmartStart Diskette Builder	The SmartStart Diskette Builder is a utility that uses data stored on the SmartStart CD to create support diskettes. You can create support diskettes for specific configuration needs or for software that cannot be used directly from the SmartStart CD.	Run the diskette builder tool from the SmartStart CD.

Connectors, LEDs, and Switches

This chapter explains the location and function of system connectors, internal and external LEDs, and system board switches.

Connectors

The figures and tables in this chapter show connector locations on the system board, memory board, and rear panel of the ProLiant ML530 Generation 2 server.

System Board

Use Figure 4-1 and Table 4-1 to identify the connectors on the system board of a ProLiant ML530 Generation 2 server.

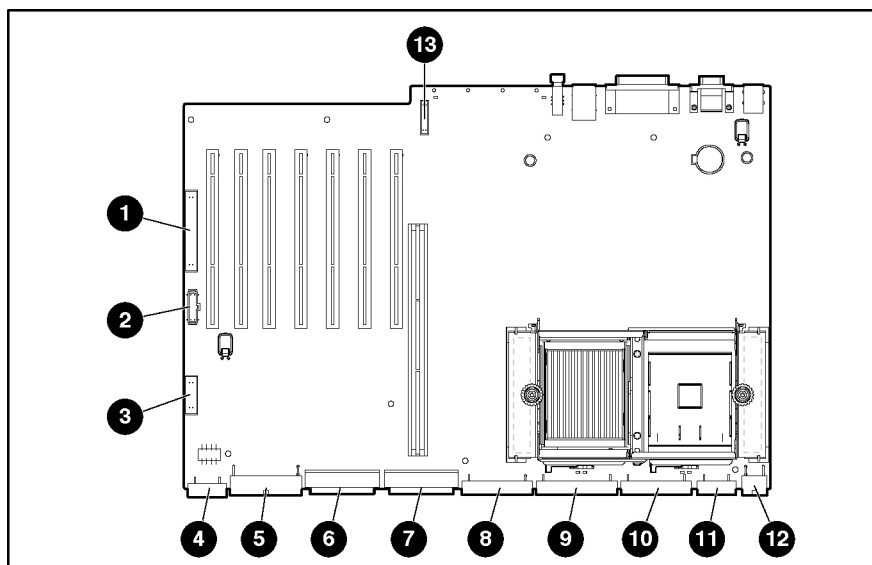


Figure 4-1: System board connectors

Table 4-1: System Board Connectors

Item	Connector
1	Secondary IDE (non-bootable)
2	Remote management (30-pin)
3	Remote management (16-pin)
4	I/O fans
5	System power
6	SCSI A (blue)
7	SCSI B (yellow)
8	Power backplane signal
9	Primary IDE (bootable) (orange)
10	Diskette drive (purple)
11	CPU fans
12	System power
13	PCI backplane

Memory Board

Use Figure 4-2 and Table 4-2 to identify the slots on the memory board of a ProLiant ML530 Generation 2 server.

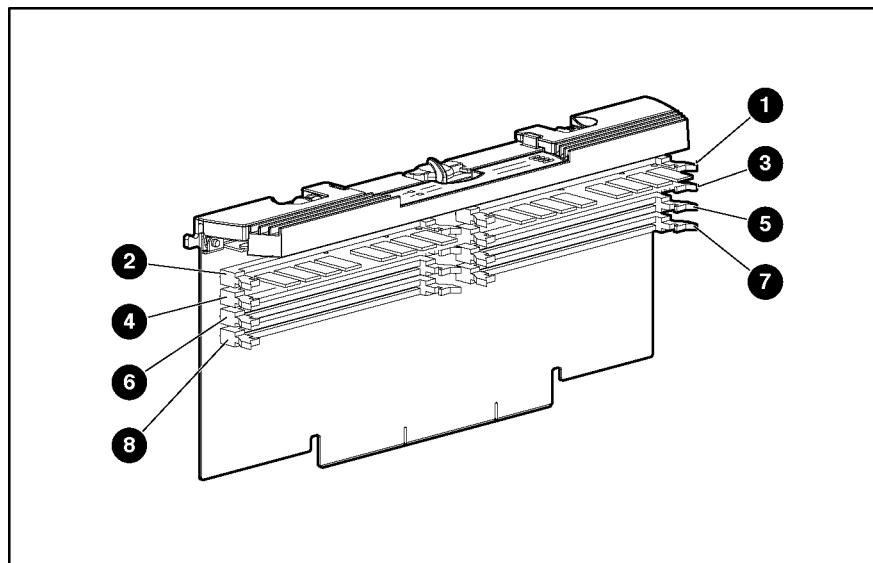


Figure 4-2: DIMM slots

Table 4-2: DIMM slots

Item	Slot	Bank
1	DIMM slot 1	Bank A
2	DIMM slot 2	
3	DIMM slot 3	Bank B
4	DIMM slot 4	
5	DIMM slot 5	Bank C
6	DIMM slot 6	
7	DIMM slot 7	Bank D
8	DIMM slot 8	

Note: When the server is configured for online spare memory, bank D is the online spare bank.

Rear Panel

Use Figure 4-3 and Table 4-3 to identify the connectors on the rear panel of a ProLiant ML530 Generation 2 server.

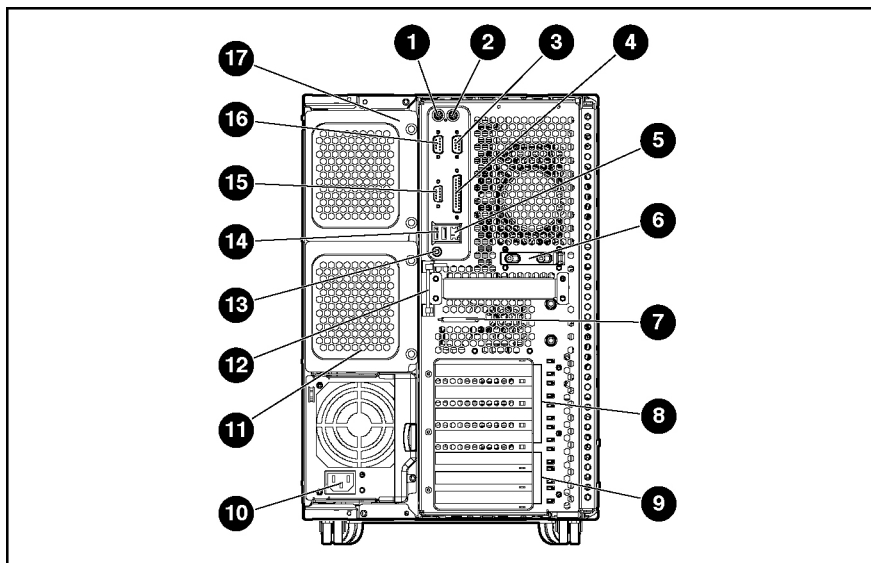


Figure 4-3: Rear panel connectors

Table 4-3: Rear Panel Connectors

Item	Description	Item	Description
1	Keyboard connector	10	Hot-plug power supply 1
2	Mouse connector	11	Hot-plug power supply bay 2 (redundant)
3	Serial connector A	12	Torx T-15 tool
4	Parallel connector	13	Unit Identification (UID) switch and LED
5	Embedded NIC connector (RJ-45)	14	USB connectors
6	Release latch	15	Video connector
7	VHDCI SCSI connector	16	Serial connector B
8	PCI-X Hot Plug expansion slots	17	Hot-plug power supply bay 3 (not used)
9	PCI-X non-hot-plug expansion slots		

System LEDs

ProLiant ML530 Generation 2 servers contain LEDs that indicate the status and settings of hardware components. This section discusses the following types and locations of LEDs:

- Front panel
- System board
- Memory board
- PCI-X Hot Plug
- Expansion slot speed
- Hot-plug power supply
- Hot-plug fan
- Embedded NIC connector (RJ-45)
- Rear UID LED
- Hot-plug hard drive

Information at the end of this section discusses the interactions between external and system board LEDs in troubleshooting or assessing system status.

Front Panel LEDs

The set of five LEDs on the front of the server indicates system health. Figure 4-1 and Table 4-4 identify and describe the location and function of each of the LEDs.

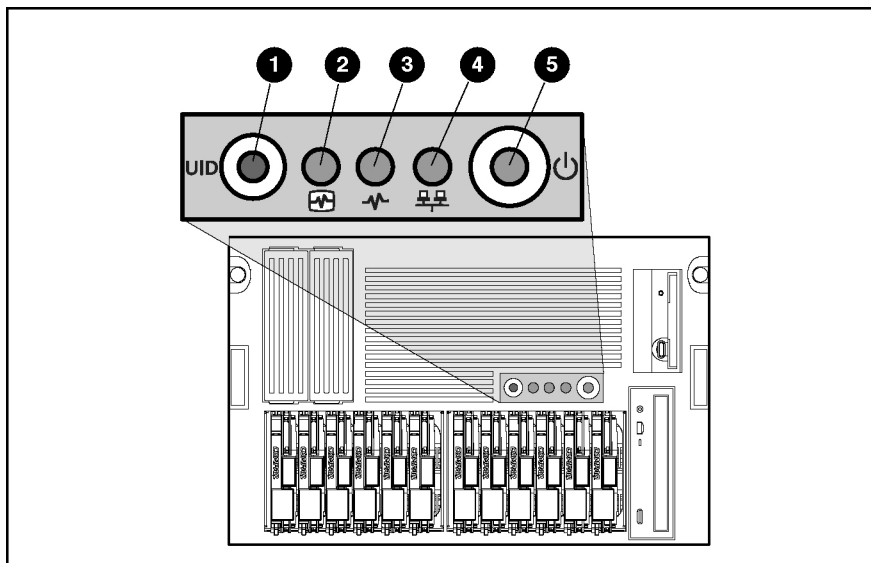


Figure 4-4: Front panel LEDs

Table 4-4: Front Panel LEDs

LED	Description	State
1	UID button and LED	Blue = Activated Blue flashing = System is being managed remotely Off = Deactivated
2	Internal health LED	Green = Normal (system on) Amber = System health degraded Red = System has critical failure Off = System is off
3	External health (power supply) LED	Green = Normal (system on) Amber = Redundant power supply failure Red = Critical power supply failure Off = System is off
4	Embedded NIC connector activity LED	Green = Network link Blinking = Network link with activity Off = No network connection
5	Power On/Standby button and LED	Amber = System is off (auxiliary power present) Green = System is on Off = Server has no A/C power

The internal health LED identifies service events for internal components in a prefailure or failed condition. Internal components include fans, processors, PPMs, memory, and over temperature conditions. For a list of these events, refer to Chapter 5, “Troubleshooting.”

System Board LEDs

Use Figure 4-5 and Table 4-5 to identify system board LED locations and status indications.

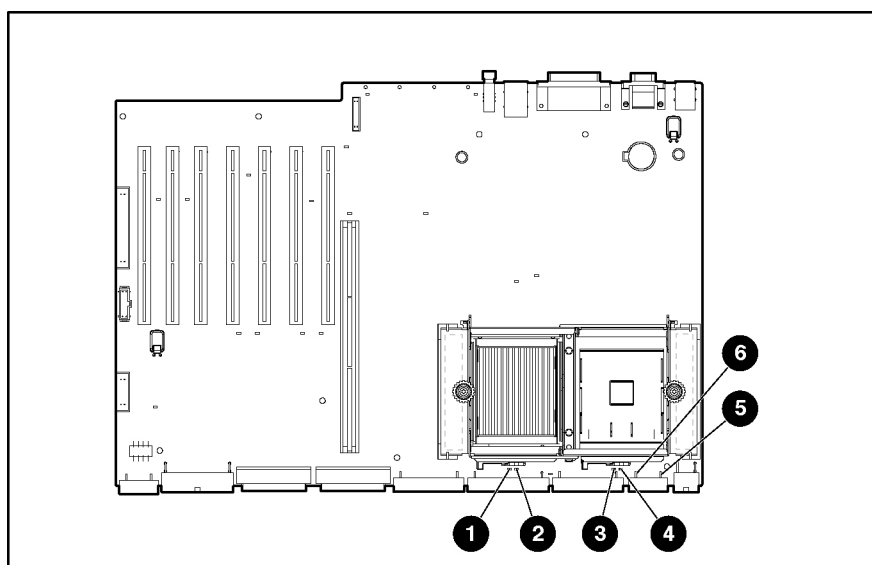


Figure 4-5: System board LEDs

Table 4-5: System Board LEDs

LED	Description	State
1	PPM 1	
2	Processor 1	Amber = Processor or PPM failed
3	PPM 2	Off = Normal
4	Processor 2	
5	Thermal warning	Amber = Thermal event Off = Normal
6	Memory board interlock LED	Amber = Memory boards interlock failed Off = Normal

Memory Board LEDs and Icons

Use the following figure and tables to identify LEDs on the memory board.

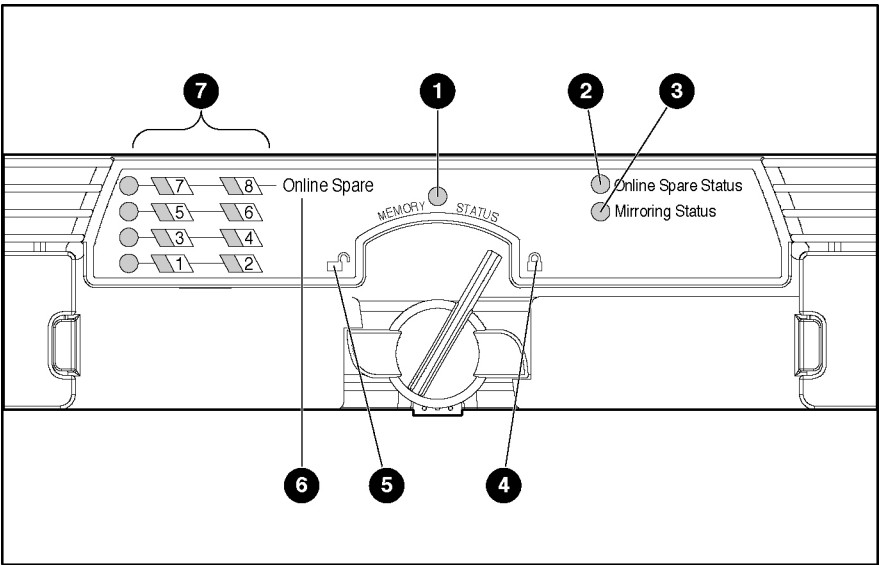


Figure 4-6: Memory board LEDs and icons

Table 4-6: Advanced ECC (Standard) Memory LEDs

Item	Description	Indicator	Status
1	Memory status	Off	Memory board is offline.
		Green	Memory board is online.
		Flashing green	Memory board is busy.
		Amber	Memory error has occurred on this memory board.
7	DIMM 1-8 status	Off	DIMM is not installed.
		Green	DIMM is installed.
		Amber	Memory error has occurred on this DIMM.
		Flashing amber	Configuration error has occurred.
1-3, 6, 7	All LEDs	Flashing amber	CAUTION—Memory board is in use; relock it immediately.

Table 4-7: Online Spare Memory LEDs

Item	Description	Indicator	Status
1	Memory status	Off	Memory board is offline.
		Green	Memory board is online.
		Flashing green	Memory board is busy.
		Amber	Memory error has occurred on this memory board.
2	Online spare status	Off	Memory board is not configured for online spare memory.
		Green	Online spare memory is functioning properly.
		Amber	Memory error has occurred and system has failed over to the online spare bank.
6	"Online Spare" text	Off	Bank is not configured as an online spare bank.
		Green	Bank is configured as an online spare bank.
		Flashing green	Failure has occurred and online spare bank is active.
7	DIMM 1-8 status	Off	DIMM is not installed.
		Green	DIMM is installed.
		Amber	Memory error has occurred on this DIMM.
		Flashing amber	Configuration error has occurred.
1-3, 6, 7	All LEDs	Flashing amber	CAUTION—Memory board is in use; relock it immediately.

Table 4-8: Single-Board Mirrored Memory LEDs

Item	Description	Indicator	Status
1	Memory status	Off	Memory board is offline.
		Green	Memory board is online.
		Flashing green	Memory board is busy.
		Amber	Memory error has occurred on this memory board.
3	Mirroring status	Off	Memory board is not configured for mirrored memory.
		Green	Single-board mirrored memory is functioning properly.
		Amber	Memory error has occurred and system has failed over to the mirrored bank(s).
7	DIMM 1-8 status	Off	DIMM is not installed.
		Green	DIMM is installed.
		Amber	Memory error has occurred on this DIMM.
		Flashing amber	Configuration error has occurred.
1-3, 6, 7	All LEDs	Flashing amber	CAUTION – Memory board is in use; relock it immediately.

Table 4-9: Memory Board Icons

Item	Description	Status
4	Lock	Memory board is locked and cannot be removed.
5	Unlock	Memory board is unlocked; do not remove unless the “ready to hot-plug” LED is green.
Note: The icon at which the memory board switch is pointed indicates whether the memory board is locked or unlocked.		

PCI-X Hot Plug LEDs

The PCI-X Hot Plug LEDs provide a visual status for each slot and are viewable from the rear or from inside the server after removing the access panel.

Use Figure 4-7 and Table 4-10 to locate PCI-X Hot Plug LEDs.

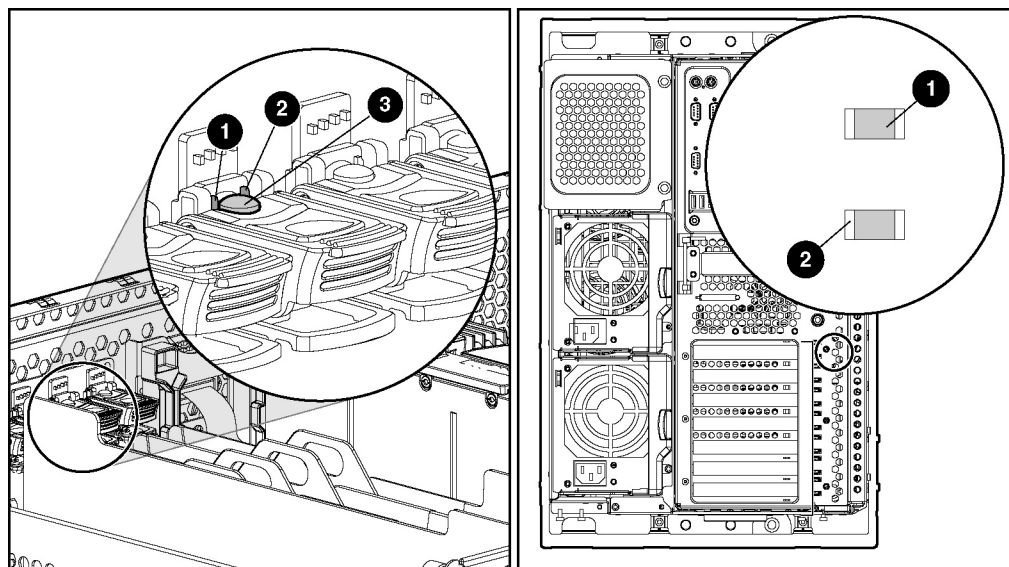


Figure 4-7: Internal and external PCI Hot Plug expansion slot LEDs

Table 4-10: Internal and External PCI Hot Plug expansion slot LEDs

Item	Description
1	Power LED (green)
2	Fault LED (amber)
3	PCI-X Hot Plug button

Use Table 4-11 to identify PCI-X Hot Plug slot activity status according to LED description.

Table 4-11: Internal and External PCI-X Expansion Slot LEDs

LED	State	OK to Open	Slot Status
Power Fault	On Off	No	Power is currently applied to the slot. Do NOT open the expansion slot latch. The slot is functioning normally.
Power Fault	On On	No	Power is currently applied to this slot, but the slot needs ATTENTION for a possible problem with the slot, expansion board, or driver. Do NOT open the expansion slot latch.
Power Fault	Flashing On or off	No	The power slot is being turned off or on, which may take several minutes. Do NOT open the expansion slot latch. Press the PCI-X Hot Plug button to cancel the operation.
Power Fault	Off On	Yes	Power to this slot is turned off, but this slot needs ATTENTION. There may be a problem with the slot, expansion board, or driver.
Power Fault	Off Off	Yes	The power to the slot is off. An expansion board may be installed in this slot.
Note: If any of the LEDs indicates an error, refer to Chapter 5, “Troubleshooting,” for more information.			

Expansion Slot Speed LEDs

The bus architecture delivers matched speed of expansion boards on the same bus.

IMPORTANT: Always pair expansion boards of the same speed on the same bus for optimal performance. If expansion boards of different speeds are installed on the same bus, the server sets the bus speed to the slower PCI board.

Use Figure 4-8 and Table 4-12 to identify the speed for each PCI-X expansion slot and to help ensure optimal performance.

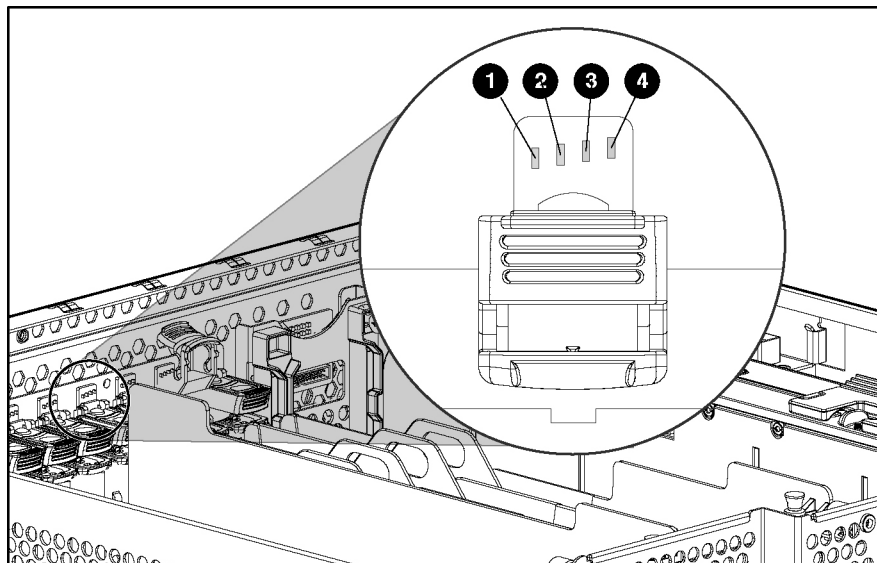


Figure 4-8: Expansion slot speed LEDs

Table 4-12: Expansion Slot Speed LEDs

LED	Slot Speed
1	33 MHz PCI
2	66 MHz PCI
3	66 MHz PCI-X
4	100 MHz PCI-X

Hot-Plug Power Supply LEDs

Determine the hot-plug power supply status by noting the color of the power supply LED located adjacent to the AC power socket.

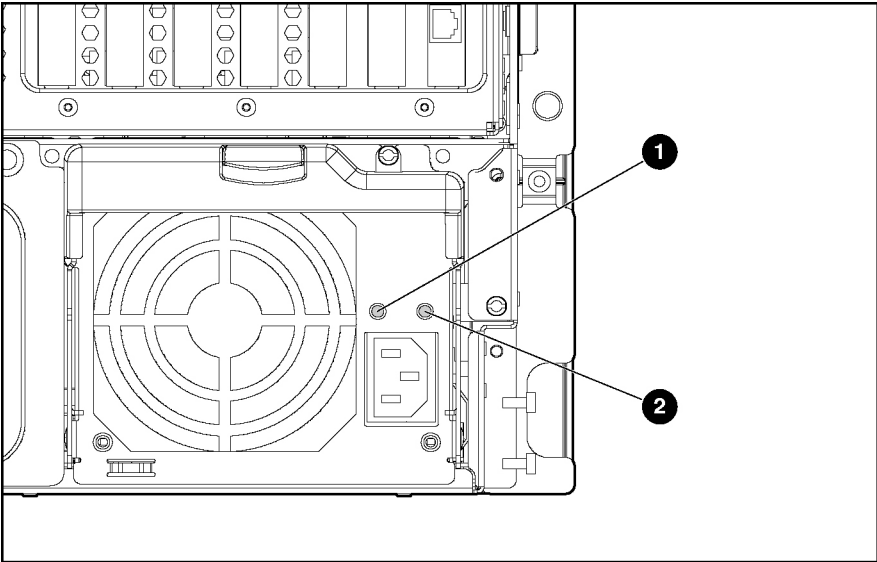


Figure 4-9: Hot-plug power supply LEDs

Table 4-13: Hot-Plug Power Supply LEDs

Power Supply Condition	1 Power LED (Green)	2 Fault LED (Amber)
No AC power to any power supply	Off	Off
No AC power to a particular power supply	Off	On
AC power present; system in standby mode	Blinking	Off
Power supply on and working properly	On	Off
Power supply current limit exceeded	On	Blinking

Hot-Plug Fan LEDs

Each hot-plug fan has a corresponding status LED in the fan basket. Use Figure 4-10 and Table 4-14 to identify the LED locations and status.

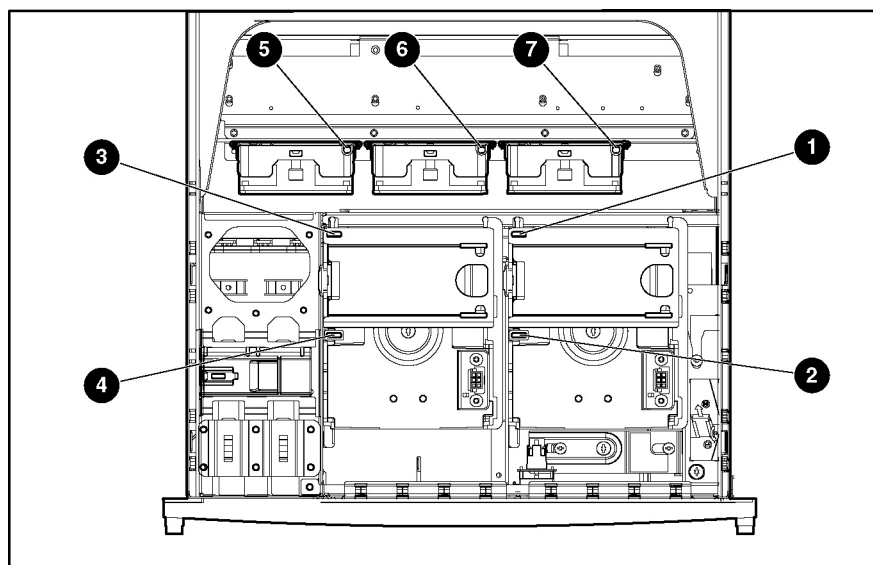


Figure 4-10: Hot-plug fan LEDs

Table 4-14: Hot-Plug Fan LEDs

Fan	Description	Status
1	Standard CPU fan	Green = The fan is operating normally. Amber = The fan has failed. Off = The fan is not installed, has no power, or is not properly seated.
2	Optional redundant CPU fan	
3	Standard I/O fan	
4	Optional redundant I/O fan	
5	Drive fan	Off = The fan is not installed, has no power, or is not properly seated.
6	Drive fan	
7	Drive fan	

Embedded NIC Connector LEDs

The RJ-45 connector for the embedded NIC, located on the rear panel, contains two LEDs. Use the following figure and table to identify the LED locations and status.

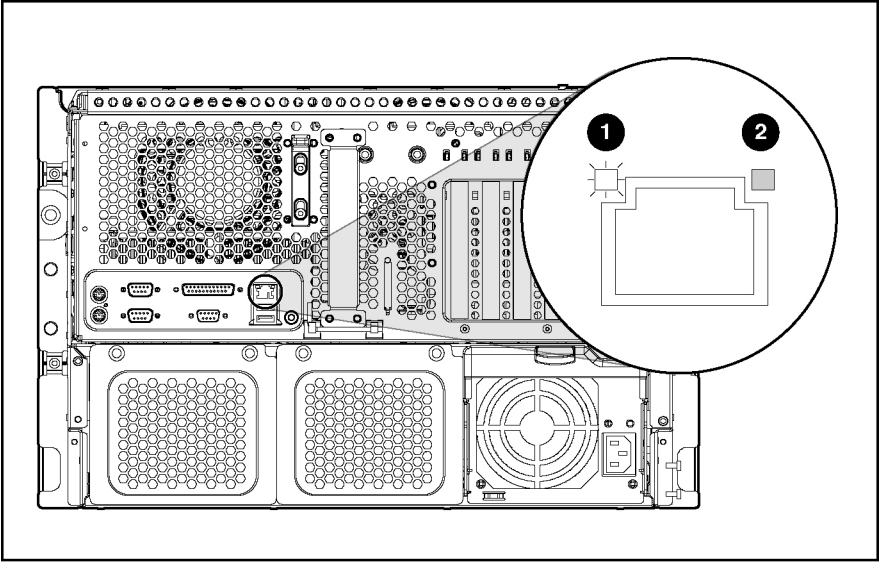


Figure 4-11: Embedded NIC connector LEDs

Table 4-15: Embedded NIC Connector LEDs

LED	Description	State
1	Activity	On or flashing = Network activity Off = No network activity
2	Link	On = Linked to network Off = No network link

Rear UID LED and Button

ProLiant ML530 Generation 2 servers include UID LEDs with buttons on both the front and rear panels. The UID LEDs indicate activity status and can be toggled on and off by the pushing the UID button or through Insight Manager 7.

The rear UID provides a visual reference for locating an individual server in a rack of servers. The rear UID contains an integrated button to activate or deactivate the LED.

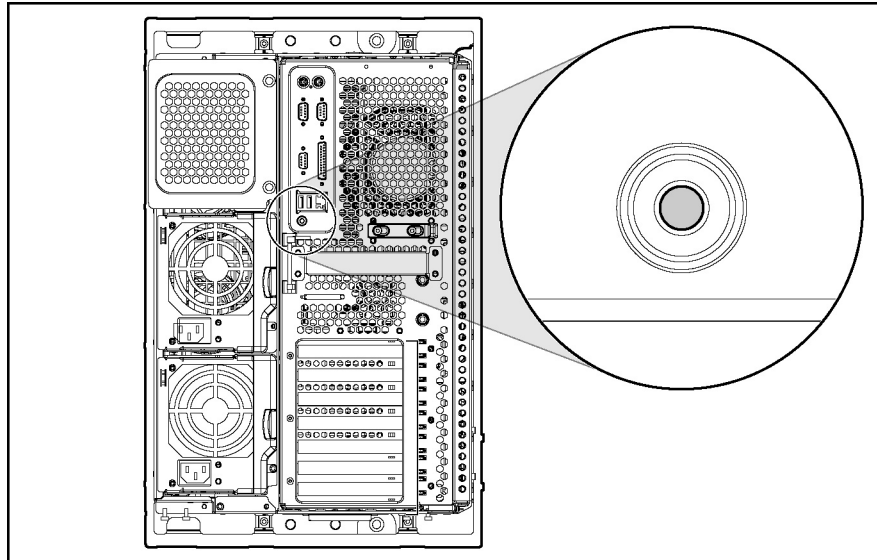


Figure 4-12: Rear UID and button (tower model)


The rear UID indicates the following states:

- Blue—The button is activated.
- Blue flashing—The system is being monitored remotely.
- Off—The button is deactivated.

NOTE: You can activate and deactivate the UID from either the front or rear UID button.

Hot-Plug Hard Drive LEDs

Each hot-plug hard drive has three LEDs located on the front of the drive. They provide activity, online, and fault status for each corresponding drive when configured as part of an array and attached to an active HP Smart Array Controller. LED behaviors may vary, depending on the status of other hard drives in the array. Use the following figure and tables to identify LED locations and analyze the status of each hot-plug hard drive.

 **CAUTION:** Read the “Hot-Plug Hard Drive Replacement Guidelines” in the *Servers Troubleshooting Guide* before removing a hard drive.

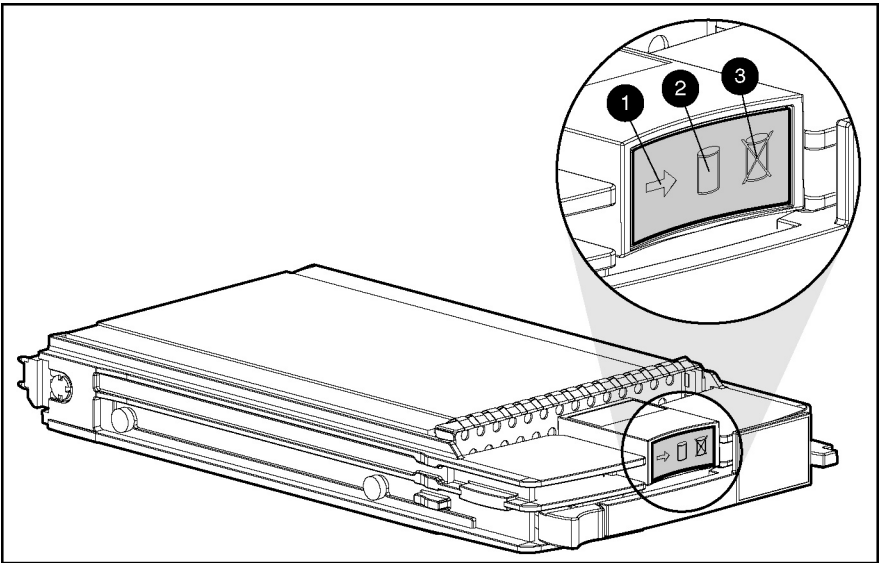


Figure 4-13: Hot-plug hard drive LEDs

Table 4-16: Hot-Plug Hard Drive LEDs

LED	Description	State
1	Drive activity	On = Drive activity Off = No drive activity
2	Online status	Flashing = Online activity Off = No online activity
3	Fault status	Flashing = Fault-process activity Off = No fault-process activity

Table 4-17: Hot-Plug Hard Drive LED Combinations

Activity LED	Online LED	Fault LED	Status
On	Off	Off	<p>Do not remove the drive. Removing a drive during this process causes data loss.</p> <p>The drive is being accessed and is not configured as part of an array.</p>
On	Flashing	Off	<p>Do not remove the drive. Removing a drive during this process causes data loss.</p> <p>The drive is rebuilding or undergoing capacity expansion.</p>
Flashing	Flashing	Flashing	<p>Do not remove the drive. Removing a drive during this process causes data loss.</p> <p>The drive is part of an array being selected by the Array Configuration Utility.</p> <p>-Or-</p> <p>The Options ROMPaq is upgrading the drive.</p>
Off	Off	Off	<p>OK to replace the drive online if a predictive failure alert is received and the drive is attached to an array controller.</p> <p>The drive is not configured as part of an array.</p> <p>-Or-</p> <p>If this drive is part of an array, a powered-on controller is not accessing the drive.</p> <p>-Or-</p> <p>The drive is configured as an online spare.</p>
Off	Off	On	<p>OK to replace the drive online.</p> <p>The drive has failed and has been placed offline.</p>
Off	On	Off	<p>OK to replace the drive online if a predictive failure alert is received (refer to the following section for details), provided that the array is configured for fault tolerance and all other drives in the array are online.</p> <p>The drive is online and configured as part of an array.</p>
On or flashing	On	Off	<p>OK to replace the drive online if a predictive failure alert is received (refer to the following section for details), provided that the array is configured for fault tolerance and all other drives in the array are online.</p> <p>The drive is online and being accessed.</p>

System LEDs and Internal Health LED Status Combinations

When the internal health LED on the front panel illuminates either amber or red, the server is experiencing a health event. The combinations of illuminated system LEDs and the internal health LED in the following table indicate system status.

NOTE: The system management driver must be installed in order for the internal health LED to provide Pre-Failure Warranty conditions.

The internal health LEDs on the front panel indicate the current hardware status and are used to assist in initial troubleshooting. Note that in some situations, Insight Manager 7 reports server status differently than the health LEDs because it tracks more system attributes.

Table 4-18: System LEDs and Internal Health LED Status Combinations

System LED and Color	Internal Health LED Color	Status
Processor failure (amber)	Red	<ul style="list-style-type: none"> Processor has failed. Required processor is not installed in socket. ROM detects a failed processor during POST.
	Amber	Processor is in prefailure condition.
PPM failure (amber)	Red	<ul style="list-style-type: none"> PPM has failed. PPM is not installed, but the corresponding processor is installed.
DIMM failure (amber)	Red	DIMM has experienced a multi-bit error.
	Amber	DIMM has reached single-bit correctable error threshold.
DIMM failure, all slots in one bank (amber)	Red	Interleaving error: The bank is not populated entirely, or DIMMs do not all match within the bank.
DIMM failure, all slots (amber)	Red	No valid or usable memory is installed in the system.
Thermal warning (amber)	Red	System has exceeded operating system cautionary level or critical hardware level.
	Green	Normal
Fan (amber)	Red	A required fan has failed or is missing.
	Amber	A redundant fan has failed.
Power supply (off)	Red	A required power supply has failed.
	Amber	A redundant power supply has failed.

System Board Switches

Some server operations, including adding or removing a component, changing a security feature, or reconfiguring the server from tower to rack, require that you reconfigure a system switch. If the system configuration is incorrect, the server may not work properly and you may receive error messages on the screen.

This section discusses the following system board switches:

- System maintenance
- Non-maskable interrupt (NMI)

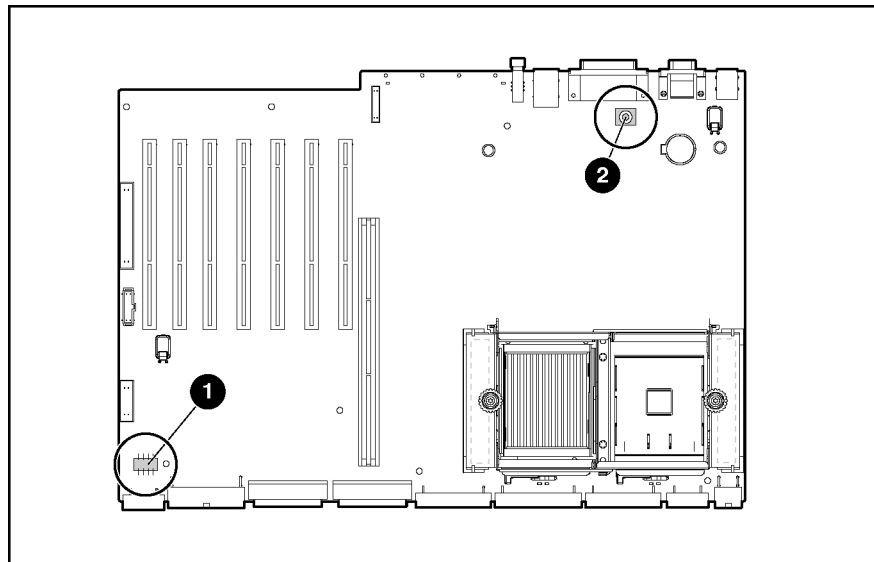


Figure 4-14: System board switches

Table 4-19: System Board Switches

Switch	Switch Type
1	System maintenance switch (SW4)
2	NMI switch (SW3)

System Maintenance Switch

The system maintenance switch (SW4) is an eight-position switch that is used for system configuration. The default setting for all six positions is off.

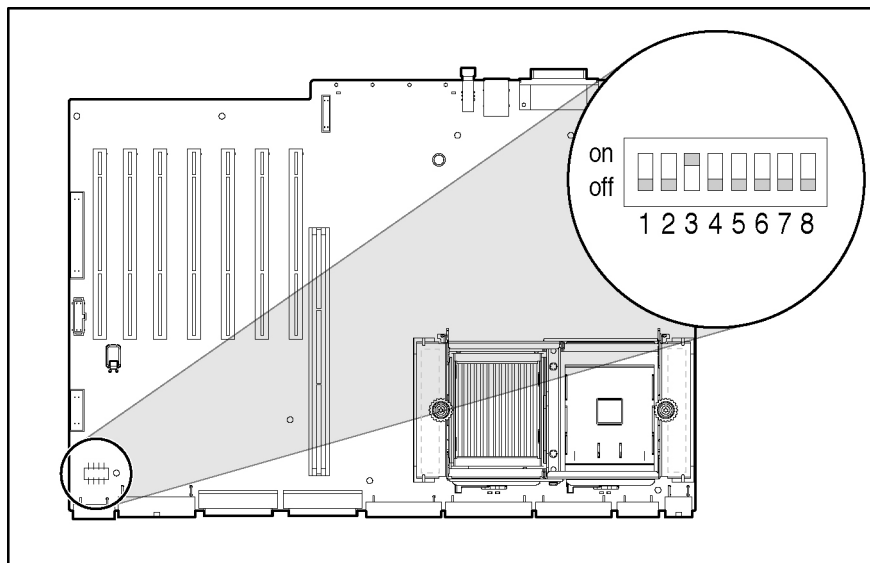


Figure 4-15: System maintenance switch (SW4)

Table 4-20: System Maintenance Switch (SW4)

Position	Description	On/Off Function
1	Reserved*	
2	Lock configuration information	Off = System configuration can be changed. On = System configuration is locked and cannot be changed.
3	Tower/rack model select	Off = System is in a tower configuration. On = System is in a rack configuration.
4	Enable diskette boot	Off = Booting from diskette is controlled by RBSU. On = Booting from diskette is enabled and RBSU setting is overridden.
5	Clear system passwords*	Off = System passwords work normally. On = System passwords will be erased.
6	Invalidate NVRAM and CMOS* **	Off = No function is available. On = ROM treats system configuration as invalid.
7	Reserved	
8	Reserved	

* To access redundant ROM, set system maintenance switches 1, 5, and 6 to the "on" position. Refer to the *HP ProLiant ML530 Generation 2 Server Setup and Installation Guide* for more information.

** The server serial number must be re-entered through RBSU after clearing the NVRAM. Refer to "Re-entering the Server Serial Number" in Chapter 2.

Non-Maskable Interrupt Switch

Crash dump analysis is an essential part of eliminating reliability problems such as hangs or crashes in operating systems, device drivers, and applications. Many crashes freeze a system requiring you to do a hard reset. Resetting the system erases any information that supports root cause analysis.

When an operating system crashes, system administrators can perform an NMI event by pressing a dump switch. The NMI event enables a hung system to once again become responsive.

The NMI switch is used **ONLY** in the event of a service emergency that requires a complete data dump in preparation for recovering the system from a catastrophic event.

System Configuration Settings

It may be necessary at some time to clear and reset system configuration settings. When the system maintenance switch position 6 is set to the on position, the system is prepared to erase all system configuration settings from both CMOS and NVRAM. For additional information about locating the switch and switch settings, refer to “System Maintenance Switch” in this chapter. The default setting for all positions is off.

IMPORTANT: Clearing CMOS and/or NVRAM deletes your configuration information. Refer to the *HP ProLiant ML530 Generation 2 Server Setup and Installation Guide* for complete instructions on configuring the server.

NOTE: The server serial number must be re-entered through RBSU after clearing the NVRAM. Refer to “Re-entering the Server Serial Number” in Chapter 2.

To erase all system configuration settings:

1. Power down the server.
2. Remove the access panel.
3. Set the position 6 lever to the “on” position.
4. Power up the server, and wait for the system to display a message confirming that the maintenance switch has been set.
5. Power down the server.
6. Reset the position 6 lever to the default “off” position.
7. Power up the server.
8. Press the **F9** key to run RBSU and reset all system configuration settings.

For instructions on using RBSU to reset system configuration settings, refer to the *HP ProLiant ML530 Generation 2 Server Setup and Installation Guide*.

Troubleshooting

This chapter provides specific troubleshooting information for the HP ProLiant ML530 Generation 2 server. Use it to find details about server startup and operation errors.

For a list of new server error messages specific to this server, refer to the *HP ProLiant ML530 Generation 2 Server Setup and Installation Guide*. For information on LEDs and switches specific to the server, refer to Chapter 4, “Connectors, LEDs, and Switches.”

For a more detailed discussion of troubleshooting techniques, diagnostic tools, error messages, and preventative maintenance, refer to the *Servers Troubleshooting Guide* included on the Documentation CD that ships with the server.



WARNING: There is a risk of personal injury from hazardous energy levels. The installation of options and the routine maintenance and service of this product shall be performed by individuals who are knowledgeable about the procedures, precautions, and hazards associated with equipment containing hazardous energy circuits.

This chapter includes the following topics:

- **When the Server Does Not Start**

You are provided with initial instructions on what to try and where to go for help for the most common problems encountered during the initial Power-On Self-Test (POST). A successful startup requires the server to complete this test each time you power up, before the server can load the operating system and start running software applications.
- **Diagnostic Steps**

If the server does not power up after you have performed initial troubleshooting procedures, use the tables in this section to identify possible reasons for the problem, possible solutions, and references to other sources of information.
- **Problems After Initial Boot**

Once the server has passed the POST, you may still encounter errors such as an inability to load your operating system. You are provided with instructions on what to try and where to go for help when you encounter errors after the server completes the POST.

- ROMPaq Disaster Recovery

During troubleshooting, it may become apparent that your system ROM is corrupted. Because the server has redundant ROM capability, you can use the backup ROM until it is feasible to bring the server down. If both ROMs are corrupted, you will need to perform the ROMPaq disaster recovery procedure before the server will boot.

- Other Information Resources

This section provides a list of reference information available for the server.

For troubleshooting information beyond the scope of this guide, both general and specific to ProLiant ML530 Generation 2 servers, refer to Table 5-8.

When the Server Does Not Start

This section provides systematic instructions on what to try and where to go for help for the most common problems encountered during initial POST. The server must complete this test each time you power up before it can load the operating system and start running software applications.



WARNING: There is a risk of personal injury from hazardous energy levels. The installation of options, and the routine maintenance and service of this product shall be performed by individuals who are knowledgeable about the procedures, precautions, and hazards associated with equipment containing hazardous energy circuits.

If the server does not start:

1. Verify that the server and monitor are plugged into a working outlet.
2. Make sure that your power source is working properly:
 - a. Check the status using the system power LED.
 - b. Verify that the Power On/Standby button was pressed firmly.
3. Make sure that the power supplies are working properly by checking the power supply LEDs.

NOTE: For information on LEDs and switches specific to the server, refer to Chapter 4, “Connectors, LEDs, and Switches.” For more information about power, refer to the “Power Source” section in the *Servers Troubleshooting Guide*.

4. If the system does not complete POST or start loading an operating system, refer to “Loose Connections” in the *Servers Troubleshooting Guide*.
5. If the server is rebooting repeatedly, verify that the system is not rebooting due to a problem that initiates an ASR-2 reboot.

Some operating systems reboot the server when an error occurs. This is the default in Windows 2000.

6. Restart the server.

IMPORTANT: If the server does not restart, proceed to the following section, “Diagnostic Steps.”

7. Check the server for the following normal power-up sequence to verify that your system meets the minimal hardware requirements and is powered up during normal operations:
 - a. The power button LED turns from standby (amber) to on (green).
 - b. The fans start up.
8. Check the monitor for the following messages that verify your system meets the minimal hardware requirements and is powered up during normal operations:
 - a. HP ProLiant logo
 - b. BIOS information
 - c. Copyright information
 - d. Processor initialization
 - e. Multi-initiator configuration

IMPORTANT: Select the multi-initiator configuration utility (CTRL-A) only to support HP storage and clustering options. Refer to the *HP ProLiant ML530 Generation 2 Server Setup and Installation Guide* for additional information.

 - f. PXE initialization
 - g. Option ROMs
 - h. SCSI devices
9. The operating system loads to complete the boot process.

If the server completes POST and attempts to load the operating system, go to the “Problems After Initial Boot” section in this chapter.

Diagnostic Steps

If the server does not power up, or powers up but does not complete POST, answer the questions in Table 5-1 to determine appropriate actions based on the symptoms observed. The flow of questions reflects the usual flow of events during a power-on sequence.

According to the answers you give, you will be directed to an appropriate secondary table in this section. The table outlines possible reasons for the problem, options available to assist in diagnosis, possible solutions, and references to other sources of information.

Table 5-1: Diagnostic Steps

Question	Action
Question 1: Is the system power button LED off?	If no, continue to question 2. If yes, refer to Table 5-2.
Question 2: Is the system power button LED green?	If yes, continue to question 3. If no, refer to Table 5-3.
Question 3: Is the external health LED green?	If yes, continue to question 4. If no, refer to Table 5-4.
Question 4: Is the internal health LED green?	If yes, continue to question 5. If no, refer to Table 5-5.
Question 5: Is the monitor displaying information?	If yes, use the POST messages for further diagnosis. Refer to Table 5-6 for details. If no, refer to Table 5-6.

Table 5-2: Is the System Power LED Off?

Answer	Possible Reasons	Possible Solutions
Yes, it is off	The system is not connected to AC power, or no AC power is available.	Be sure that the power cord is connected to the power supply.
	A power supply problem exists. The power supply may not be connected or inserted properly, it may have a damaged connector, or it may have failed.	Be sure that the power supply is undamaged, the power supply is fully seated, and the power supply LED is green when you power up the server.
	There is a broken connection between the front panel LED assembly and the power backplane.	Be sure that the system power and power supply signal cables are connected to the system board and power backplane.
	The front panel LED assembly has failed.	Be sure that the front panel LED assembly cable is connected to the power backplane. Refer to “Power Problems” and “General Hardware Problems” in the <i>Servers Troubleshooting Guide</i> for further options. If these solutions do not solve the problem, contact your HP authorized service provider for assistance.
No	If the system power button LED is amber, do the following: 1. Press the Power On/Standby button. 2. Refer to Table 5-3.	
Note: For LED locations and functions, refer to Chapter 4, “Connectors, LEDs, and Switches.” For cabling configurations, refer to the <i>HP ProLiant ML530 Generation 2 Server Setup and Installation Guide</i> .		

Table 5-3: Is the System Power LED Green?

Answer	Possible Reasons	Possible Solutions
No, it is off	Power On/Standby button has not been pressed firmly.	Firmly press the power button.
	A power supply problem exists. The power supply may not be connected or inserted properly, it may have a damaged connector, or it may have failed.	Be sure that the power supply is undamaged, the power supply is fully seated, and the power supply LED is green.
	The system may have experienced a short.	Check for bent connector pins and improperly seated expansion boards.
	The front panel LED assembly has failed.	Be sure that the front panel LED assembly cable is connected to the power backplane. If these solutions do not solve the problem, contact your HP authorized service provider for assistance.
Yes	If the system power button LED is green, refer to Table 5-4.	
Note: For LED locations and functions, refer to Chapter 4, “Connectors, LEDs, and Switches.” For cabling configurations, refer to the <i>HP ProLiant ML530 Generation 2 Server Setup and Installation Guide</i> .		

Table 5-4: Is the External Health LED Green?

Answer	Possible Reasons	Possible Solutions
No, it is amber	One power supply has failed; therefore, power supply redundancy is lost.	<p>Be sure that each installed power supply is securely connected to an AC power source.</p> <p>Locate the amber power supply LED to identify the failed power supply.</p> <p>Contact your HP authorized service provider for replacement parts and service.</p>
No, it is red	All installed power supplies have experienced a failure.	<p>Remove all AC power from power supplies and reconnect to clear the error condition.</p> <p>Replace the power supply. Contact your HP authorized service provider for replacement parts and service.</p>
Yes	If the external health LED is green, refer to Table 5-5.	
Note: For LED locations and functions, refer to Chapter 4, “Connectors, LEDs, and Switches.” For cabling configurations, refer to the <i>HP ProLiant ML530 Generation 2 Server Setup and Installation Guide</i> .		

Table 5-5: Is the Internal Health LED Green?

Answer	Possible Reasons	Possible Solutions
No, it is amber	<p>A processor is in prefailure condition.</p> <p>A DIMM is in prefailure condition.</p> <p>One memory bank is valid, but another bank is missing a DIMM.</p> <p>One memory bank is valid, but another bank has mismatched DIMMs installed.</p> <p>One memory bank is valid, but another bank has an unsupported DIMM type installed.</p> <p>A redundant fan has failed.</p>	<p>Use internal component failure LEDs to identify:</p> <ul style="list-style-type: none">• Missing components• Degraded components• Failed components• Improperly installed components <p>For corrective procedures, refer to Chapter 2, “Removal and Replacement Procedures.”</p> <p>Contact your HP authorized service provider for replacement parts and service.</p>
No, it is red	<p>A processor has failed.</p> <p>Processor 1 is not installed.</p> <p>A processor is an unsupported type.</p> <p>Processor voltage requirements are mismatched.</p> <p>Processor does not have an associated PPM installed.</p> <p>A PPM has failed.</p> <p>A DIMM has experienced a multi-bit error.</p> <p>DIMM pairs have mismatched DIMMs.</p> <p>DIMMs are missing.</p> <p>DIMMs are an unsupported type.</p> <p>A required fan has failed.</p> <p>A thermal event has occurred.</p> <p>A component is not properly seated.</p> <p>Memory board is missing.</p>	<p>Use internal component failure LEDs to identify:</p> <ul style="list-style-type: none">• Missing components• Failed components• Improperly installed components• Thermal event <p>For corrective procedures, refer to Chapter 2, “Removal and Replacement Procedures.”</p> <p>Contact your HP authorized service provider for replacement parts and service.</p> <p>Be sure that all components are seated securely.</p> <p>Add memory board.</p>
Yes	If the internal health LED is green, refer to Table 5-6.	
Note: For LED locations and functions, refer to Chapter 4, “Connectors, LEDs, and Switches.”		

Table 5-6: Is the Monitor Displaying Information?

Answer	Possible Reasons	Possible Solutions
No	The monitor may not have power.	Be sure that the monitor AC power cord is plugged in and that the monitor power button has been pressed.
	Video may not be connected properly.	<p>If a video card is installed, be sure that the video cable is properly connected.</p> <p>If a Remote Insight Lights-Out Edition expansion board is installed, verify that the video cable is connected to the video connector on this expansion board.</p> <p>Verify the video connections. Refer to “Video Problems” in the <i>Servers Troubleshooting Guide</i>.</p>
	Non-volatile RAM (NVRAM) may be corrupted.	<p>Clear NVRAM. Refer to Caution below. Refer to Chapter 4 for the correct switch setting.</p> <p>Are there any audible indicators, such as a series of beeps? A series of beeps is the audible signal indicating the presence of a POST error message. Refer to the “POST Error Messages” appendix in the <i>Servers Troubleshooting Guide</i> for a complete description of each beep sequence and the corresponding error messages.</p>
	The system ROM and redundant ROM may be corrupted.	<p>If the system ROM and redundant ROM are corrupt, refer to “ROMPaq Disaster Recovery” in this chapter for instructions on performing a recovery procedure.</p> <p>If these steps do not solve the problem, contact your HP authorized service provider for assistance.</p>
Yes	Video is available for diagnosis. Determine the next action by observing POST progress and error messages. Refer to the <i>Servers Troubleshooting Guide</i> for a complete description of each POST error message.	



CAUTION: Clearing non-volatile RAM (NVRAM) deletes your configuration information. Refer to Chapter 4, “Connectors, LEDs, and Switches” for complete instructions prior to performing this operation or data loss could occur.

NOTE: The server serial number must be re-entered through RBSU after clearing the NVRAM. Refer to “Re-entering the Server Serial Number” in Chapter 2.

Problems After Initial Boot

Once the server has passed POST, you may still encounter errors, such as an inability to load your operating system. Use the following table to troubleshoot server installation problems that occur after the initial boot.


Refer to “Software Problems” in the *Servers Troubleshooting Guide* for more information.

Table 5-7: Problems After Initial Boot

Problem	Possible Reasons	Possible Solutions
System cannot load SmartStart.	SmartStart requirement not performed.	Check the SmartStart Release Notes provided in the SmartStart Online Reference Information on the SmartStart for Servers CD.
	IDE cable or power cable not connected to CD-ROM drive.	Check the IDE signal cable between the system board and CD-ROM to ensure proper connection. Check the power supply connection between the CD-ROM drive and the power backplane.
	Insufficient memory is available.	A rare “insufficient memory” message may display the first time SmartStart is booted on certain unconfigured systems. Cold-boot the machine with the SmartStart for Servers CD inserted in the CD-ROM drive to correct the problem.
	Existing software is causing conflict.	Run the HP System Erase Utility. Read the Caution on the following page. Refer to the instructions in the <i>Servers Troubleshooting Guide</i> .

continued

Table 5-7: Problems After Initial Boot *continued*

Problem	Possible Reasons	Possible Solutions
SmartStart fails during installation.	Error occurs during installation.	Follow the error information provided. If it is necessary to reinstall, run the HP System Erase Utility. Read the Caution below. Refer to the instructions in the <i>Servers Troubleshooting Guide</i> .
	CMOS is not cleared.	Run the HP System Erase Utility. Read the Caution below. Refer to the instructions in the <i>Servers Troubleshooting Guide</i> .
Server cannot load operating system.	Required operating system step was missed.	Follow these steps: <ol style="list-style-type: none"> 1. Note at which phase the operating system failed. 2. Remove any loaded operating system. 3. Refer to your operating system documentation. 4. Install the operating system again.
	Installation problem occurred.	Refer to your operating system documentation and to the SmartStart Release Notes on the SmartStart for Servers CD. Run RBSU and check the OS Selection menu.
	Problem was encountered with the hardware you have added to the system.	Refer to the documentation provided with the hardware. Refer to the <i>HP ProLiant ML530 Generation 2 Server Setup and Installation Guide</i> to identify the correct SCSI bus cabling configuration for your unit.
	Problem was encountered with hardware added to a new configure-to-order system (where available).	You must complete the factory-installed operating system software installation before adding new hardware to the system. Be sure you are following the instructions provided in the <i>Factory-Installed Operating System Software Installation Guide</i> . Remove the new hardware and complete the software installation. Then, reinstall the new hardware.
 CAUTION: The HP System Erase Utility causes loss of all configuration information, as well as loss of existing data on all connected hard drives. Please read “HP System Erase Utility” and the associated warning in the <i>Servers Troubleshooting Guide</i> prior to performing this operation.		

Refer to the *Servers Troubleshooting Guide* for the following:

- Information you need to collect when diagnosing software problems and to provide when contacting support
- Instructions on how to upgrade your operating system and its drivers
- Information about available recovery options and advice on minimizing downtime

ROMPaq Disaster Recovery

A corrupted system ROM requires that you recreate the ROM BIOS by a process called disaster recovery. This operation can be accomplished only when the system is in disaster recovery (emergency repair boot) mode. When both system ROMs are corrupt, the system defaults into disaster recovery mode automatically and the server emits two extended beeps.

IMPORTANT: Prior to performing this operation, refer to the *Servers Troubleshooting Guide* for complete instructions on disaster recovery.

To perform ROMPaq disaster recovery:

1. Power down the server.
2. Set system maintenance switches 1, 4, 5, and 6 to the “on” position. For the location of these switches, refer to Chapter 4, “Connectors, LEDs, and Switches.”
3. Power up the server. After the system powers on, it repeatedly emits two long beeps.
4. Power down the server again. If necessary, perform a forced shutdown by pressing the power button for four seconds.
5. Set system maintenance switches 1, 4, 5, and 6 back to the default position (off).
6. Power up the system.
7. Insert a ROMPaq diskette with the latest system ROM that you have downloaded from the HP website:

www.hp.com/servers/proliant/manage

IMPORTANT: The ROMPaq will flash both sides of the redundant ROM. This process may take up to 10 minutes.

8. Wait until the server emits three rising beeps, indicating the completion of the ROM flash process.
9. Restart the server.

Other Information Resources

Refer to the following additional information for help.

Table 5-8: Troubleshooting Resources

Resource	Description
<i>Servers Troubleshooting Guide</i>	This is a resource for obtaining troubleshooting information that is beyond the scope of this document. It includes general hardware and software troubleshooting information for all HP ProLiant servers, a complete list of error messages along with explanations of probable causes, and a list of remedial measures. This guide resides on the Documentation CD that ships with the server. To be sure that you have the most up-to-date copy of the <i>Servers Troubleshooting Guide</i> document, visit the HP website: www.hp.com/servers/proliant/manage
Other online documentation	Product Bulletin Quickspecs OS Support Matrix

For additional information on warranties and service and support upgrades (CarePak services) visit the HP website:

www.hp.com/servers/proliant/manage

Specifications

This chapter provides specifications for the ProLiant ML530 Generation 2 server.

Table 6-1: System Unit Specifications

Feature	Units
Dimensions	
Height (without casters)	51.5 cm (20.3 in)
Depth (without bezel)	69.7 cm (27.5 in)
Width	32.6 cm (12.9 in)
Weight	100 lbs (45.4 kg) to 146 lbs (66.2 kg)
Input requirements	
Rated input voltage	100 to 127 VAC 200 to 240 VAC
Rated input frequency	47 to 63 Hz
Rated input current	10A for 100 to 127 VAC 4.8A for 200 to 240 VAC
Rated input power	1000W for 100 to 127 VAC 960W for 200 to 240 VAC
BTUs per hour	3415 BTU/hr 100 to 127 VAC 3015 BTU/hr 200 to 240 VAC
Power supply output	
Rated steady-state power	Rated steady-state power: 600 W
Maximum peak power	Maximum peak power: 600 W
Temperature range	
Operating	10° to 35°C (50° to 95°F)
Shipping	-30° to 60°C (-20° to 140°F)
Relative humidity (noncondensing)	
Operating	20% to 80%
Nonoperating	5% to 90%
Wet-bulb temperature	38.7°C (101.7°F)
Heat dissipation	2400 BTU/hr maximum

A

- access panel
 - airflow concerns 2-4
 - part number 1-3
 - removing 2-9
 - replacing 2-9
- ADU *See* Array Diagnostics Utility (ADU)
- Advanced Memory Protection *See also* memory
- airflow
 - access panel 2-4
 - drive cage 2-16
 - media bays 2-59
 - power supply bays 2-67
- aligning
 - memory boards 2-43
 - processor/heatsink assembly 2-33
- Array Diagnostics Utility (ADU)
 - access 3-2
 - description 3-2
- ASR-2 *See* Automatic Server Recovery-2 (ASR-2)
- assembly, processor/heatsink
 - aligning 2-33
 - removing 2-33
- Automatic Server Recovery-2 (ASR-2)
 - access 3-2
 - description 3-2

B

- backplane, PCI
 - part number 1-7
 - removing 2-47
 - replacing 2-50
- backplane, power
 - part number 1-5
 - removing 2-52
 - replacing 2-53
- backplane, SCSI
 - part number 1-5
 - removing 2-61
 - replacing 2-62

- backplane, two-bay drive cage, part number 1-9
- baffle, air
 - drive, removing 2-56
 - drive, replacing 2-56
 - processor, removing 2-29
 - processor, replacing 2-29

- battery
 - part number 1-8
 - recycling 2-27
 - removing 2-27
 - replacing 2-28
 - warnings 2-27

- bezels
 - front door, removing 2-7
 - front door, replacing 2-7
 - rack-mount, removing 2-8
 - rack-mount, replacing 2-8

- blanks
 - drive, removing 2-68
 - drive, replacing 2-68
 - power supply, removing 2-67
 - power supply, replacing 2-67
 - removable media, removing 2-69
 - removable media, replacing 2-69

- brackets
 - cable management arm *See* cable management
 - arm bracket
 - processor retention *See* processor retaining
 - bracket

- bus numbering, white paper 2-21
- buttons
 - Power On/Standby 4-6
 - rear unit identification (UID) 4-17

C

- cable management arm bracket
 - installing 2-24
 - removing 2-24
 - screws 2-24
- cables
 - CD-ROM drive 2-71
 - diskette 2-71
 - hard drive fans 2-70
 - SCSI backplane power 2-71

- system board power 2-70
 - CarePaq 5-12
 - casters
 - part number 1-3
 - removing 2-66
 - replacing 2-66
 - cautions *See also* warnings
 - battery disposal 2-27
 - battery replacement 2-27
 - BIOS settings 2-27
 - data loss 2-19, 5-9
 - fans must be operational 2-53
 - power supply blank 2-12
 - processor locking lever 2-33
 - proper airflow 2-67
 - removing hot-plug fans while powered up 2-12, 2-53
 - removing system tray 2-51
 - routing cables 2-70
 - System Erase Utility 5-9
 - CD-ROM drive
 - cables 2-71
 - connectors 4-2
 - part number 1-5
 - removing 2-57
 - replacing 2-57
 - CDs
 - Documentation CD 2-17
 - HP Management 3-3
 - HP SmartStart for Servers 2-1, 3-3
 - component-level repairs vii
 - configuring, memory 2-44
 - connectors
 - CD-ROM drive 4-2
 - CPU fans 4-2
 - diskette drive 4-2
 - DVD drive 4-2
 - I/O fans 4-2
 - IDE 4-2
 - keyboard/mouse 4-4
 - NIC 4-4
 - parallel 4-4
 - PCI backplane 4-2
 - power 4-2, 4-4
 - remote management 4-2
 - RJ-45, standard 4-4
 - SCSI 4-2
 - serial 4-4
 - USB 4-4
 - VHDCI SCSI, location 4-4
 - video, standard 4-4
 - country kit, part number 1-8
 - CPU fan basket adapter, part number 1-5
 - CPU fan connectors 4-2
 - creating support diskettes 3-4. *See also* SmartStart Diskette Builder utility
- ## D
- data cables, part number 1-8
 - data loss caution 5-9
 - detection order, expansion slots 2-21
 - Diagnostics utility
 - access 3-2
 - description 3-2
 - DIMM banks
 - locations 2-35
 - online spare configuration 2-39
 - populating 2-38
 - single-board mirrored memory 2-39
 - DIMM slots
 - latches 2-41
 - locations 2-35
 - DIMMs
 - installation requirements 2-38
 - installing 2-42
 - pairing 2-38
 - part numbers 1-7
 - removing 2-41
 - testing 2-44
 - types supported 2-38
 - disconnecting, power cords 2-3
 - Diskette Builder utility *See* SmartStart Diskette Builder utility
 - diskette drive
 - connector 4-2
 - part number 1-5
 - removing 2-58
 - replacing 2-60
 - Documentation CD 2-17
 - door, front bezel
 - part number 1-3
 - removing 2-7
 - replacing 2-7
 - drive activity LED 4-18
 - drive air baffle
 - part number 1-5
 - removing 2-56
 - replacing 2-56
 - drive blank
 - part number 1-3
 - removing 2-68
 - replacing 2-68
 - drive cage
 - airflow 2-16
 - removing 2-61
 - replacing 2-62
 - drive cage, two-bay
 - backplane, part number 1-9
 - fan kit, part number 1-9

drive fan cable and cable bracket
 part number 1-5
 removing 2-63
 replacing 2-63
 drive fan power cable bracket, part number 1-5
 drive fans
 part number 1-5
 removing 2-14
 replacing 2-14
 DVD drive
 connectors 4-2
 part number 1-8

E

ejector levers
 memory board 2-35, 2-40
 processor *See* processor locking lever
 electrostatic-sensitive parts
 avoid touching 2-1
 properly grounded 2-1
 storing 2-1
 transporting 2-1
 error messages, POST 5-8
 expansion board basket
 part number 1-8
 removing 2-46
 replacing 2-47
 expansion boards
 removing 2-18
 replacing 2-21
 expansion slots
 detection order 2-21
 determining activity status 4-12
 location 2-18, 4-4
 recommended population order 2-21
 white paper 2-21
 external health LED 4-6

F

fan basket
 part number 1-5
 removing 2-53
 replacing 2-54
 fan basket adapter with cable
 part number 1-5
 removing 2-54
 replacing 2-55

fans
 basket, removing 2-53
 basket, replacing 2-54
 connectors 4-2
 CPU and I/O, removing 2-12
 CPU and I/O, replacing 2-13
 drive, removing 2-14
 drive, replacing 2-14
 LEDs 4-15
 part numbers 1-5
 two-bay drive cage, part number 1-9
 fault status LED 4-18
 front bezel door
 part number 1-3
 removing 2-7
 replacing 2-7
 front panel LED assembly
 part number 1-8
 removing 2-64
 replacing 2-65
 front panel thumbscrews 2-5, 2-23
 front panel, LEDs *See also* LEDs

G

grounding viii
 grounding plug vii
 guidelines
 hard drives 2-15
 local occupational and health safety 2-2
 guides
 *Factory-Installed Operating System Software
 Installation Guide* 5-10
 *ProLiant ML530 Generation 2 Server Setup and
 Installation Guide* 3-2
 Servers Troubleshooting Guide 3-2

H

handles, part number 1-3
 hard drives
 part number 1-8
 removing 2-16
 replacing 2-16
 hazardous conditions, symbols on equipment 2-2
 help resources ix
 hood labels, part number 1-3
 hot-plug door
 closing 2-6
 latches 2-6
 opening 2-6
 hot-plug expansion board basket
 part number 1-8
 removing 2-46
 replacing 2-47
 hot-plug power supply *See* power supplies, hot-plug

- HP authorized reseller ix
- HP Diagnostics utility
 - access 3-2
 - description 3-2
- HP Integration Maintenance Utility 3-3
- HP Management CD 3-3
- HP SmartStart for Servers CD 2-1, 3-3
- HP Survey Utility
 - access 3-3
 - description 3-3

I

- I/O fan basket adapter, part number 1-5
- I/O fan connectors 4-2
- icons, symbols on equipment 2-2
- IDE devices, connectors 4-2
- illustrations
 - access panel, removing 2-9
 - backplane, removing 2-53
 - battery, removing 2-28
 - bezels, rack-mount, removing 2-8
 - cable routing, CD-ROM drive 2-71
 - cable routing, diskette drive 2-71
 - cable routing, hard drive fans 2-70
 - cable routing, system board power cables 2-70
 - casters, removing 2-66
 - CD-ROM drive, removing 2-57
 - diskette drive, removing 2-58
 - drive cage assembly, removing 2-62
 - expansion board, removing 2-20
 - fan baffle, removing 2-56
 - fan basket adapter with cable, removing 2-55
 - fans, CPU and I/O, removing 2-13
 - fans, drive fan cable and cable bracket, removing 2-63
 - fans, drive, removing 2-14
 - front panel LED assembly, removing 2-64
 - hard drives, blank, removing 2-68
 - hard drives, removing 2-16
 - hot-plug expansion board basket, removing 2-47, 2-50
 - hot-plug hard drive, removing 2-16
 - locking casters, removing 2-66
 - power backplane, removing 2-53
 - power supply blank, removing 2-67
 - power supply, removing 2-12
 - processor fan air baffle, removing 2-29
 - rack bezel, removing 2-8
 - removable media blank, removing 2-69
 - removable media device, removing 2-59
 - system tray, removing 2-51
- IML *See* Integrated Management Log (IML)
- Insight Manager
 - access 3-2
 - description 3-2

- installation problems
 - factory-installed operating systems 5-10
 - insufficient memory message 5-9
 - operating system problem 5-10
 - SmartStart errors 5-10
 - SmartStart failure 5-9
- installing
 - cable management arm bracket 2-24
 - DIMMs 2-42
 - memory boards 2-43
- Integrated Management Log (IML)
 - access 3-3
 - description 3-3
 - viewing 3-3
- Integration Maintenance Utility 3-3
- internal health LEDs 4-6

K

- keyboard
 - connector 4-4
 - part number 1-8

L

- labels, hood, part number 1-3
- labels, symbols on equipment 2-2
- latches
 - DIMM slots 2-41, 2-42
 - hot-plug door 2-6
 - memory boards 2-35, 2-40
- LEDs
 - drive activity 4-18
 - external health 4-6
 - fans, hot-plug 4-15
 - front panel 4-6
 - front unit identification 4-6
 - internal health 4-6
 - memory board 2-35, 4-8
 - NIC link/activity 4-6
 - overview 4-5
 - PCI-X 4-11, 4-12, 4-13
 - Power On/Standby 4-6
 - power supplies, hot-plug 4-14
 - rear unit identification (UID) 4-17
 - RJ-45 connector 4-16
- locking casters
 - part number 1-3
 - removing 2-66
 - replacing 2-66
- locking latches 4-4

locking levers, processor, location 2-32
locking switch, location 2-35

M

maintenance and service guide, part number 1-8

memory See also DIMMs

- banks 4-3
- configuring 2-44
- insufficient during install 5-9
- problem diagnosis 5-9

memory boards

- aligning 2-43
- ejector levers 2-35, 2-40
- installing 2-43
- LEDs 2-35, 4-8
- locking switch, location 2-35
- part number 1-7
- release latches 2-35, 2-40
- removing 2-40
- slots 4-3

mouse, connector 4-4

N

network interface controller (NIC)

- connector 4-4
- link/activity LED 4-6

non-hot-plug

- devices, removing 2-22
- PCI expansion board, removing 2-45

non-maskable interrupt (NMI) switch

- defined 4-23
- location 4-21

non-volatile RAM See NVRAM

normal power-up sequence 5-3

NVRAM

- clearing 5-8
- CMOS problem diagnosis 5-10
- problem diagnosis 5-8
- when to clear 5-8

O

online spare memory, installation requirements 2-39

online status LED 4-18

operating specifications 6-1

operating systems, installation problems 5-10

P

panel, access

- part number 1-3
- removing 2-9
- replacing 2-9

parallel connector 4-4

part number

- access panel 1-3
- backplane, PCI 1-7
- backplane, power 1-5
- backplane, SCSI 1-5
- backplane, two-bay drive cage 1-9
- battery 1-8
- casters 1-3
- CD-ROM drive 1-5
- country kit 1-8
- CPU fan 1-5
- CPU fan basket adapter 1-5
- data cables 1-8
- DIMMs 1-7
- diskette drive 1-5
- drive air baffle 1-5
- drive blank 1-3
- drive fan power cable bracket 1-5
- drive fans 1-5
- DVD drive 1-8
- expansion board basket 1-8
- expansion slot latch 1-7
- fan basket 1-5
- fan kit, two-bay drive cage 1-9
- front bezel door 1-3
- front bezel retainer 1-7
- front panel LED assembly 1-8
- handles, server extension 1-3
- hard drive 1-8
- I/O fan 1-5
- I/O fan basket adapter 1-5
- keyboard 1-8
- labels, hood 1-3
- maintenance and service guide 1-8
- memory board 1-7
- memory board guide 1-7
- ML530 cable kit 1-8
- PCI backplane 1-7
- PCI retaining clip 1-7
- power backplane 1-5
- power cables 1-7
- power supply 1-5
- power supply blank 1-3
- PPM 1-7
- processor air baffle 1-8
- processor retaining bracket 1-7
- processor/heatsink assembly 1-7
- rack bezel 1-3
- rack-mounting hardware 1-8
- removable media bay blank 1-3
- return kit 1-8
- SCSI backplane 1-5
- system board 1-7
- system tray 1-7
- tape drive 1-8

- Torx T-15 tool 1-8
 - tower cover 1-3
 - two-bay drive cage backplane 1-9
 - two-bay drive cage fan kit 1-9
 - two-button mouse 1-8
 - PCI backplane
 - connector 4-2
 - part number 1-7
 - removing 2-47
 - replacing 2-50
 - PCI-X buses
 - architecture 2-18
 - numbering 2-21
 - speeds 4-13
 - PCI-X expansion slots 2-18
 - PCI-X Hot Plug, expansion slot LED 4-12
 - PCI-X technology, performance balancing 2-20
 - PCI-X, LEDs 4-11, 4-12, 4-13
 - performance specifications 6-1
 - physical specifications 6-1
 - POST error messages 5-8
 - power
 - connectors 4-2, 4-4
 - LEDs 4-6
 - system board connectors 4-2
 - power backplane
 - part number 1-5
 - removing 2-52
 - replacing 2-53
 - power cables, part number 1-7
 - power cords, warning 2-3
 - Power On/Standby
 - button, location 2-22, 4-6
 - button, positions 2-22
 - LED 4-6
 - power supplies, hot-plug
 - bay locations 4-4
 - LEDs 4-14
 - part number 1-5
 - removing 2-11
 - replacing 2-12
 - power supply blank
 - caution 2-12
 - part number 1-3
 - removing 2-67
 - replacing 2-67
 - powering up, normal sequence 5-3
 - PPMs *See* processor power modules (PPMs)
 - processor
 - caution 2-33
 - processor air baffle
 - part number 1-8
 - removing 2-29
 - replacing 2-29
 - processor locking lever
 - lifting 2-32
 - location 2-32
 - processor power modules (PPMs)
 - LED 4-20
 - part number 1-7
 - removing 2-31
 - replacing 2-31
 - when to replace 5-8
 - processor retaining bracket
 - location 2-32
 - part number 1-7
 - thumbscrew 2-32
 - processor/heatsink assembly
 - aligning 2-33
 - part number 1-7
 - removing 2-33
 - ProLiant Essentials Foundation Pack 3-3
- ## R
- rack
 - extending the server 2-5
 - stabilization 2-2
 - warnings and cautions 2-2
 - weight 2-2
 - rack bezel
 - part number 1-3
 - removing 2-8
 - replacing 2-8
 - rack-mounting hardware, part number 1-8
 - RBSU *See* ROM-Based Setup Utility
 - rear unit identification LED and button 4-17
 - release latches
 - DIMM slots 2-41, 2-42
 - memory board 2-35, 2-40
 - Remote Insight Lights-Out Edition, slot 7
 - recommendation 2-18
 - remote management connectors 4-2
 - removable media blank
 - part number 1-3
 - removing 2-69
 - replacing 2-69
 - removable media device
 - removing 2-59
 - replacing 2-59
 - removal and replacement procedures, preparation 2-22

- removing
 - cable management arm bracket 2-24
 - DIMMs 2-41
 - memory boards 2-40
 - processor/heatsink assembly 2-33
 - requirements
 - general memory 2-38
 - local occupational and health safety 2-2
 - online spare memory 2-39
 - single-board mirrored memory 2-39
 - return kit, part number 1-8
 - RJ-45 connector
 - LEDs 4-16
 - location 4-4
 - ROM
 - BIOS problem diagnosis 5-10
 - problem diagnosis 5-10
 - ROM-Based Setup Utility (RBSU)
 - access 3-3
 - description 3-3
 - ROMPaq disaster recovery
 - description 5-11
 - procedure 5-11
 - ROMPaq Utility
 - access 3-4
 - description 3-4
- ## S
- screws
 - cable management arm 2-24
 - cable management arm bracket 2-24
 - SCSI backplane
 - removing 2-61
 - replacing 2-62
 - SCSI backplane, part number 1-5
 - SCSI connectors 4-2
 - SCSI hard drive blank *See* drive blank
 - SCSI hard drives *See* hard drives
 - serial connectors 4-4
 - serial number 2-74
 - server
 - extending from rack 2-5
 - warnings and cautions 2-3
 - weight 2-24
 - Server Documentation CD 2-17
 - server extension handles, part number 1-3
 - server power, removing 2-22
 - server rail-release latches, pressing 2-5
 - Servers Troubleshooting Guide* 3-2
 - single-board mirrored memory, installation requirements 2-39
 - slots *See* DIMM slots; expansion slots
 - SmartStart
 - diagnosing installation failure 5-9, 5-10
 - installation problems 5-9
 - memory problems 5-9
 - SmartStart Diskette Builder utility
 - access 3-4
 - description 3-4
 - SmartStart for Servers software
 - access 3-3
 - CD 3-3
 - description 3-3
 - specifications
 - operating 6-1
 - performance 6-1
 - physical 6-1
 - system unit 6-1
 - standby, effects 2-22
 - support diskettes 3-4. *See also* SmartStart Diskette Builder utility
 - Survey Utility
 - access 3-3
 - description 3-3
 - switches
 - locking, memory boards 2-35
 - NMI, defined 4-23
 - NMI, location 4-21
 - system board 4-21
 - system maintenance (SW4), defined 4-21
 - system maintenance (SW4), location 4-21
 - system maintenance (SW4), settings 4-21
 - symbols
 - on equipment 2-2
 - system board
 - part number 1-7
 - system tray, opening 2-10
 - system tray, removing 2-50
 - system tray, replacing 2-52
 - system board switches
 - locations 4-21
 - NMI 4-21, 4-23
 - system maintenance (SW4) 4-21
 - System Erase Utility
 - caution 5-9
 - uses 5-9
 - system maintenance switch (SW4) 4-21
 - system tray
 - locking latch 4-4
 - opening 2-10
 - part number 1-7
 - removing 2-50
 - replacing 2-52
 - system unit, specifications 6-1

T

tables

- Diskette and CD-ROM Cables 2-71
- System Unit Specifications 6-1
- tape drive, part number 1-8
- technician notes vii
- telephone numbers ix
- testing DIMMs 2-44
- thumbscrews
 - front panel 2-5, 2-23
 - processor retaining bracket 2-32
- tools
 - recommended 2-1
 - Torx T-15 4-4
- Torx T-15 tool
 - location 4-4
 - part number 1-8
- tower cover, part number 1-3
- troubleshooting
 - BIOS problems 5-10
 - CD-ROM problems 5-9
 - CMOS problems 5-10
 - configure-to-order system problems 5-10
 - disaster recovery 5-11
 - external health LED 5-6
 - factory-installed software problems 5-10
 - how to diagnose problems 5-10
 - installation problems 5-9, 5-10
 - internal health LED 5-7
 - memory problems 5-9
 - monitor information 5-8
 - new hardware added 5-10
 - NVRAM problems 5-8
 - problems after initial boot 5-9
 - resources 5-12
 - ROM problems 5-10
 - SmartStart problems 5-9, 5-10
 - startup problems 5-2, 5-10
 - steps to take 5-2, 5-10
 - system power LED 5-5, 5-6
 - video problems 5-8
- two-button mouse, part number 1-8

U

- unit identification (UID) LED and button 4-4, 4-17

- unit identification switches, LEDs 4-6
- USB devices, connectors 4-4
- utilities
 - Automatic Server Recovery-2 (ASR-2) 3-2
 - HP Diagnostics 3-2
 - HP Integration Maintenance 3-3
 - HP Survey Utility 3-3
 - Insight Manager 3-2
 - RBSU 3-3
 - ROMPaq 3-4
 - SmartStart Diskette Builder 3-4

V

- ventilation clearances viii
- video
 - connectors 4-4
 - problem diagnosis 5-8

W

- warnings
 - allow cooling 2-7
 - battery 2-27
 - electrical shock 2-2
 - equipment damage 2-24
 - hot surfaces 2-2
 - personal injury 2-24
 - personal injury or damage to the equipment 2-53
 - rack weight 2-2
- warranty viii
- websites
 - CarePak 5-12
 - warranty 5-12
- weight, server 2-24
- white paper
 - Advanced Memory Protection 2-39
 - PCI Bus Numbering 2-21
- wrist strap, using 2-1